

INSTRUCTION MANUAL

FOR USE AND

MAINTENANCE

ORIGINAL INSTRUCTIONS

Compressor model: 4DA300-110 kW SKID

Serial number: 2005PS001-2005PS002-2005PS003-2005PS004-2005PS005

Manufacturer:

Fornovo Gas S.r.l.
Via P.M. Curie 14
42122 Reggio Emilia - Italy
Phone +39 0522 557675
Fax +39 0522 550112
www.fornovogas.it

Technical Support:

Fornovo Gas S.r.l.
Via Ponticelli 5
43029 Traversetolo (Parma) - Italy
Phone +39 0521 842506
Fax +39 0522 550112
E-mail: service@fornovogas.it

INDEX

1	GENERAL REMARKS	4
1.1	Warnings	4
1.2	Notes for reading this manual.....	13
2	INSTRUCTIONS FOR ASSEMBLY, INSTALLATION AND PREPARATION FOR OPERATION	14
2.1	Maneuvering	14
2.2	Locating the compressor	15
2.3	Process gas - Instrument air - Electrical connections	15
2.3.1	Process gas.....	15
2.3.2	Instrument air	18
2.3.3	Electrical connections	18
2.3.4	Vent gas.....	18
2.4	Cooling circuit	19
2.4.1	Coolant manoeuvring.....	19
2.4.2	Coolant fluid.....	19
2.5	Oil circuit	21
3	COMMISSIONING.....	22
3.1	Compressor functional characteristics	22
3.1.1	Process gas operation limits and nominal values	22
3.1.2	Environmental temperature operation limits	22
3.2	Safety devices.....	23
3.3	Machine use.....	24
3.3.1	Starting for the first time	25
3.3.2	Daily functioning	25
3.3.3	Daily functioning during Winter Period	26
3.3.4	If it's foreseen an inactivity of the compressor for over one week.....	26
3.3.5	Emergency stop	26
3.3.6	In case of alarms.....	27
3.3.7	Warnings.....	27
4	LOW VOLTAGE SWITCHBOARD	28
4.1	Lifting and transport.....	28
4.2	Positioning	28
4.3	Preliminary checks.....	29
4.4	Maintenance	31
4.4.1	Visual control of internal dust backlog (every 6 months).....	31
4.4.2	Visual check for oxidation of start connections with mechanical bolt clenching between copper bars and cables endings (every 12 months)	31
4.4.3	Visual check of start connections between fixed and removable parts of sectional interrupters (every 12 months)	32
4.4.4	Check the bolt connections are tight (every 12 months).....	32
4.4.5	Check the auxiliary connections (every 12 months)	32

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

4.4.6	Check the protection fuses for the power supply to the auxiliary services and voltmeter measuring circuits (every 6 months).....	33
4.4.7	Check the protection relay of the starting line (every 12 months)	33
4.4.8	Check the connections of the grounding system (every 12 months)....	33
4.5	Use	34
4.5.1	Preamble.....	34
4.5.2	Closing interrupters	34
4.6	First start up	34
5	MAINTENANCE.....	37
5.1	Ordinary Controls	37
5.1.1	Daily jobs:.....	37
5.1.2	Weekly jobs:	37
5.1.3	Monthly jobs:	38
5.1.4	Annual jobs:.....	38
5.2	Electric Motor	39
5.3	Drainages	40
5.3.1	Draining liquids from moisture wiper.....	40
5.4	Removing and refitting pumping elements	41
5.5	Ordering spare parts	41
5.6	Replace oil filter cartridge.....	42
6	WARNING TO USERS	43
6.1	DPI to be used during the assembly and disassembly pumping elements...	44
6.2	DPI to be used during the oil filling.....	44
7	DIRECTIONS ABOUT THE INCORRECT USING REASONABLY FORESEEABLE	45
8	ANNEXES	46

FIGURES INDEX

Fig. 1	Compressor's skid.....	14
Fig. 2	Inlet/outlet gas connection	16
Fig. 18	Blowdown	17
Fig. 3	Control panel.....	24
Fig. 4	Power switch.....	24

TABLES INDEX

Tab. 1	Antifreeze percentage.....	19
--------	----------------------------	----

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

1 GENERAL REMARKS

1.1 Warnings

1) This compressor has been designed and built in compliance with the following applicable EU Directives:

06/42	Machinery (MSD)
97/23	Pressure Equipment (PED)
EMC 2004/108/CE	Electro-Magnetic Compatibility (EMC)
94/9	Potentially Explosive Atmospheres (ATEX)

The compressor is suitable for use in Zone 2 as defined by EN60079-10.

Compliance with any further requisites for installation operation in the destination country is the responsibility of the importer and/or user.

- 1) This manual is intended for operators and skilled personnel and provides instructions about procedures and operations aimed at ensuring correct and functional use of the plant concerned.
- 2) Read this manual completely before commissioning the compressor. The manual must be kept intact near the compressor, so that all personnel may easily consult it. This manual is an integral part of the machine itself and must be kept updated with any amendments or addenda issued by the manufacturer.
- 3) FORNOVOGAS reserves the right to perform possible modifications to supplied goods in any form and at any moment, as we constantly work towards further improvement of all machine types and models.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

- 4) It is not possible therefore to claim rights on the basis of data, pictures and descriptions provided by this manual.
- 5) All operations described in this handbook must be carried out by a trained and qualified staff. Every operation described herein must be performed by the operator considered most suitable for the tasks to be carried out.
- 6) Tests, drawings and standards issued by this manual are based on the information available at the time of printing.
- 7) Reprinting, reproduction and translation, even if partial, and under any form, is forbidden without written permission from FORNOVOGAS.
- 8) All copyrights are reserved by FORNOVOGAS, with conditions of modifications.
- 9) The conditions of use for the machine and its auxiliaries are explained through this manual. Using the machine in different conditions of pressure, temperature, load, speed, can create conditions of damage to the machine and/or to the operators.
- 10) The functioning of the machine in such conditions is to be considered incorrect use of the machine, as is its operation after having cut out or removed any safeguarding device.
- 11) The properties of the treated gas must have characteristics in order to be assumed as "DRY GAS". The presence of liquids in the treated gas can generate conditions of damage to the machine and erosion of its inner parts.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

- 12) The composition of gases treated by FORNOVOGAS' compressor, meaning process and other gases inside the machine, shall be free of explosives mixtures in all the operating conditions.
- 13) Modifications made in the machine and its control system, without the prior authorization of FORNOVOGAS, can determine hazardous situations for personnel and/or the machine. FORNOVOGAS cannot be held liable for any consequences deriving from incorrect or non-intended use of the machine and its auxiliaries.
- 14) The compressor must be installed in an adequately lit area, so that its on-board instrumentation is clearly legible.
- 15) Leave a free space of at least 500 mm all around the machine to facilitate maintenance.
- 16) Before starting any maintenance work on the compressor, disconnect the electric power and process gas connections and vent off any pressure in the machine. During maintenance, hang a signboard on the electrical board in a clearly visible location with the warning: "KEEP OFF, MAINTENANCE IN PROGRESS".
- 17) Do not remove the fixed protective casings and remember that when the operating cycle is in progress, the compressor may start up without warning.
- 18) Never tamper with or remove any of the safety components.
- 19) Always verify both, the operating characteristics and the safety devices before starting the compressor. Any damage to persons or things that might result from non-specified or in any case non-reasonably foreseeable operating

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

conditions, or from procedures, inadequate maintenance or the effects of corrosion, erosion, encrustation or gradual deterioration, will be under the customer's responsibility and at his expense.

- 20) It is prohibited to use the compressor for compressing different types of gas or for operating in an atmosphere other than that of design. The operating parameters are established during the project and cannot be changed for any reason without the intervention of FORNOVOGAS engineers.
- 21) Failure to observe safety regulations and/or the removal or modification of safeguards will nullify the manufacturer's guarantee and make the user fully liable.
- 22) The zone surrounding the compressor or acoustic hood (when present) is a danger zone. Limit presences in this zone to the minimum indispensable. Provide adequate supervision to prevent access to non-authorized persons.
- 23) Any work on the machines and the auxiliary equipment must be carried out by operators suitably informed of the activities they are to carry out.
- 24) Do not put the compressor and its auxiliaries in service for the first time before all operators have received adequate training in safety instructions, devices and procedures.
- 25) Replacing parts with non-original spare parts not only nullifies the warranty but can also create dangerous situations. The manufacturer does not acknowledge any responsibility for possible damage to persons and/or things deriving from the utilization of non-original spare parts.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

- 26) During operation, all parts of the equipment must be in perfect condition; the equipment must not be put in service if any defects or anomalies have been observed.
- 27) In general, operators must utilize the personal protection devices suitable to the dangers present in the zones to which they accede and to the operations to be carried out. Identification of the specific personal protection devices is the responsibility of the plant manager, also on the basis of the information given in this manual. The operator's clothing must be adequate to the hazards present, and in particular must be such as to avoid any danger of being caught in the machinery.
- 28) Given the type of operation of the machine and the type of environment in which it operates (presence of gas, high pressures, etc.) it is extremely risky for personnel to carry out operations not specified in this manual (even with the machine switched off). For such operations it is always necessary to consult the assistance service of FORNOVOGAS.
- 29) Before working on the compressor or on the lines for maintenance procedures, put the machine and its auxiliaries or the line in safe conditions by isolating it from any source of external power (electric, pneumatic, hydraulic power supply, etc.) and discharging any sources of internal power (such as springs, pressure vessels, capacitors, etc.). suitable block external sources of power so that they cannot be accidentally reactivated while working. A procedure prepared by the plant manager must be used.
- 30) Only operators authorized by the plant manager can carry out command and adjustment operations on the compressor and its auxiliaries with the machines stopped. This is prohibited during normal operation. Any adjustment and control operations for which it is indispensable to have the compressor and its

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

auxiliaries running, must be reduced to a minimum and previously authorized by the plant manager.

31) It is prohibited to make changes in the operating parameters of the equipment or the calibration of the instruments and fixtures: this could lead to highly dangerous situations.

32) All control and safety devices must be checked, calibrated and tested at regular intervals.

33) Do not cut out nor remove the safety devices and guards installed on the equipment.

34) It is prohibited to start the equipment until all of the required guards have been installed. Furthermore, it is prohibited to remove them during operation.

35) It is prohibited to use self-constructed equipment (supports, brackets, fixtures, etc.), which has not been explicitly authorized by the technical department of FORNOVOGAS.

36) In the compressor and in some auxiliary systems (lube oil, seal oil, seal gas, cooling water) are fluids which are hot (or cold) and /or under pressure. Special caution must be adopted in operating bleed and vent valves on the systems in question. Prior to beginning any maintenance procedure that involves disassembly, ensure that the internal fluid has been properly cooled and that it is not under pressure.

37) Immediately clean any oil present and resolve the cause of such immediately, also to avoid the risk of slipping.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

- 38) In the presence of unbalanced loads (such as for example couplings or other accessories) use additional cables to prevent overturning during hoisting. Failure to observe these precautions can cause severe harm to persons. Hoisting and handling operations must be carried out exclusively by specially trained personnel.
- 39) Maintenance operations on electrical equipment must be carried out by expert, authorized personnel. Note that in circuits, where capacitors are installed, the voltage may remain present for a certain time even after the power supply has been cut off.
- 40) Inside electric panels and in the vicinity of electrical devices mounted on the machines and its auxiliaries, dangerous voltages are present. Do not remove the guards before having first put the equipment in safe conditions. Remount the guards prior to energizing the equipment again.
- 41) Never work alone on any electrical equipment. Ensure that personnel assigned to this work are aware of emergency first aid procedures in case of electric shock.
- 42) Do not climb on or use as rests electric ducts, junction boxes or similar.
- 43) Always install ground leads for the equipment as specified by the design. Do not remove these connections for any reason.
- 44) Do not use water to extinguish fires on live electrical equipment. The fire extinguishers to be utilized must be appropriate to the equipment and to the type of fire.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

- 45) Take maximum care to avoid impact while handling the machine and its parts.
- 46) Prior to put the machine in service, ensure that the covers on inlets, discharges and vents have all been removed and that they remain unobstructed. Carefully observe all of the indications on the monitor and the instrumentation prior to start-up and during operation. The speed of the machine and the pressure and temperature measurements are the best indicators of correct operation of the machine.
- 47) In case of stopping for malfunction, do not attempt another start before the cause has been found and corrected.
- 48) Cover for protection all of the ducts opened during maintenance to prevent the entry of extraneous materials into the systems; avoid to use insulating tape.
- 49) Avoid bending cables. Repeated bending of cables could cause them to break.
- 50) Ensure that check valves and control valves and control valves are installed according to the correct direction of flow.
- 51) Any damage caused by a period of idleness during which the product has not been put in maintenance conditions, in order to ensure its perfect preservation, will be at the expense of the customer.
- 52) During the stages of installation and maintenance on the compressor and its auxiliaries, hazards relevant to the specific activity carried out are present.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

- 53) Remember that even if the machine is not running many hazards are still present like:
- gas at high pressures in the process and auxiliary systems
 - high voltage
 - possible hot surfaces
 - slippery surfaces around the machine and its auxiliaries
 - dangerous gas
- 54) External hazardous points created by other equipment not included in the supply should be taken in consideration by the station planner in order to respect and not invalidate the "safe areas" in which the components should be installed.
- 55) Electrical motors may be supplied through frequency converters (VFD): people who use electro-medical devices must keep at a safe distance.
- 56) The user shall avoid operating conditions which may cause pressure and temperature limits to be exceeded. Danger of catastrophic failure, injuries or death!
- 57) Equipment transportation must be accomplished accordingly to what is stated in the manual: danger to equipment integrity and damage to people/things.
- 58) User is responsible for connections (fluid and electrical) completion: connections dimension and rating must be respected in order to avoid explosions, fires, injuries or death!
- 59) User is responsible for the correct set up of suitable fire fighting procedure and gas detection systems in the equipment installation area. Danger of injuries/death.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

- 60) Accidental contact with equipment surfaces may cause serious injuries.
- 61) User is responsible for the correct design and manufacturing of a suitable vent system to convey vent gas to a safe area: if vent gas is not properly conveyed, risk of fire, injuries or death is present.
- 62) If not otherwise specified, the equipment is not designed to withstand external loads, with the exception of a max 5 meters unsupported tube length (of the same dimension of the connection considered) and a max snow load of 10 cm. Risk of catastrophic failure, injuries or death!
- 63) User is responsible for correct equipment earthing: risk of sparks, fire, explosions!
- 64) User shall periodically check equipment external surfaces condition, especially in relation to corrosion: corrosion on pressure equipment surfaces may lead to leakages and fires! User shall periodically clean the equipment.

1.2 Notes for reading this manual

We remind you that the name of the Manufacturer, the Technical Assistance contact details and the serial number of the compressor are indicated on the first page of this manual.

The term skid shall mean all components mounted on or supported by the compressor chassis, including the electric motor, the compressor body, the gas-water heat exchangers, etc.


All these components are identified in the photographic annexed to this manual, in the P&ID and in the exploded diagrams.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

2 INSTRUCTIONS FOR ASSEMBLY, INSTALLATION AND PREPARATION FOR OPERATION

2.1 Maneuvering

After removing from it's packing, the compressor may be maneuvered with fork lift equipment, using at least 2 meters long forks, inserted between the chassis and the ground. Check the skid's footprint or the position of the feet to make sure to not damage them during forks inserting for manoeuvring operations.

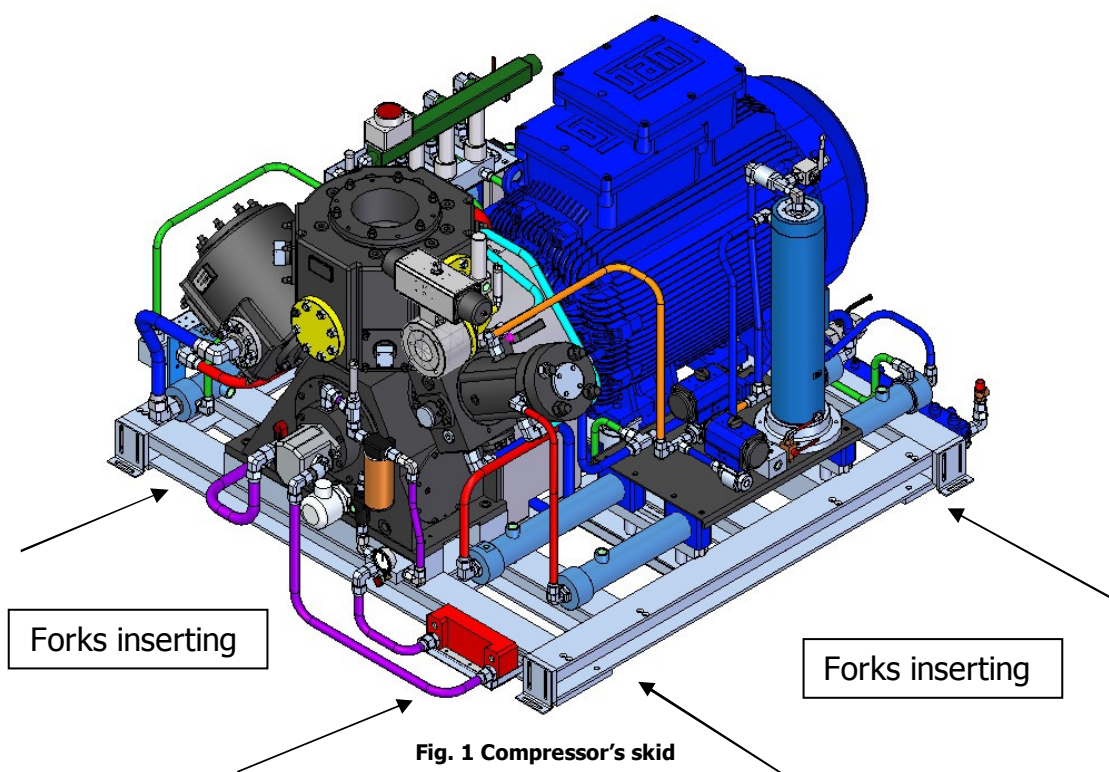

The center of gravity is located approximately between the electric motor and the compressor body, under the flywheel.

**Maneuver the compressor with extreme caution,
avoiding brusque movements or knocks.**

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

2.2 Locating the compressor

The compressor must be located on an appropriate platform that must be 1m larger than the skid dimensions (see annexes PL12000073 and AU90012X).

For the overall dimensions of the skid see layout skid AS10001779 annexed.

See BD00000625 annexed for the fixing point and footprint.

2.3 Process gas - Instrument air - Electrical connections

2.3.1 Process gas

Methane based Natural Gas, max CO₂ 3% by vol., max H₂S 5ppm, no liquid particulate.

The gas dew point must be lower than the minimum air temperature.

Fit a 3-micron particulate filter of a reputable brand, upstream of the compressor.

In the supply is already included a suitable filtration kit to be installed in the suction line of the compressor.

It is formed by a particulate filter with relative flanges and a manually operated valve.

This group must be installed, accordingly to P&ID SG15000143 (annexes), in the compressor suction line.

If a dryer is installed, a 1-micron filter must be used instead (unless already installed on the compressor).

We suggest to install also one manually operated valve at the compressor outlet, outside the skid unit, to allow easy removal or bypass during maintenance.

Drain the gas line thoroughly before connecting to the compressor to remove any liquid residue from hydraulic testing

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

See P&ID gas skid SG15000143 for connection references.

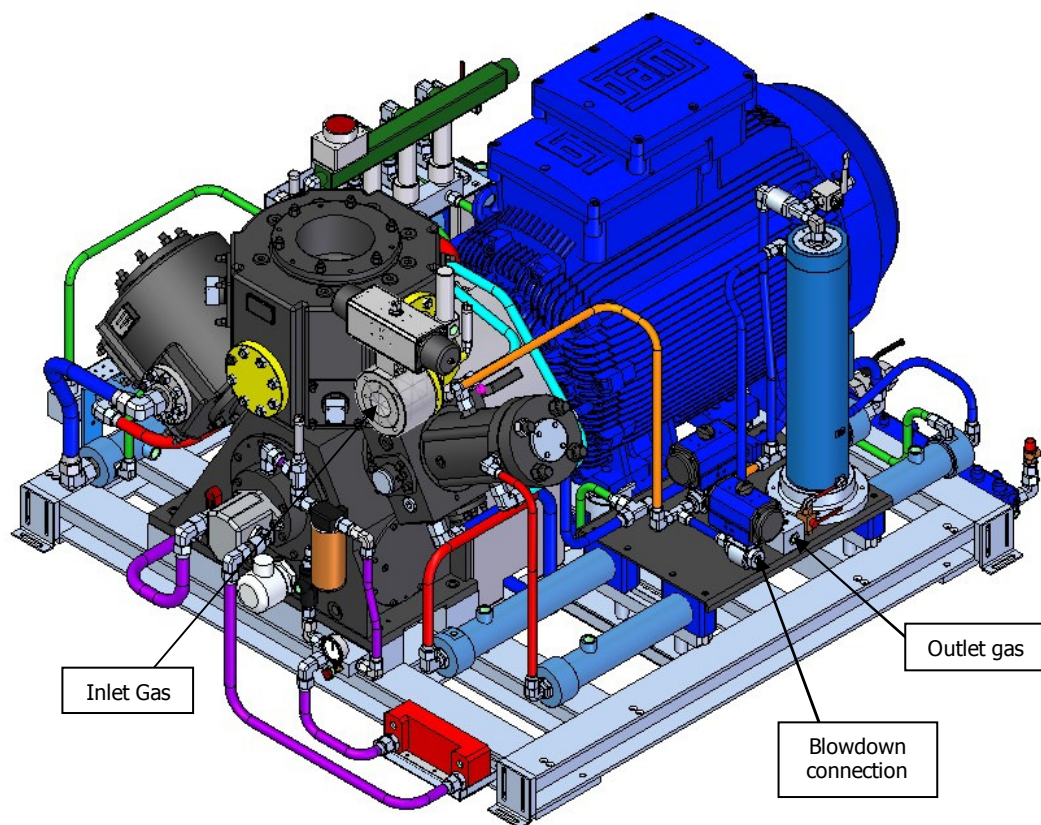


Fig. 2 Inlet/outlet gas connection

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

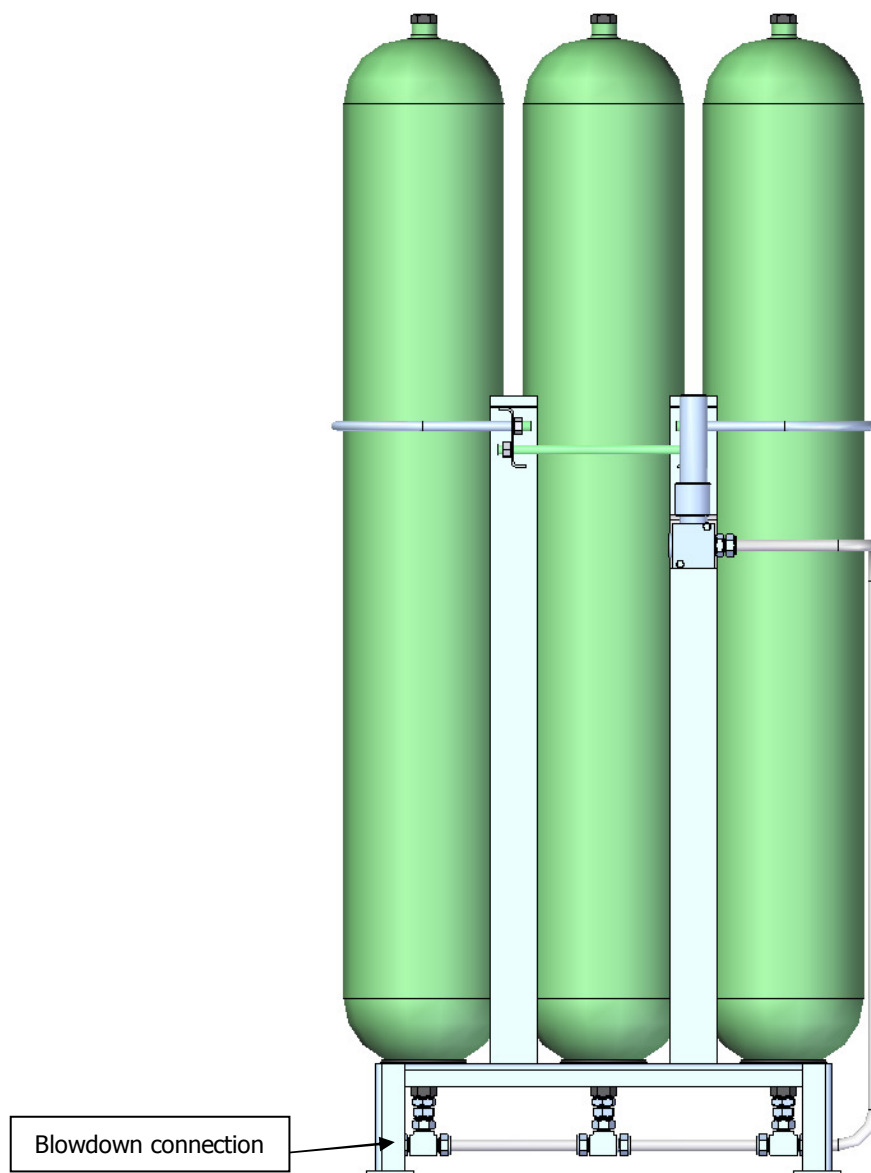


Fig. 3 Blowdown

**FAILING TO COMPLY WITH THE REQUISITES FOR THE PROCESS
GAS MAY RESULT IN SERIOUS DAMAGE TO THE COMPRESSOR**

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

2.3.2 Instrument air

Dehydrated, filtered atmospheric air. Normal supply pressure 6-8 bar(g).

Connect the solenoid valves (mounted on pneumatic valves) in the electrical board using 6x1 (external diam. x internal diam. in mm) Carbon Steel tubing.

See also P&ID no. SG15000143 and layout AS10001779 for connection references.

2.3.3 Electrical connections

For all electrical connections and wiring between the board and skid unit (electrical junction boxes), see the annexed electrical diagram, SE15000085.

2.3.4 Vent gas

Low-pressure gas recovery from compressor and safety valves discharges are collected to a vent pipe on board the skid

For any connection refer to P&ID in annexes SG15000143 and layout skid AS10001779.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

2.4 Cooling circuit

2.4.1 Coolant manoeuvring

Before to proceed with the movement to ensure that the Aircooler is completely disconnected and that the method used is appropriate in accordance with the size and weight to be moved.

For dimensions and weights see the layout attached.

2.4.2 Coolant fluid

Demineralized water and antifreeze liquid* in order to avoid solution freezing at minimum ambient temperature.

See layout attached to the required amount of liquid.

Liquid level in the expansion tank shall be kept at tank half height.

Indicatively, antifreeze percentage are as per following table:

Tab. 1 Antifreeze percentage

%vol. di antigelo	Temperatura minima °C
35	-20
50	-40

* As antifreeze liquid, use the product "Ferrogel Green" by ICL Water Solutions, equipped with corrosion inhibitors. Alternatively, use an equivalent product (equipped with corrosion inhibitors) of primary manufacturer.

In addition to antifreeze liquid, use also a biocidal product, like "Ferrocid 8580" by ICL Water Solutions (40 g every 1 m3 of cooling liquid) or, alternatively, an equivalent product of a primary manufacturer.

To protect effectively against corrosion, it is strongly suggested to keep cooling liquid pH between 7 and 9: if needed, increase pH by using the product "Ferrodo 211" by ICL Water Solutions or an equivalent product of primary manufacturer.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

ATTENTION: Fornovogas does not bear any responsibility for corrosion damages caused by a cooling liquid not whitstanding the above requisites.

NOTES ON WATER CIRCUIT FILLING

Before starting the compressor, it is necessary to remove all the air presents in the circuit itself.

Start water pump manually and let the air go out to atmosphere through the apposite valve usually located in the expansion volume of the water circuit.

Expansion volume must be placed above the highest point of water circuit, to have all the circuit pressurized even when the pump doesn't run.

Special procedures are applicable for the disposal of coolant containing ethylene glycol. See procedures of the country where the machine is installed.

NOTE: for more information on the Aircooler see the annex ST08000161

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

VERY IMPORTANT!!!!

1. **Cooling water circuit shutoff valves (skid mounted, aircooler mounted or others) shall be kept open (locked) in every operating conditions. FAILURE TO DO SO MAY RESULT IN COOLING CIRCUIT OVERPRESSURE AND POTENTIAL EXPLOSIONS DUE TO AIRCOOLER EXPANSION TANK NO LONGER CONNECTED TO COOLING CIRCUIT. It is also necessary to check that expansion tank atmospheric vent is free. If it is equipped with safety valve, it is necessary to check its proper functioning once a year.**
2. **Prior to perform any kind of maintenance on cooling water circuit (except cooling water replenishment), it is necessary to shutoff inlet and outlet gas valves (or storage shutoff valves if present) and blowdown any gas contained between them through relevant skid mounted manual blowdown valves. These valves shall be kept open during the entire maintenance operation.**
3. **The same operations described in point 2 above must be accomplished also if a cooling water leakage is detected in any point of the circuit, or when an alarm related to water circuit (low pressure, high pressure, water pump thermic relay, etc.) is noted on the operator panel. In both situation the plant shall be put out of schedule as described in point 2.**

2.5 Oil circuit

For the oil circuit see the annexed compressor manual ST14000015.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

3 COMMISSIONING

3.1 Compressor functional characteristics

The compressor is designed to compress methane-based natural gas from intake pressure, within the limits specified below, to the filling pressure.

3.1.1 Process gas operation limits and nominal values

In the annexed "compressor datasheet" ST15000116 are reported other functional parameters.

Lubrication circuit pressure: 3-6 barg (read from PI301 or PT301)

Coolant circuit pressure: 1.5-2.5 barg (read from PI401 or PT401)

Instrument air pressure: 7-10 barg (read from PT201)

3.1.2 Environmental temperature operation limits

Compressor: min -20°C max +40 °C

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

3.2 Safety devices

In the annexed "Cause & Effect chart" ST15000126 is reported a list of electric safety devices (alarms), and their maximum and minimum values (together with *never-exceed* values).

If one of operating conditions is not verified, relative alarm **MUST** trigger the machine emergency stop.

VERY IMPORTANT!!!!

Do not alter the calibration settings of the safety valves (mechanical safety devices), or tamper with, remove or bypass the valves themselves

VERY IMPORTANT!!!!

Do not alter the calibration settings of the electric safety devices, or tamper with, remove or bypass the devices themselves

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

3.3 Machine use

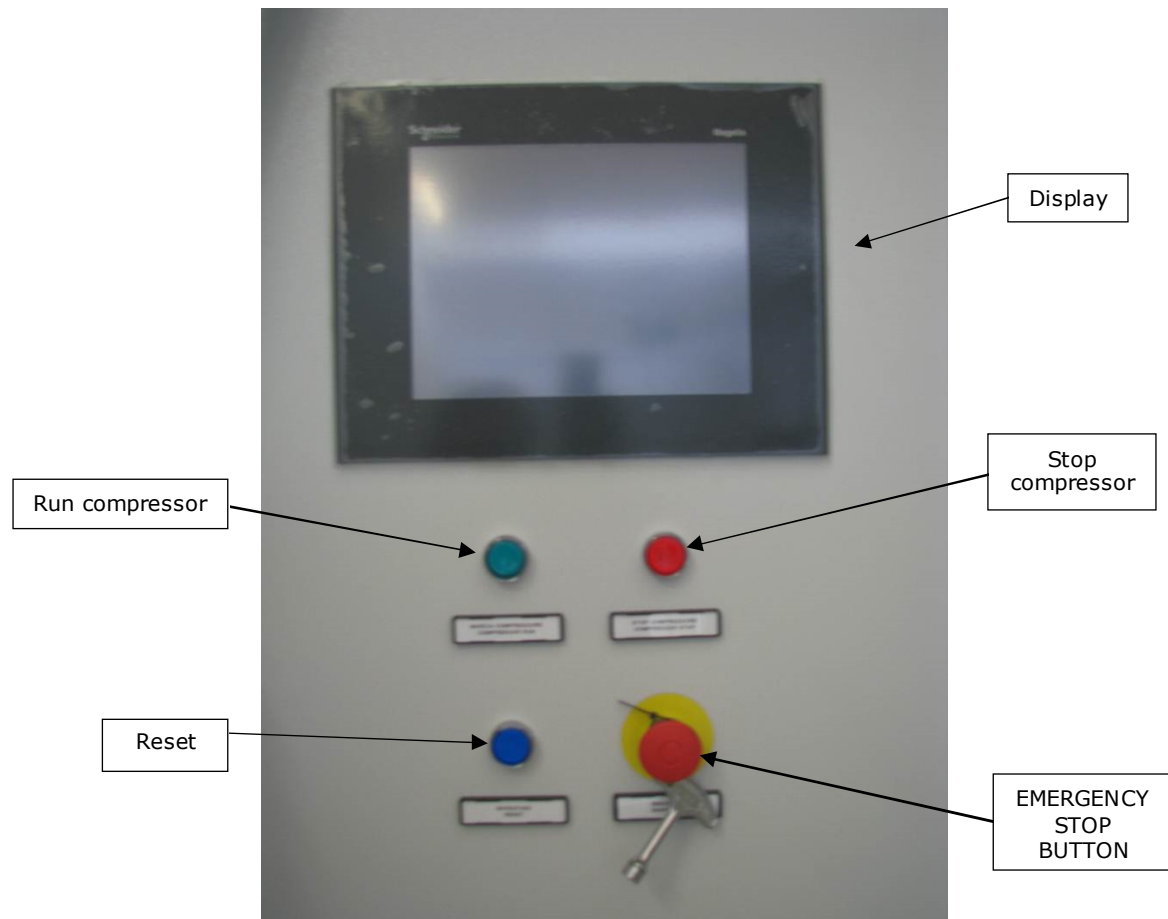


Fig. 4 Control panel

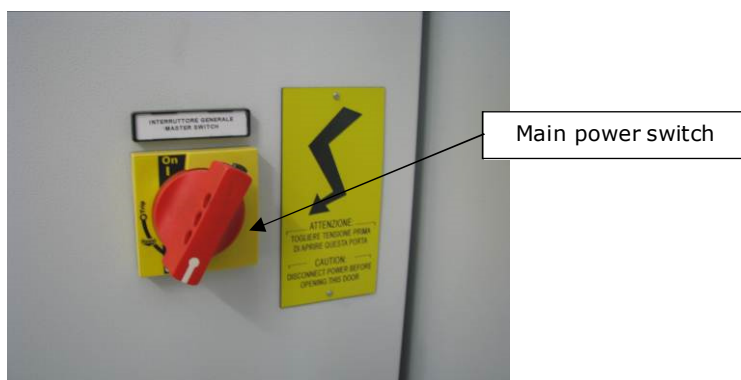


Fig. 5 Power switch

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

3.3.1 Starting for the first time

Before starting for the first time, check that all instructions given in the chapter "Installation" has been followed correctly. In particular, remember to:

- 1) drain the intake line – there must be no residual liquid particulate left over from hydraulic testing;
- 2) read this manual and its annexes completely;
- 3) clearly identify the location of the emergency buttons;

3.3.2 Daily functioning

Daily starting (cycle switch on)

1. turn the key in the set command to "ON";
2. make sure the air compressor is switched on; if not, switch it on and wait till the air pressure reaches the set pressure before proceeding with the next step;
3. push the "Start Compressor" button for at least 3 seconds. The siren, while pushing the button, indicates the start of the compressor;

The electric motor starts and activates the compressor body through a joint, as soon as the stock pressure lowers, due to the refueling.

NOTE: To protect the transmission of electric motor / compressor body there is a housing.

Daily stop:

1. push the "Stop Compressor" button;
2. turn the key in the set command to "OFF";

During the regular daily functionality, it is recommended to not switch off the power panel, but to leave it always powered, to prevent the formation of condense.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

3.3.3 Daily functioning during Winter Period

For "Winter Period" is meant, when the minimum night temperature is expected to fall under 0°C.

In that case, it is recommended to let the compressor switched on, to keep the thermal protections active.

3.3.4 If it's foreseen an inactivity of the compressor for over one week

Stop sequence:

1. push the "Stop Compressor" button;
2. turn the key in the set command to "OFF";
3. turn the main power switch to position "OFF"

Start sequence:

1. turn the key in the main power switch to position "1"
2. the siren starts beeping, push the "Switch Off Siren"
3. push the "Reset alarms"
4. turn the key in the "Set Command" to "ON"
5. make sure the air compressor is switched on; if not, switch it on and wait till the air pressure reaches the set pressure before proceeding with the next step;
6. push the "Run Compressor" button for at least 3 seconds. The siren, while pushing the button, indicates the start of the compressor;

The compressor will start automatically, as soon as the stock pressure lowers, due to the refueling.

3.3.5 Emergency stop

The machine is fitted with at least two emergency buttons, on board the skid unit and another one on electric board. Pressing these buttons immediately cut off power to the compressor and set it to safety mode.

The compressor automatically performs an emergency stop in the event of an alarm.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

3.3.6 In case of alarms

In the case that one of the set limit values should be exceeded:

1. the compressor stops in safe mode;
2. the siren beeps for 5 minutes;
3. the control light "Compressor Blocked" turns on;

Consequently:

1. push the "Switch Off Siren" button;
2. LOOK ON THE DISPLAY THE MARKED ALARM MESSAGE;
3. resolve the cause of the alarm;
4. press the "Reset Alarms" button;
5. push the "Run Compressor" button for at least 3 seconds. The siren, while pushing the button, indicates the start of the compressor;

In case that the Fornovo Gas technical service should be called, which numbers are on the first page of this manual, you must COMMUNICATE THE SHOWN ALARM MESSAGE ON THE DISPLAY.

The compressor could not be reset until the cause of the alarm has not been removed.

3.3.7 Warnings

For a correctly use would be recommended, in agreement with the FornovoGas Srl, a training, in our office, on the operation of the machine in all its aspects;

In addition, according to the normative in force on safety at work, the operator is required to play a fire-fighting training.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

4 LOW VOLTAGE SWITCHBOARD

4.1 Lifting and transport

For lifting and transport of the Low Level Switchboard (LVS) use the predisposed anchor points. There are special eyebolts 16MA on the upper side of the main structure. To guarantee the operators working safety, before moving the LVS, make sure that the lifting device is able to carry at least 1,6 times the estimated weight. Once loaded on the transporting vehicle, fix it and protect outstanding parts properly.

Every of Fornovo Gas' LVS column has been inspected before delivering, according to CEI EN 60439-1(IEC 439-1) standards.

The Fornovo Gas switchboards are protected by a plastic wrap and are eventually fixed on a wooden pallet.

If the consigned switchboard is not going to be installed immediately, it must be stored in a clean, dry place and sheltered from dust without removing the plastic wrap.

Do not attach self sticking labels, glue plastic substances or similar onto the varnished surfaces, because if they should be left on them for too long, they could damage the varnish.

4.2 Positioning

In working conditions the L.V.S. must be positioned on a perfectly level horizontal plane. If the surface on the floor should present any unevenness, this must be eliminated. If shims are used to level the switchboard, they should be placed matching the vertical carrying columns.

Usually it's enough to fix the switchboard directly to the ground, but if in the surrounding places should be present machines, which could transmit vibrations to the ground, and so to the LVS, this must be placed on anti-vibrating gum pads.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

4.3 Preliminary checks

Every part of the entire unit was completed and has been checked in the factory to ensure that operation can be started immediately. However before turning on the electrical power supply it is important to check that no damage has occurred during transport. To do this, carry out the following procedure:

- Perform a careful visual inspection to ensure that there is no oxidation on the bars, neither any sign of condense. If any traces of humidity are found, they must be removed, especially around the isolators bar support, using a completely dry jet of hot air (max. 80 °C).

Oxidation traces must also be removed accurately. This for see chapter 4.4 Maintenance on page 31.

- Check that the bolts are tight. This must be done for all bolts, whether they are part of the electrical or of the mechanical connections. In particular check that the connections are tight on the earth bus bar.
- Accurately reassemble all the segregation sheet metal of the bars spaces.
- Carry out the same checks as above also on terminal boards where the auxiliary connections are foreseen
- On the front part of the control panel check that the doors open correctly and that the handles with corresponding lock and key are working properly. If necessary, lubricate the revolving plugs on the lock with a drop of oil, try the locks a few times and remove any excess oil with a clean cloth
- Verify the extraction of the sectional switches.

The switches must be extracted completely and a visual check has to be performed to ensure that no damage has occurred during the transport on fixed and mobile parts. Broken parts must be immediately replaced. Also check that extraction and inserting of the switches happens easily and so for their translation on the bars. If translation should result difficult, it means that the guide bars have moved from their normal operating position and have to be realigned.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

- Remember that a relevant power has to be used only in the moment when the mobile contacts are inserted on the fixed contacts, because contact pressures have to be exceeded for a correct insertion of the switch.
- Verify the integrity of socket and plug connectors for auxiliary connections of sectional and removable interrupters.
- Verify that there is no oxidations on start contacts, fixed and mobile, neither on auxiliary connection contacts, socket and plug. If there should be, proceed to their elimination as described in chapter 4.4 MAINTENANCE on page 31.
- Check the internal control and measuring buckets; visually control that all the devices and relays are properly fixed to their correct mounting position and eliminate with the usual procedure eventually presences of humidity and oxidation.
- Inspect by opening, the integrity of all fusers and proceed with reinsertion. Particularly check that the contact surfaces of fuser and its holder are perfectly clean.
- Check that there are no traces of humidity on the switches. If there are, remove them using a completely dry jet of hot air (max. 80 °C). If the switches show a considerable degree of humidity, remove the front lid by loosening the four fixing screws and use a jet of hot dry air to dry out perfectly the internal part of the switch. Any trace of salt deposit or mould must be removed using a stiff bristled brush

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

4.4 Maintenance

The described LVS, once correctly installed and used, doesn't have particular maintenance problems. Anyway it's advisable to proceed periodically with some check as described as follows; the times between the check may be opportunely reduced depending on the status of the switchboard after the first checks.

4.4.1 Visual control of internal dust backlog (every 6 months)

An eventual dust backlog can be eliminated with a normal vacuum cleaner by switched off electric panel.

Do not use compressed air to remove dust, because most of it would return into the case and could also penetrate the single components.

It is absolutely not allowed any deposit of conductive dust, like graphite or similar, or flammable dust, like wooden or cereals powder and similar.

4.4.2 Visual check for oxidation of start connections with mechanical bolt clenching between copper bars and cables endings (every 12 months)

Search for the causes responsible for oxidation, so that it can be eliminated.

The most usual causes are:

- Loosen of mechanical clenching (screws and bolts) with consequently junctions overheating.
- Contamination by aggressive chemical agents brought from outside either by air in the checking stage or by the use of tools, which had chemicals on them.
- Presence of humidity.

Any oxidation should be removed by opening the connection, cleaning the contact surfaces carefully using lightly abrasive paper and perfectly clean cloths and brushes.

All powder residues must be removed completely from the control panel.

Do not use chemical products for cleaning, unless you are entirely sure they can be neutralized.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

Once you have cleaned the connection, tighten the connection, and tighten the bolts again. After this it is a good idea to apply a thin film of electrical contact grease (grease which has had graphite and/or silver powder added to it to make it conduct) to the outside of the connection. Remove any excess with a perfectly clean cloth.

4.4.3 Visual check of start connections between fixed and removable parts of sectional interrupters (every 12 months)

The eventually present oxidation must be removed by an accurately cleaning with a rough fibers cloth, eventually moisten with alcohol, or with strong brushes. Do not use abrasive devices, like powders or sandpaper, which could damage the silver cover of the contacts. After that proceed with greasing the contacts, fixed and removable, with special electric contacts grease. The eventually excess of grease has always to be removed. By checking the above described, also look for the correct mechanical functionality of interrupters removing and insertion.

4.4.4 Check the bolt connections are tight (every 12 months)

Disconnect the control panel completely from the electrical power supply and check that the bolt connections on all the copper bars, between copper bars and cables and between terminals in general and input and/or output cables are tight.

Obviously this check should be extended to all the earth connections including the secondary connections of the amperometric transformers.

4.4.5 Check the auxiliary connections (every 12 months)

This involves checking that the screws, which make electrical connections and the fasteners that hold electrical equipment in general, are tight.

Remove any trace of oxidation by means of a light abrasive action and after tightening the connection again apply a thin film of conducting grease to protect it.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

If the connection shows a high degree of oxidation, it should be replaced. Change the support equipment and the terminal and rebut the cable again from scratch after removing the end of the cable where the copper showed signs of being oxidized.

4.4.6 Check the protection fuses for the power supply to the auxiliary services and voltmeter measuring circuits (every 6 months)

Open the equipment and check the fuses.

If no signs of oxidation or overheating are to be seen, the equipment can be reassembled. If not, the entire unit should be replaced, since once the fuse holder has been overheated it can no longer guarantee a good electrical contact with the fuse.

4.4.7 Check the protection relay of the starting line (every 12 months)

With the electrical power supply connected, check this by pressing the "test" button located on the switches.

4.4.8 Check the connections of the grounding system (every 12 months)

After checking the internal connections of the control panel with the earth bus bar as described above, check that the bus bar is connected perfectly with the grounding system.

It's a good idea, however, to open the connections both on the earth bus bar and on the earth plate itself to check the effectiveness of the contact surfaces.

Clean them if necessary, re-establish the contact and grease the outside of the connection with vaseline or conducting grease.

The above check is obviously entirely valid only if you can be entirely sure of the complete effectiveness of the grounding system, which you are legally required to check at least once every two years.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

4.5 Use

4.5.1 Preamble

Access to the switchboard must be allowed only to trained personal, because the LVS contains terminals and distribution bars, which are normally protected for direct contacts, but still under tension.

4.5.2 Closing interrupters

Before closing the sectional, removable or fixed, interrupters, ensure they are perfectly fixed on the wall (if sectional or extractable) or correctly placed on the metal sheet support (if fixed).

Anyway there are no particular conditions to observe for proceeding with the interrupters closing.

4.6 First start up

- Unscrew the rear protection of the single modules, so to allow the access to the terminals of the interrupters;
- Connect the incoming wires (use the supplied electric cables);
- Connect the outgoing wires (use the supplied electric cables);
- Regulate the surge suppressor;
- Set the foreseen values, based on loads and selectivity demands;
 - The magnetic surge suppressors of the principal (incoming) interrupters, can temporally be set on minimal values, to obtain a rapid power cut in case of a short cut during the start up.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

- Control the current transformers;
 - Control that the secondary circuit of all current transformers is closed (connected load). If no load is used, the circuit's terminals must be placed in short circuit.
- Control of the power and neutral bars;
 - Perform a visual control to ensure that all the connections screws of the bars are correctly tighten between the sections.
- Control the sequence and identification of the phases;
- Control the panels connections between the sections;
- Carry out an isolation test;
 - Control that the incoming power supply is cut off. Verify that all the control supplies are disconnected. Check that all the relays are disconnected. Control that all the big interrupters units (incoming) are sectioned.
 - Control the isolating of the principal bars system using a Megger to 1kV or 0.5kV. The isolating resistance must result bigger than 1Mohm. Reconnect all relays, control the tensions and circuits that have been disconnected during the isolation test.
- Power up tension
 - Control that the incoming and outgoing units interrupters are in open condition.
 - Ensure that all the doors and panels of the switchboard are closed. Close the main switch of the LVS and connect, if possible, on switch at time.
 - Control the sequence of the phases.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

- Control the single starts one by one:
 - Close the interrupter.
 - Control the main circuit connected to user.
 - Control all the important interconnection circuits (if present) following the LVS' annexed schemes.
- Final control
 - Control that all the electronic devices are working. During the start up, set all the magnetic surge suppressors with their relative working value. Control that bars don't generate any noise or vibration.

ATTENTION!

The short circuit level of a low tension device is usually very high.

Depending on the set interruption time, the selectivity, etc., in the operating unit can be generated elevate level currents also for a relatively long time. An accidental short circuit may cause serious damages to the persons and devices. This for it's very important to use isolated tools and fuse protected instruments during the start up procedure.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

5 MAINTENANCE

Only specially trained and authorized personnel is authorized to perform maintenance operations. Always use proper individual protections for a safety operating.

5.1 Ordinary Controls

5.1.1 Daily jobs:

Intake and inter-stage gas pressure

To verify the correct values, see functional characteristics table on compressor datasheet ST15000116 to have referral parameters to compare with the values displayed at the operators panel on the compressor's electric power/control panel; for more details about the use of the operator's panel see the relative attached instruction's manual.

Gas or fluid leaks

Perform a visual and auditory check to detect eventual gas or fluid leaks.

Alarms signaled on the board

Check and clear alarms signaled on the operator's panel.

5.1.2 Weekly jobs:

Oil level

Make sure that the oil level seen in the level indicator is over the minimum (see annex ST14000015)

Further there is a double electronic control for the oil level;

- A forewarning that advices with a message on the display, the approaching of the oil quantity to the minimum allowed level.
- By reaching of the minimum level, found by the level switch, the machine is going to be blocked under alarm condition.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

In case of low oil level, fill until the level reaches half between the minimum and maximum signs on the level indicator.

Coolant level

The coolant liquid level must be controlled by running machine, or better by running water pump. Make sure that in this conditions the coolant level in the pan positioned over the air cooling system is higher than the minimum level indication.

If necessary, refill.

Fluids drainage;

For the drainages of fluids refer to their relative paragraphs: 5.3 Drainages at page 40.

5.1.3 Monthly jobs:

Air cooling unit cleaning

Check periodically (at least once a month) air cooling system, specially that there is no obstruction behind the fans. If there should be found e.g. leafs or similar, they have to be manually removed by hold machine.

If there should be present too much dust cumulating, plants and/or other things that do not allow a satisfying cleaning by hand, automatic cleaning auxiliaries may be used.

5.1.4 Annual jobs:

Instruments check

Check that all onboard instruments work properly.

Vibrations check

The machine was designed and built to remove the risks relating to the vibrations. Properly installed, as described in the manual, present no risk to human health or to the level of whole body or to the level hand / arm system.

In any case, for greater security, visually check for unconventional vibrations on tubes, valves, plant components and on the compressor itself.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

If affirmative, proceed with special instruments for a more specific control. If so, proceed with appropriate instrumentation to a more rigorous control.

Note: Upon request, be installed vibration sensors that control the vibrational state in time of the machine.

Relevant operating temperatures check

- Gas circuit: control the temperatures on suction line and on discharge lines of 1st, 2nd, 3rd and 4th stage before and after each refrigeration circuit.
- Oil circuit: check the oil temperature on inlet and outlet of the oil heat exchanger.
- Cooling circuit: check the water temperature at the inlet and the outlet of the air cooling unit

Nuts and bolts tightness check

Check that the main nuts and bolts on the machine and important connections on the plant are still tight.

5.2 Electric Motor

Respect the ball bearings lubrication intervals reported on the label on the electro motor.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

5.3 Drainages

5.3.1 Draining liquids from moisture wiper

- 1) Press the stop button on electric board;
- 2) Open valve V107 on the drain storage tank on compressor skid, emptying it from the liquid eventually present inside;
- 3) Close valve V107;
- 4) Press start button on electric board.

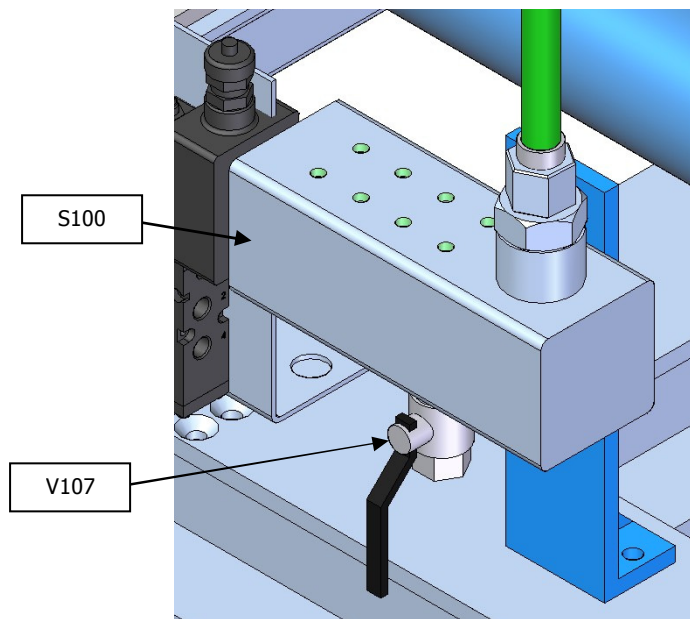


Fig. 17 Draining Wiper

The drained liquids must be disposed of in compliance with laws in force in the country of installation.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

5.4 Removing and refitting pumping elements

For removing and refitting pumping elements see the annex ST14000015.

5.5 Ordering spare parts

Spare parts may be ordered:

- 1) for the compressor body, referring to the exploded diagrams and specifying the component position and diagram number;
- 2) for skid unit components, specifying the position of the component in the annexed photographs;
- 3) always specify the serial number given on the compressor identification plate;

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

5.6 Replace oil filter cartridge

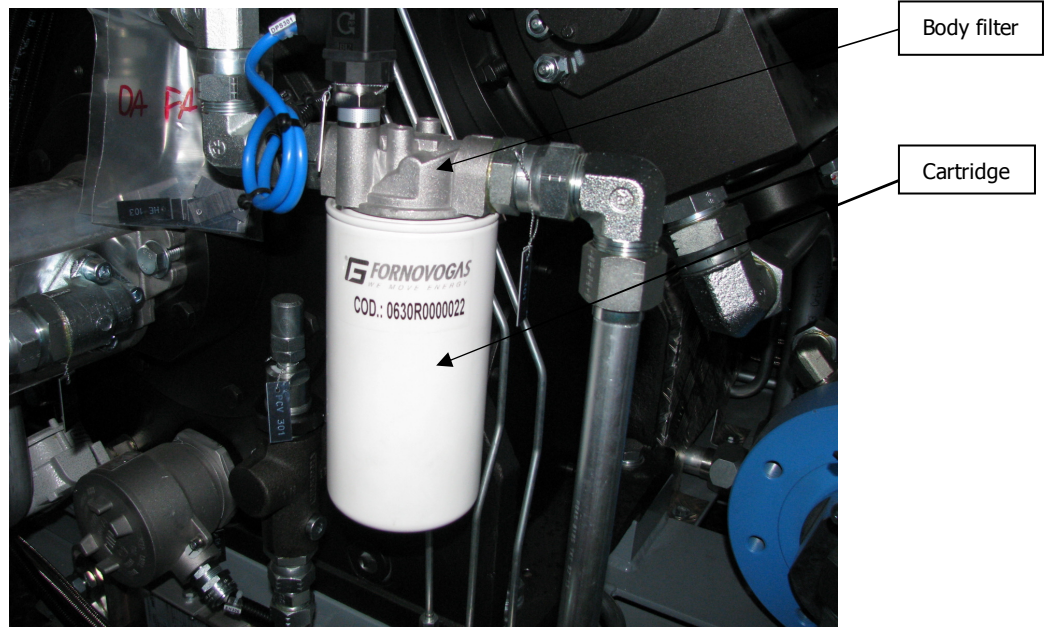


Fig. 18 Oil filter

To replace the oil filter cartridge takes a few and simple steps:

- 1) Make sure that the machine is stopped and that the voltage to the electrical panel is removed;
- 2) Predispose, under the filter, a cloth to contain any oil spills that could be encountered during the replacement;
- 3) Grasp the cartridge and turn it counter clockwise until you completely remove from the body;
- 4) Insert the new cartridge on the body and turn it clockwise until the completely screwing.

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

6 WARNING TO USERS

The following table describes the list of "Individual protective equipment" (DPI), and their average duration, that the maintainer or anyone working on the machine must ensure that you have.

Tab. 11 Individual protective equipment

Individual protective equipment (DPI)	Average duration
Protection helmet	Three-year
Cap	At wear
Protecting cover	Three-year
Earplug	Disposable
Safety glasses for protection from impacts	Three-year
Safety glasses for physical agents	Three-year
Face shield	At wear
Solder mask	At wear
Dust mask	Disposable
Half mask with filter	According to the notification
Mask with filter	According to the notification
Protective gloves against the dangerous chemical agents	At wear
Protective gloves against cold burns	At wear
Protective gloves against hot burns	At wear
High shoes	Annual
Low shoes	Annual
Boots	Three-year
Knee-pad	At wear
Safety belt	Five-year
Slings of load	Five-year
Special clothes	At wear
Raincoat (*)	At wear
Work clothes (*)	Annual

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

Upon receipt of these devices, the employee must:

- Do a formation and training course organized by the owner;
- Use the DPI provided in accordance with information and training received;
- Adequately preserved the DPI provided;
- Not make changes on their own initiative;
- Immediately report to the employer, manager or person in charge of any discrepancies or problems found in DPI provided;
- Follow company procedures established for the return of the material.

6.1 DPI to be used during the assembly and disassembly pumping elements

- Work clothes
- Low shoes
- High shoes
- Protective gloves against hot burns
- Protective gloves against cold burns
- Protective gloves against the dangerous chemical agents

6.2 DPI to be used during the oil filling

- Work clothes
- Protective gloves against the dangerous chemical agents
- Safety glasses for physical agents
- Low shoes
- High shoes

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

7 DIRECTIONS ABOUT THE INCORRECT USING REASONABLY FORESEEABLE

If you make an incorrect use of the machine and it's specific the risks that you can go against are:

- Explosion
- Fire
- Projection of the machine's parts
- Burns
- Crushing

For the correct use of the machine see the annex ST10000011

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

8 ANNEXES

Layout skid	AS10001779
Layout storage	AS10001777
P&ID Process	SG15000143
P&ID Cooling	SG15000144
P&ID Lubrication	BD00000401
P&ID Storage	BD00000367
P&ID Priority panel 2 lines	BD00000381
P&ID Discharge panel 2 lines	BD00000762
Control panel diagram	SE15000084
Electric cables list	SE15000085
Touchscreen manual	
Exploded view Pumping 1 st stage	ES10242
Exploded view Pumping 2 nd stage	ES10243
Exploded view Pumping 3 rd /4 th stage	ES10244
Exploded view Standard Crosshead/Connecting rod	ES10000732
Exploded view crankcase	ES10075
Parts list	
300-001 cylinder tightening torques and clearances	AS10000824
300-002 cylinder tightening torques and clearances	AS10000825
300-003 cylinder tightening torques and clearances	AS10000826
Compressor manual	ST14000015
Compressor frame	DA300P3TC-301BT-302NV-303NV
Shell and tubes heat exchangers manual	ST13000044
Compressor datasheet	ST15000116
Cause and Effect Chart	ST15000126
Placing platform	PL12000073
Skid footprint	BD00000625
Electric motor alignment instructions	AS10434
Static and Dynamic Loads	AS10304
Platform	AU90012X

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15

Risk analysis	ST10000011
Assembling instructions for external cooling unit	ST08000161
Heat exchanger manual	ST13000044
Storage manual	ST13000051

Original instructions	Object	Written By	Approved By	Rev	Date
	IOM02005EN-0	EB	PG	0	02/11/15