

# AIR COOLED EXCHANGERS, INC.

PHONE 918 251-7477 FAX 918 251-7482 P.O. BOX 577 BROKEN ARROW, OK 74013

## **OPERATING AND MAINTENANCE INSTRUCTIONS FOR ACE COOLERS**

#### **IMPORTANT**

Before start up, check set screws and bolts in the fan assembly and set screws in locking collars of all bearings and sheaves. These items should be checked again several days after start up.

#### **FAN & DRIVE**

Although the fan and drive are inspected before shipment, clearance between the fan blades and the fan ring and guard, and alignment of the fan shaft should be checked to assure that rough handling during shipment has not loosened bearing mounting bolts or caused misalignment.

V-belt drives should be adjusted until tight enough to prevent excessive belt slippage. The belt is generally tight enough when it can be twisted one-quarter of a turn with the thumb and fore-finger.

#### **LUBRICATION**

Bearings should be greased in accordance with normal maintenance practice. Overlubrication is the most common cause of bearing failure. In general, about one cubic inch of grease in each bearing every 2 to 3 months is adequate. The operating temperature of the bearing may indicate how much lubrication is required.

Normal temperature may range from "cool to warm to touch" up to a point "too hot to touch for more than a few seconds" depending on bearing size and speed, and surrounding conditions. Unusually high temperature accompanied by excessive leakage of grease indicates too much grease. High temperature with no grease showing at the seals, particularly if the bearing seems noisy, usually indicates too little grease. Normal temperature and slight showing of grease at the seals indicates proper lubrication.

## **TUBE CLEANING**

Operating conditions sometimes cause an accumulation of dirt on the outside fin surface. This can be removed by directing compressed air, or a greaseless solvent followed by a water spray through the fins in a direction opposite the normal air flow. The inside of the tubes will require periodic inspection and cleaning as necessary. Removal of access plugs allows visual inspection, and if necessary, the use of mechanical tube cleaners.

#### **PLUG LEAKS**

Should tapered plugs develop leaks, additional tightening is normally all that is required. Thread dope may be used if tightening alone is not sufficient. If shoulder type plugs develop leaks, the gaskets should be replaced. Tapered plugs that are removed for the tube inspection or cleaning should be replaced in the same hole.

#### **TUBE LEAKS**

Tube leaks can be of two types: (1) leaks in the tubewall itself (usually corrosion) and (2) leaks in the tube to tubesheet joint. In the first case, it is usually most practical to plug both ends of the tube with the resulting loss in heat transfer surface. When so many tubes have been plugged that performance is affected, retubing will be necessary. If leaks develop in the tube to tubesheet joints, re-rolling of the tube will be required. Care must be used in selection of the proper tube expander for the size and BWG of the tube being used. As with all rolled tube joints, over-rolling must be avoided.

#### **GENERAL**

If it is ever necessary to contact our plant for service or replacement parts, it is essential that our serial number or other identifying data be obtained form the metal nameplate attached to the cooler. This is the only way to positively identify the correct parts that may be required.



# AIR COOLED EXCHANGERS, INC.

PO BOX 577

BROKEN ARROW, OK 74013

PHONE 918-251-7477

FAX 918-258-1833

1	FACSIMILE TRANSMITTAL SHEET				
TO: Jade Cable	FROM: Doug Self				
COMPANY: Waterflood	DATE: 11/14/2002				
FAX NUMBER: 306-634-7887	TOTAL NO. OF PAGES INCLUDING COVER:				
PHONE NUMBER:	SENDER'S REFERENCH NUMBER:				
re: J2A	YOUR REFERENCE NUMBER:				
URGENT DFOR REVIEW	/ □ PLEASE COMMENT □ PLEASE REPLY □ PLEAS	SE RECYCLE			
Jade,					
Keep fan blades at a minimu normal summer operation.	m pitch in winter, 15° @ clevis. Keep fan blades at 27° c	levis during			
Regards,					
Doug					



# CLASS 1000 FANS INSTALLATION INSTRUCTIONS

The clevises on the hubs are set at approximately the required angle for the specified fan performance. Install hubs without loosening the clevises. The bushing has been installed and lubricated at the factory. No further lubrication is required. Place the hub/bushing on the shaft with the key in place (preferably bolts will be towards free end of shaft). Using a 10 mm allen wrench, sequentially tighten the bolts to firmly engage the bushing in the hub and seat the bushing on the shaft. Once the bushing/hub is firmly seated on the shaft, continue tightening the bolts sequentially until the specified torque of 50 ft-lb (6.9 kg-m) is reached. Do not overtighten bolts as this could cause damage to the hub.

The bolts holding the clevis to the hub should be torqued to 50 ft-lb (6.9 kg-m). Install blades so they extend straight out from the hub and torque the clevis bolt/nut to 50 ft-lb (6.9 kg-m). The threads on the clevis bolt are supplied from the factory with a lubricant coating. Be sure the lubricant is still present before tightening.

Before starting the fan, manually check all bolts and nuts to see if they are tightened. Take care not exceed torque limits. Manually rotate the fan while checking each blade for proper clearance. Start the fan and watch it in operation. All blades should move to the same operating position, indicating that the blade angles are properly set and that all blades are equally loaded. After the fan has been operating for several minutes, stop the fan and observe the blades as the fan comes to rest. All of the blades should return to their original position at the same rate. Inspect the inner surface of the fan ring and the blade tips for any indication of scoring. The horsepower given on the fan specifications is the calculated horsepower that is required for the specified performance. Consult the factory before increasing the blade.



# AIR COOLED EXCHANGERS, INC.

PHONE 918 251-7477 FAX 918 251-7482 P.O. BOX 577 BROKEN ARROW, OK 74013

# AIR COOLED HEAT EXCHANGER SUGGESTED START UP PROCEDURE

Before any start up procedure is begun, a thorough inspection of the Air Cooled Exchanger should be made.

- 1.) Be sure all bolted connections are properly tightened.
- 2.) After tube bundle and piping hydrotest, remove hydrotest connections. Be sure tube bundle is properly drained, and if required, dried. Connect process piping and any auxiliary connections.
- 3.) Inspect all process connection, as well as, vent drain, temperature and pressure, or any other auxiliary connections to be sure they are plugged or connected properly.
- 4.) Check mechanical equipment before starting process through the tube bundle(s).
  - a.) Thoroughly check the plenum and fan drive area to be sure all tools and construction materials are removed.
  - b.) Rotate the fan by hand and check fan tip clearance and alignment of belts and sheaves.
  - c.) Check belt tension.
  - d.) Check all fan drive bolts to be sure they are properly tightened. This includes bearing bolts, fan and sheave bushing bolts, set screws, motor bolts and fan blades attachment bolts.
  - e.) If air operated auto-variable pitch fans are used, check for proper pitch with the air off. Fans may go to either minimum or maximum pitch at air failure. Check specifications for requirements. If fan pitch is not satisfactory, set pitch per manufacturer's instructions (see Operation and Maintenance Instructions). If fan pitch is satisfactory, cycle fan through it's range, using plant air and an air regulator.

- f.) If air operated louvers are provided, it is advisable to disconnect the air motor linkage and cycle the louvers by hand to assure there is no binding or obstruction of the louvers blades. If binding occurs, check to be sure louver frames are square. Attaching bolts may have to be loosened and frames shifted to ease binding. If louvers operate smoothly, reconnect air motor. Cycle the air motor, using plant air and an air regulator.
- g.) If manually adjusted pitch fans are provided, check fan pitch and re-pitch per manufacturer's instructions if required.
- h.) If manual operated louvers are provided, check for binding of the blades, as in instruction (f). Operate louvers to be sure there is no linkage obstruction or binding.
- i.) Remove condensate drain plugs, if provided, in electric motors and other electrical components to drain any condensation that might have occurred during storage. If space heaters are furnished in electric motors, louver actuators, controls, etc., activate the space heaters and allow approximately 24 hours before starting equipment.
- j.) After all the applicable steps previously stated are completed, the mechanical equipment may be cycled.
- k.) Be sure all personnel and equipment are away from the fan and fan drive area. For safety reasons, equipment guards should be installed. Activate the drive motor and let it reach speed. Check for vibration and excessive noise. If vibration or excessive noise occurs, immediately shut motor down, and check for loose connections or insufficient clearance between moving parts. If the system is running smoothly, replace any guards removed and move to the next drive and repeat above steps.
- 5.) Start the process through the tube bundle(s). Open the inlet valves slowly and let the process "Warm" the bundles slowly. This will allow the components of the tube bundle to expand at the same rate and lessen the thermal shock.



\*\*\*\* . . \*:\* .

AIR COOLED EXCHANGERS, INC.
P.O. BOX 577 - BROKEN ARROW, OKLAHOMA 74013
Ph (918) 251-7477
Fax (918) 258-1833
E-MAIL: MAILHUB@ACE-COOLERS.COM

JOB# 1028

CUSTOMER WATERFLOO	D	PI	ROPOSAL NUMBE	SN 030 R 000215A.5
REFERENCE 3306TA	<del>-</del>		ATE	2/28/2003
MODEL J4D			AGE	1
····	PFR	FORMANCE OF		
SERVICE	JW	AUX	CLO	AC
FLOW	45.0GPM	25.0GPM	83.0GPM	1.92MMSCFD
FLUID	50%GLY	50%GLY	OIL	.65
TEMPERATURE IN, F	190.0	113.4	200.0	195.0
TEMPERATURE OUT, F	153.2	110.0	180.0	120.0
INLET PRESSURE, PSIA	155.2	110.0	100.0	115.0
PRESSURE DROP, PSI	4.9	2.9	12.5	3.2
DUTY, BTU/HOUR	735000	37300	375000	166113
CORRECTED MTD	53.2	12.5	77.1	43.9
BARE TUBE RATE	175.6	137.9	61.8	73.2
FOULING	0.00050	0.00050	0.00100	0.00200
BARE SURFACE, SQ. FT.	79	22	79	52
TOTAL SURFACE SQ. FT.	1250	343	1250	1237
·	r	CONSTRUCT		
NO. SECTIONS	COMBINED	COMBINED	1	1
NO. TUBES/SECTION	62	17	62	34
LENGTH	8	8	8	8
NO. ROWS	3	3	4	4
NO. PASSES	4	2	2	2
COUNTERFLOW				
TUBE O.D. AND BWG	5/8X16BWG	5/8X16BWG	5/8X16BWG	3/4X16BWG
TUBE MATERIAL	SA214(WLD)	SA214(WLD)	SA214(WLD)	SA214(WLD)
DESIGN PRESSURE, PSI	14	14	250	250
DESIGN TEMPERATURE, F	350	350	233	233
NOZZLES	2-150RF	2-150RF	2-150RF	3-150RF
HEADER TYPE	RECT TUBE	RECT TUBE	BOX W/PLUGS	BOX W/PLUGS
HEADER MATERIAL	STEEL	STEEL	SA-516-70	SA-516-70
ASME CODE STAMP			YES	YES
GROOVED TUBE SHEET	YES	YES		· · · · · · · · · · · · · · · · · · ·
CORROSION ALLOWANCE	· - · - · · · · · · · · · · · · · · · ·		0.063	0.063
PLUGS, TYPE	TAPER	TAPER	SHOULDER	SHOULDER
PLUGS, MATERIAL	STEEL	STEEL	STEEL	STEEL
TURBULATORS	OILLE.		YES	
ACCELERATORS			1123	<del></del>
	NO	NO	NO	YES
LOUVERS				
STRESS RELIEVE	NO	NO	NO	NO
NDE				.,
API-661				
VENTS AND DRAINS				
INS	5005 MA			HIGH PERFORMANCE
		AIR DATA		
NLET AIR, F 95	· · · · · · · · · · · · · · · · · · ·			00
DUTLET AIR, F 126				314
		CHANICAL EQ		70
	HP/FAN 12.2	RPM	743	DIA 72
	N MATERIAL ALUMINU	VI	NUMBE	R OF BLADES 6
DRIVE	CED	<del></del>		
SDAET TVDE INTO "				
DRAFT TYPE INDU	WIDTH 9	)	NGTH 7.4	HEIGHT 7.6

# Parts List



# Air Cooled Exchangers, Inc.

P.O. Box 577

Broken Arrow, Oklahoma 74013

Phone: 918-251-7477

Fax: 918-251-7482

Date: 2/26/03

Customer:	Waterflood Services
ACE Serial Number(s):	03016, 03017
Cooler Model:	J4D

ltem	Qty/Unit		Description	on						
Fan Make & Model	1	72"	Dia.	6	Blades	39	deg. Pitch at	CLEVIS	Fan RPM:	
MOORE 1000 SERIES 16	1	L	Hand	2 3/16"	Bore with	STD.	Keyway	Special Note:		
Fan Shaft	1	2 3/16"	Dia.	64 1/2"	Long with	5" /	Keyway one end &	8" Кеуу	way other end	
Idler Shaft	-   1	1 15/16"	Dia.	20"	Long with	5" /	Keyway one end	• • • • •		• •
Fan Bearing	2	2 3/16" DO	DGE P2B-1	AF-203R						
Idler Bearing	1	1 15/16" D	ODGE FAN	& BLOWER	R OR EQUAL					
Electric Motor			HP		RPM		Volt	Phas	se	Cycle
			Enclosure		Frame Size	-	Slid	eBase		
Motor Sheave			O.D.	Турө	Groove		Bore			-
Fan Sheave			O.D.	Туре	Groove		Bore	,		
V-Belts								_		
										-
								-		
		V. 2						•	•	
· · · · · · · · · · · · · · · · · ·		· ·								
	i			_ <del></del>		-•	÷ ÷			**
		++				_		*	•	
	- 1									

FAN, SHAFT, BEARINGS & V-BELTS ARE RECOMMENDED SPARE PARTS.

ALL INQUIRES AND ORDERS MUST BE ACCOMPANIED BY COOLER SERIAL NUMBER.



# AIR COOLED EXCHANGERS, INC.

PHONE 918 251-7477 FAX 918 251-7482 P.O. BOX 577 BROKEN ARROW, OK 74013

#### **OPERATING AND MAINTENANCE INSTRUCTIONS FOR ACE COOLERS**

#### **IMPORTANT**

Before start up, check set screws and bolts in the fan assembly and set screws in locking collars of all bearings and sheaves. These items should be checked again several days after start up.

#### **FAN & DRIVE**

Although the fan and drive are inspected before shipment, clearance between the fan blades and the fan ring and guard, and alignment of the fan shaft should be checked to assure that rough handling during shipment has not loosened bearing mounting bolts or caused misalignment.

V-belt drives should be adjusted until tight enough to prevent excessive belt slippage. The belt is generally tight enough when it can be twisted one-quarter of a turn with the thumb and fore-finger.

#### LUBRICATION

Bearings should be greased in accordance with normal maintenance practice. Over-lubrication is the most common cause of bearing failure. In general, about one cubic inch of grease in each bearing every 2 to 3 months is adequate. The operating temperature of the bearing may indicate how much lubrication is required.

Normal temperature may range from "cool to warm to touch" up to a point "too hot to touch for more than a few seconds" depending on bearing size and speed, and surrounding conditions. Unusually high temperature accompanied by excessive leakage of grease indicates too much grease. High temperature with no grease showing at the seals, particularly if the bearing seems noisy, usually indicates too little grease. Normal temperature and slight showing of grease at the seals indicates proper lubrication.

#### **TUBE CLEANING**

Operating conditions sometimes cause an accumulation of dirt on the outside fin surface. This can be removed by directing compressed air, or a greaseless solvent followed by a water spray through the fins in a direction opposite the normal air flow. The inside of the tubes will require periodic inspection and cleaning as necessary. Removal of access plugs allows visual inspection, and if necessary, the use of mechanical tube cleaners.

#### **PLUG LEAKS**

Should tapered plugs develop leaks, additional tightening is normally all that is required. Thread dope may be used if tightening alone is not sufficient. If shoulder type plugs develop leaks, the gaskets should be replaced. <u>Tapered plugs that are removed for the tube inspection or cleaning should be replaced in the same hole.</u>

#### **TUBE LEAKS**

Tube leaks can be of two types: (1) leaks in the tubewall itself (usually corrosion) and (2) leaks in the tube to tubesheet joint. In the first case, it is usually most practical to plug both ends of the tube with the resulting loss in heat transfer surface. When so many tubes have been plugged that performance is affected, retubing will be necessary. If leaks develop in the tube to tubesheet joints, rerolling of the tube will be required. Care must be used in selection of the proper tube expander for the size and BWG of the tube being used. As with all rolled tube joints, over-rolling must be avoided.

#### **GENERAL**

If it is ever necessary to contact our plant for service or replacement parts, it is essential that our serial number or other identifying data be obtained from the metal nameplate attached to the cooler. This is the only way to positively identify the correct parts that may be required.



PHONE 918 251-7477 FAX 918 251-7482 P.O. BOX 577 BROKEN ARROW, OK 74013

# AIR COOLED HEAT EXCHANGER SUGGESTED START UP PROCEDURE


Before any start up procedure is begun, a thorough inspection of the Air Cooled Exchanger should be made.

- 1.) Be sure all bolted connections are properly tightened.
- 2.) After tube bundle and piping hydrotest, remove hydrotest connections. Be sure tube bundle is properly drained, and if required, dried. Connect process piping and any auxiliary connections.
- 3.) Inspect all process connection, as well as, vent drain, temperature and pressure, or any other auxiliary connections to be sure they are plugged or connected properly.
- 4.) Check mechanical equipment before starting process through the tube bundle(s).
  - a.) Thoroughly check the plenum and fan drive area to be sure all tools and construction materials are removed.
  - b.) Rotate the fan by hand and check fan tip clearance and alignment of belts and sheaves.
  - c.) Check belt tension.
  - d.) Check all fan drive bolts to be sure they are properly tightened. This includes bearing bolts, fan and sheave bushing bolts, set screws, motor bolts and fan blades attachment bolts.
  - e.) If air operated auto-variable pitch fans are used, check for proper pitch with the air off. Fans may go to either minimum or maximum pitch at air failure. Check specifications for requirements. If fan pitch is not satisfactory, set pitch per manufacturer's instructions (see Operation and Maintenance Instructions). If fan pitch is satisfactory, cycle fan through it's range, using plant air and an air regulator.

- f.) If air operated louvers are provided, it is advisable to disconnect the air motor linkage and cycle the louvers by hand to assure there is no binding or obstruction of the louvers blades. If binding occurs, check to be sure louver frames are square. Attaching bolts may have to be loosened and frames shifted to ease binding. If louvers operate smoothly, reconnect air motor. Cycle the air motor, using plant air and an air regulator.
- g.) If manually adjusted pitch fans are provided, check fan pitch and re-pitch per manufacturer's instructions if required.
- h.) If manual operated louvers are provided, check for binding of the blades, as in instruction (f). Operate louvers to be sure there is no linkage obstruction or binding.
- i.) Remove condensate drain plugs, if provided, in electric motors and other electrical components to drain any condensation that might have occurred during storage. If space heaters are furnished in electric motors, louver actuators, controls, etc, activate the space heaters and allow approximately 24 hours before starting equipment.
- j.) After all the applicable steps previously stated are completed, the mechanical equipment may be cycled.
- k.) Be sure all personnel and equipment are away from the fan and fan drive area. For safety reasons, equipment guards should be installed. Activate the drive motor and let it reach speed. Check for vibration and excessive noise. If vibration or excessive noise occurs, immediately shut motor down, and check for loose connections or insufficient clearance between moving parts. If the system is running smoothly, replace any guards removed and move to the next drive and repeat above steps.
- 5.) Start the process through the tube bundle(s). Open the inlet valves slowly and let the process "Warm" the bundles slowly. This will allow the components of the tube bundle to expand at the same rate and lessen the thermal shock.

# AMOTALS Model B

# Thermostatic Valves

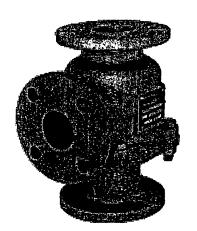

## **FEATURES**

- FLOW RATES OF 68 1200 USGPM
- TAMPER-PROOF TEMPERATURE SETTINGS OF 55°F 240°F
- **COMPLETELY SELF-CONTAINED**
- ▲ POSITIVE 3-WAY VALVE ACTION
- AVAILABLE IN CAST IRON, DUCTILE IRON, BRONZE, STEEL, AND STAINLESS STEEL
- 1-1/2" 6" PIPE SIZES: FLANGED, AND THREADED CONNECTION

# **APPLICATIONS**

- ENGINE & COMPRESSOR COOLING SYSTEM
- **LUBE OIL SYSTEMS**
- COGENERATION HEAT RECOVERY LOOPS
- 1 PROCESS CONTROL
- **TEMPERATURE MIXING OR DIVERTING**

AMOT Model B Thermostatic Valves are fully automatic, 3-way fluid temperature control valves for diverting or mixing applications. They provide reliable control of fluid temperatures in engine jacket water and lubrication oil cooling systems. These valves are suitable for process control and industrial applications where fluids must be mixed or diverted depending on their temperatures. They may also be applied to cogeneration systems to control temperatures in the heat recovery loop assuring proper engine cooling and maximizing heat recovery.

#### TAMPER-PROOF

As with other AMOT thermostatic valve the Model B utilizes fully enclosed, factory-set temperature element assemblies which provide tamper-proof operation. To change a valve setting it is necessary to exchange the temperature element assemblies inside the valve.

#### HIGH RESISTANCE TO SHOCK

Model B thermostatic valves display excellent reliability even under extreme shocks or vibration and many models have been qualified to MIL-S-901 and MIL-V-19772.

#### MANUAL OVERRIDE

If desired, AMOT Model B thermostatic valves can be supplied with a manual override which allows the user to direct flows through Ports A and C. On valves equipped with the manual override option, there is one manual override device for each of the temperature element assemblies. To engage the manual override function, flip the lever(s) 180° from "Auto" to "Manual" position.

**FORM 936** 

#### **OPERATION**

The valve is supplied with the temperature element assemblies factory-set to the nominal temperature setting. Temperature is sensed at Port A which remains open to Port B (bypass) until the fluid temperature reaches a point 5 - 10°F below the nominal setting. As the temperature continues to rise, the sliding valve moves to close off Port B and open Port C (connected to the cooler or heat exchanger) Port B is fully closed 8 - 10°F above the nominal setting. The valve continually modulates the fluid flow to maintain the nominal temperature. For optimum control, the system should be sized so about 1/2 the total fluid flow is passing through the cooler at full load.

For long life, AMOT Model B valves should not be exposed to continuous temperatures exceeding 25°F above their nominal temperature setting. For occasional short periods (1/2 hour or less), they can be exposed to temperatures of 50°F above their nominal temperature setting, but not to exceed 250°F maximum.


For higher over-temperatures, reduced stroke element assemblies (5566X) are available. They will withstand continuous temperatures of 60°F above their nominal temperature setting but add 30% to the valve pressure drop. Reduced stroke elements are not available in all temperatures.

#### INSTALLATION

AMOT thermostatic valves operate in any position and may be oriented at the convenience of the system designer. In the smaller sizes, the valve may be supported by the connecting pipe but should not be subjected to excessive bending. Line up the piping before tightening the connecting bolts. Larger sizes should not be used to support long and heavy lengths of pipe nor used to draw up lengths of pipe which have been fabricated too short.

If the valve is mounted at the high point of the system, the system should be properly vented to prevent trapping air at the temperature element assemblies.

For piping diagrams regarding specific applications, refer to Form 913, AMOT Thermostatic Valves General Information.

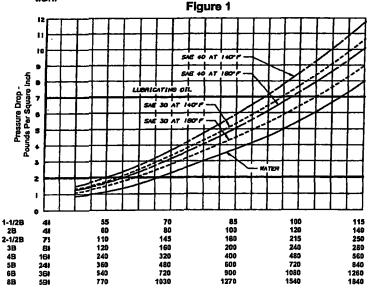

Flow in U.S. Gallons Per Minute Recommended pressure drop is 2 to 7 psi.

#### **SELECTION**

AMOT thermostatic valves are selected by the anticipated flow rate through the valve. Refer to Fig. 1. Pressure drop across the valve is usually limited to approximately 2 psi to 7 psi to maintain good temperature regulation.

Threaded end connections are available on 1 1/2 and 2 inch sizes. Models with cast iron, ductile iron, or bronze housings have ANSI 125 lb flat fare flanges. Steel or Stainless Steel housings feature ANSI Class 150 or 300 raised face flanges. Metric connections also available.

Models with steel housings have ANSI 150 lb/300 lb Class compatible raised face flanges.


Versions available from USA factory.

Cast Iron	Ductile Iron	Bronze	Steel
1-1/2BOCT	2BMDE	1 1/2BOB L	2BCSJ
1-1/2BHCT	2BFDF C	\$2B0BJE#54	2BCSH
2BOCT	12-172BMDF	2ECBE LAS	2BMSJ/P#
2BHCT	SEODE	VEFE S	2BMSH
2BMCF	ABED:	2012EMBF8	2-1/2BOSJ
2BCCF	AFODE A	A SECULIFY AND	2212BMSJF
2BFCF	XIBMDF.	SISIMD F	3BOSJ
2-1/2BOCF	(dion:	ALBERT AND	SEMERE
2-1/2BMCF	FOE VIET	(4) (e) (i) (4) (4) (4) (4) (4)	3BOSH
3BOCF	Mee (a) Ne	- 418   Y   815 - 11	1
3BMCF	SEMIDE:	GE01:171	
4BECF	7	SEMERAL S	ł
4BOCF		6B0BF###	l l
4BMCF	Les la constitución de la consti	6BMBJ Wat	ŀ
5BOCF			
5BMCF			
6BOCF			
6BMCF	ALLE LAND	THE PERSON NAMED IN	. 1


Indicates Non-Standard

#### PIPING DIAGRAMS

MODELS BO, BC, BM

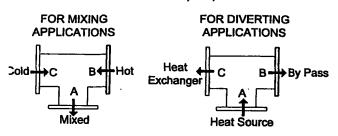

MODEL 1-1/2, 2, BO, BH, BF

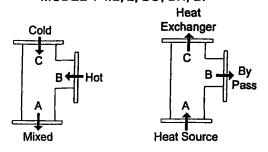

#### **SPECIFICATIONS**

Internal Trim Materials Bronze Standard Seal Material	
Max. Pressure Drop Across Valve	
Valve Pressure Ratings at 250°F	
Cast Iron, Ductile Iron, Bronze	
Cast Iron, Model BH	340 psi (23 Bar)
Steel Class 150	245 psi (17 Bar)
Steel, Class 300,	665 psi (46 Bar)
Stainless Steel Class 150,	228 psi (15 Bar)
Stainless Steel Class 300,	590 psi (41Bar)
•	, , ,

Shipping Weights:	Cast Iron	Ductile Iron	Bronze	Steel
1-1/2BO/2BO	25			
1-1/2BH/2BH	32			
1-1/2BM			25	
2BC, BM	30	30	35	45
2BF	35	35	40	
2-1/2B	55	55	75	75
3B	60	60	80	80
4B	135	135	150	
5B	200	200	240	
6 <del>B</del>	270	270	300	


#### **HOW TO ORDER**

(Refer to Model Code System Below.)

When ordering please specify the following:

- 1. Valve size connection (see Table A).
- 2. Valve Type (see Table B).
- 3. Housing material (see Table C).
- 4. Type of End Connection (see Table D).
- 5. Nominal temperature setting (see Table E).
- 6. Any of the following special features if required:
  - a) Viton or neoprene seals (instead of Buna N).
  - b) Electroless Nickel plated temperature element assembly.
  - c) Element leak hole (see Table G).
  - d) Reduced stroke element assembly for high over-temperature.

This product may be ordered using the full description as shown above or by constructing a Model No. using the Model Code System below. For special requirements, contact the AMOT factory or your local representative.

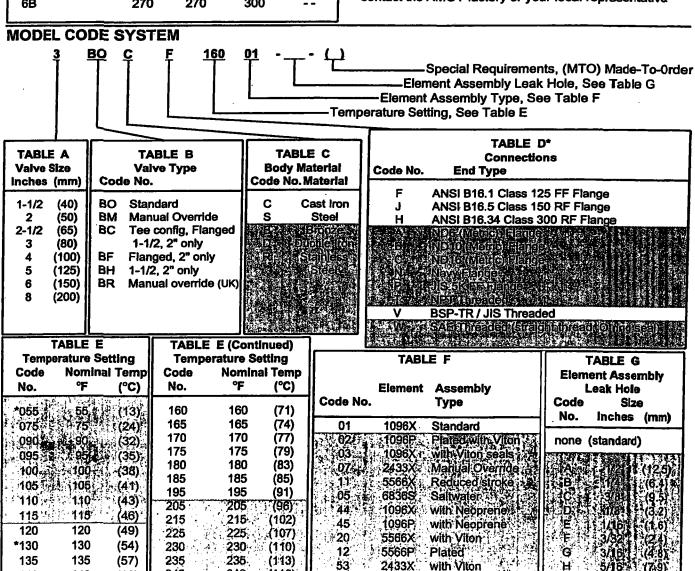

50

6836K

Indicates Non-Standard, MTO

Electroless Nickel

with Neaprene

\* = Also avail. as reduced stroke. Contact factory for other temps.

240

to 1096 and 2433 Element

Temperatures apply only

(116)

240

Assemblies.

140

145

150

155

(60)

(63)

(66)

(69)


140

145


\*150


155

## **DIMENSIONS**

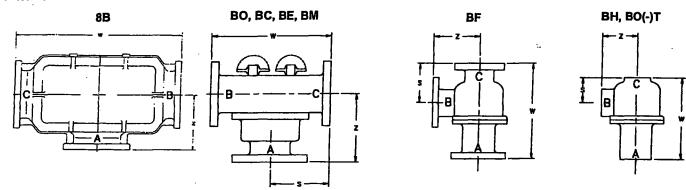


	<u> </u>	•	Principa		T	Fla	nge Dril	ling	
Model No.	Nominal Pipe Size	"S"	Dimens "W"	ions "Z"	Width in the Other Plane	No. of Holes	Dia. of Holes	Bolt Circle	No. of Element Assemblies
1-1/2BO(-)T	1-1/2 (40)	3-13/16 (97)	9-11/16 (246)	3-9/16 (90)	5-1/2 (140)	_	-	-	1
1-1/2BHCT	1-1/2 (40)	4-1/16 (103)	10-11/16 (271)	4 (102)	5-3/4 (146)	-	-	-	. 1
2BC(-)F 2BM(-)F	2 (50)	4-7/16 (113)	8-7/8 (225)	5-7/8 (149)	6 (152)	4	3/4 (19)	4-3/4 (121)	1
2BF(-)F	2 (50)	4-3/4 (121)	10-5/8 (270)	4-7/16 (113)	6 (152)	4	3/4 (19)	4-3/4 (121)	1
2BCSJ 2BMSJ	2 (50)	4-7/16 (112)	8-7/8 (225)	5-7/8 (149)	6 (152)	4	3/4 (19)	4-3/4 (121)	1
2BCSH 2BMSH	2 (50)	4-7/16 (112)	8-7/8 (225)	5-7/8 (149)	6 (152)	8	3/4 (19)	5 (127)	1 1
2BO(-)T	2 (50)	3-13/16 (97)	9-11/16 (246)	3-9/16 (90)	5-1/2 (140)		-		1
2BHCT	2 (50)	4-1/16 (103)	10-11/16 (271)	4 (102)	5-3/4 (146)		_		1
2-1/2BO(-)F 2-1/2BM(-)F	2-1/2 (65)	5 (127)	10 (254)	6-1/2 (165)	8-1/4 (210)	4	3/4 (19)	5-1/2 (140)	2
2-1/2BOSJ 2-1/2BMSJ	2-1/2 (65)	5 (127)	10 (254)	6-1/2 (165)	8-1/4 (210)	4	3/4 (19)	5-1/2 (140)	2
3BO(-)F 3BM(-)F	3 (80)	5-1/4 (133)	10-1/2 (267)	6-3/4 (172)	8-1/4 (210)	4	3/4 (19)	6 (152)	2
3BOSJ 3BMSJ	3 (80)	5-1/4 (133)	10-1/2 (267)	6-3/4 (172)	8-1/4 (210)	4	3/4 (19)	6 (152)	2
3BOSH 3BMSH	3 (80)	5-1/4 (133)	10-1/2 (267)	6-3/4 (172)	8-1/4 (210)	8	3/4 (19)	6-5/8 (168)	2
4BO(-)F 4BM(-)F	4 (100)	7-15/16 (201)	15-7/8 (403)	8-9/16 (218)	12-1/8 (308)	8	3/4 (19)	7-1/2 (190)	4
5BO(-)F 5BM(-)F	5 (125)	9-5/8 (249)	19-1/4 (489)	9-1/2 (241)	13-3/4 (349)	8	7/8 (22)	8-1/2 (216)	6
6BO(-)F 6BM(-)F	6 (150)	9-5/8 (244)	19-1/4 (489)	10 (254)	19 (483)	8	7/8 (22)	9-1/2 (241)	9
8BO(-)F 8BR(-)F	8 (200)	16-1/2 (420)	33 (840)	11 (280)	19-11/16(500) 26-3/4(680)	8	7/8 (22)	11-3/4 (298)	18

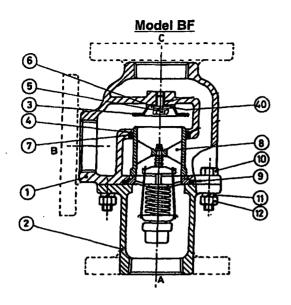

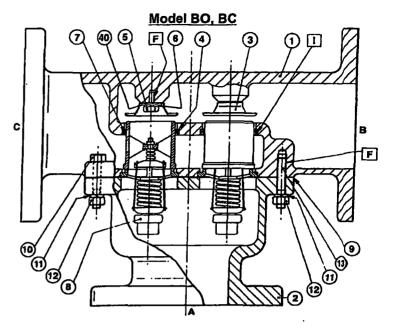

SERVICE PARTS FOR MODELS BO, BC, BF, BH, BM

	<u></u>	
Ref No.	Part No.	Description
3	9585L001	Seat, Bolted-In (Except BM)
3	9585L002	Seat (BM only)
4	1182	Sleeve
5	11132L050	Capscrew
6	11133	Lockwasher
7	1183	Element O-ring, Buna N (Standard)
7	1183L002	Element O-ring Seal, Viton
8	1096X(temp)	Element Assembly (Standard)
8	1096P(temp)	Element Assembly, plated
8	2433X(temp)	Element Assembly, manual override
9	761	O-ring 1-1/2 – 3B, Buna N
9	761L001	O-ring 1-1/2 - 3B, Viton
9	1094	Gasket 2-1/2 B, 3B, (Old Versions)
9	1123	Gasket 4B
9	1117	Gasket 5B
9	1149	Gasket 6B
17	358	O-ring, Buna N (BM only)
17	358L001	O-ring, Viton (BM only)

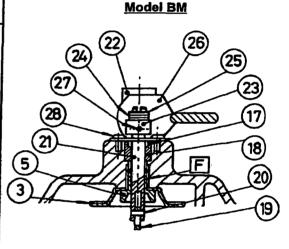

This Parts List effective with Valve Serial No. B941.

#### **MAINTENANCE**

Properly applied and installed, AMOT Thermostatic Valves require practically no maintenance.

If necessary, temperature element assemblies may be easily replaced. Remove Nuts (12) or Bolts (6) and separate the Upper (1) and Lower (2) Housing. Remove Element Assembly (8) and Element O-ring Seal (7). Remove Housing O-ring (9) or Gasket and clean any foreign material from sealing surfaces. Lubricate new Element O-ring Seal (7) with a good grade of petroleum grease and re-insert in the groove in Upper Housing (1). Insert Element Assembly (8) through Element O-ring Seal (7) with a twisting motion. Install Housing O-ring (9) or Gasket around the Element Assembly Flange and bolt on Lower Housing (2).

AMOT designs and tests all its products to ensure that high quality standards are met. For good product life, carefully follow AMOT's installation and maintenance instruction; failure to do so could result in damage to the equipment being protected or controlled.

When communicating with AMOT regarding operation of a control, always give the Model No. and Serial No. If ordering service parts, also include description, part no., and quantity desired. If any parts are ordered by Reference No. only, please include the Form No., Revision No., and date of this brochure.

AMOT Controls Corporation 401 First Street Richmond, CA 94801 Tel: (510) 236-8300 Fax: (510) 234-9950 AMOT Controls Ltd.
Western Way
Bury St. Edmunds IP33 3SZ
Suffolk England
Tel: (01284) 762222
Fax: (01284) 760256

AMOT Controls Corporation 230 Orchard Road # 09-230 Faber House Singapore 238854 Tel: (65) 235-8187 Fax: (65) 235-8869

# Installation Instructions for L150, EL150K1, and **FL150 EX Level SWICHGAGE®s for Engine Liquids**

Revised 0600 Section 15 (00-02-0171)



Please read the following instructions before installing. A visual inspection for damage during shipping is recommended before mounting. It is your responsibility to have a qualified person install the unit.

#### GENERAL INFORMATION



BEFORE BEGINNING INSTALLATION OF THIS MURPHY PRODUCT

- Disconnect all electrical power to the machine.
- ✓ Make sure the machine cannot operate during installation.
- Follow all safety warnings of the machine manufacturer.
- Read and follow all installation instructions.

CAUTION: Certain danger to human and to equipment such as applied in a mobile or marine application may occur if some equipment is stopped without pre-warning. It is therefore, recommended that monitored functions be limited to alarm only or to alarm before shutdown in such applications.

#### Jescription

The L150, EL150K1 and EL150EX Level SWICHGAGE® instruments are a combination liquid level gauge and low limit switch. Each unit includes a float chamber, an indicating pointer, a dial, and a low level contact. When properly installed and maintained, the float operates the pointer which, in turn, both indicates level during normal operation, and closes a switching circuit if the level falls to the low-limit set point.

#### Applications

The primary use of these level SWICHGAGE instruments is for engine cooling systems, surge or expansion tanks, condenser radiator or vapor phase systems, whether pressurized or atmospheric. These instruments can also be used to monitor lube oil, hydraulic fluid or diesel fuel reservoirs and activate alarms and/or shutdown at a predetermined minimum level.

These instruments are built for low pressure systems.


## Cold Weather Warning



BEFORE FREEZING WEATHER COMES, CHECK TO BE SURE YOUR L150 OR EL150 SERIES COOLANT LEVEL SWICHGAGE® IS FILLED WITH ANTIFREEZE SOLUTION


THE SAME AS YOUR ENGINE BLOCK AND RADIATOR. On many engines, such as condenser radiator systems, the coolant in your level SWICHGAGE® remains static until the level falls to drain point. When 'winterizing' it's a good idea to make certain all water drains from your level SWICHGAGE®, to check against clogged connections, and then BE SURE IT


FILLS WITH ANTIFREEZE. FAILURE TO OBSERVE THIS rKECAUTION COULD RESULT IN EQUIPMENT DAMAGE.

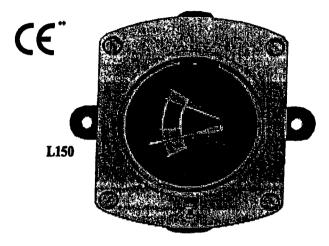


Specifications	L150	EL150K	EL150EX
Case			
Die cast aluminum, polyurethane coated	•	•	
Sand cast aluminum, painted.		1	•
Float			10
• Brass	•	•	
Stainless Steel (AISI 304)			•
Lens			
Polycarbonate	•	•	
Tempered glass			•
O-Rings: Saturated Nitrile, suitable for coolant or hydrocarbons. Maximum temperature 250°F (120°C)	•	•	•
Cover Gasket			
• Neo-cork	•	•	
• Buna			•
Contact Rating			55.0
Pilot duty 2 A @ 30 VAC/DC resistive SPST	•		All and annual features of
• SPDT rated 10 A @ 125 VAC; 0.5 A @ 125 VDC; 10 A @ 30 VDC		•	•
Vent Tube: $1/4 \times 5$ in. (6 $\times$ 127 mm) with fittings.	•	•	•.
Maximum Working Pressure: 25 psi (172 kPa) [1.72 bar]	•	•	•
Electrical Connection	**************************************		100
• (1) 16 AWG x 24 in. (1.5 mm² x 610 mm) with terminals.	•		31.24.2.7 43.2.32.41
• (3) 18 AWG x 14 in. (1.0 mm² x 356 mm)		•	
Terminal Block			•
CSA Listed for Hazardous Location: Class I, Division 1, Groups C & D.			•

<sup>\*\*</sup>Products covered by this literature comply with EMC Council directive 89/336/EEC regarding electromagnetic compatibility except as noted.

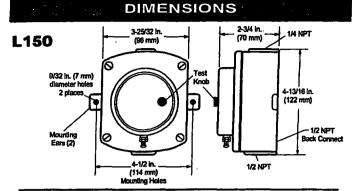

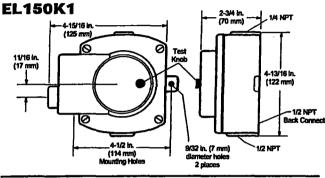


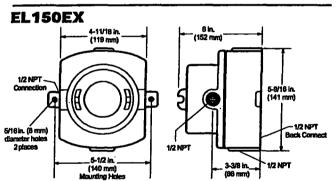

#### PS FITTINGS INSTALLATION

A Murphy PS fitting is used when there is no threaded fitting in the top tank of the radiator to attach tubing for the L150/EL150 series level SWICHGAGE.

- P/N 15-00-0107 (PS) Accepts 1/4 in. (6 mm) O.D. copper tubing.
- P/N 15-01-0167 (PS Barbed) Barbed fitting accepts 1/4 in. (6 mm) I.D. flexible tubing and hose clamp.
- P/N 15-01-0202 (PS-D) Accepts 1/2 in. (13 mm) I.D. hose; 1/4 in. (6 mm) copper tube.
- Determine the entry point into the radiator top tank. See Level SWICHGAGE Installation for proper location. Drill 5/8 in. (16 mm) diameter hole in top tank of radiator. Be sure chips do not fall inside the tank. Remove any burrs on the hole wall.
- 2. Insert the rubber grommet of the PS Blind Hole Fitting. Tighten the jam nut while holding the fitting from turning in the hole. The jam nut will pull the tapered grommet into the hole from the inside of the top tank causing the grommet to expand and seal the hole.
- 3. Attach the appropriate tubing or hose for the PS Fitting.

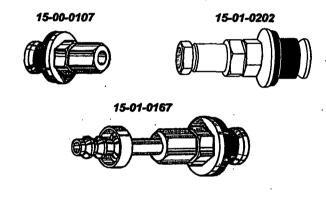

#### LEVEL SWICHGAGE® INSTALLATION



**WARNING:** Perform all installations with the power source "OFF". Be sure engine and radiator have cooled and coolant pressure has been relieved. SEVERE BURNS can result. Never remove radiator cap on a hot engine.

**IMPORTANT:** Operation of the L150/EL150K1 is different for a pressurized cooling system than for an atmospheric (non-pressurized) system. Installation of the L150/EL150K1 is only slightly different for each system. Connection of the top tube connection is the major difference. Differences will be noted in the installation instructions.

## **Installation Notes**

- All top radiator connections must be away from the return hose turbulence.
- 2. All bottom radiator connections must be away from the suction hose.
- The L150/EL150K1 must be attached to a mounting plate on the radiator or other framework.

**CAUTION:** If the L150/EL150K1 is NOT attached to the radiator, use high temperature quality flexible hose for the top and bottom connections to maintain the shock mounting protection for the radiator.

# **Pressurized and Atmospheric Systems**

- 1. Drain the cooling system.
- 2. For a PRESSURIZED COOLING SYSTEM (Figure 1) the shutdown point is determined by the entry point A of the tube connection into the top tank. The engine will shutdown when coolant level drops below this connection (see step 4).

  If the radiator has a SHALLOW UPPER TANK, you can make entry

If the radiator has a SHALLOW UPPER TANK, you can make entry from the top as illustrated in Figure 2. Insert the copper tube until it is slightly above the core. Secure the fitting.


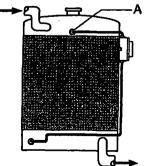


Figure 1: Pressurized System

## LEVEL SWICHGAGE® INSTALLATION (continued)

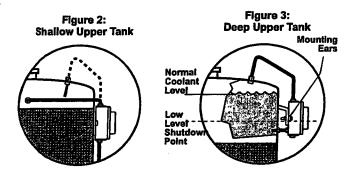

For a PRESSURIZED system the tip of the copper tube will be the shutdown level.

- 3. For ATMOSPHERIC
  (non-pressurized) and
  PRESSURIZED CROSS FLOW
  COOLING SYSTEMS the
  shutdown point is determined by
  the mounting position of the
  L150/EL150K1 relative to the top
  tank of the radiator (see step 5).
- For a PRESSURIZED SYSTEM, determine the point of entry (tube connection) in the radiator top tank (away from the top hose connection). Many radiators have

Low-Lovei Shut-down Point

Figure 4: Atmospheric System

a pipe nipple provided. If a connection is not provided, you must either weld or solder a fitting or use one of the Murphy PS fittings (see *PS Fittings Installation* page 2). This connection should be as close to the radiator core as possible.

For MARINE AND MOBILE EQUIPMENT installations, the top tank connection should be near the vertical centerline of the radiator. This will compensate for changing level due to roll and pitch of the machine during operation.

- 5. For an ATMOSPHERIC SYSTEM a tube connection in the top tank may not be required. Determine the lowest desired level of coolant in the top tank. Mount the L150/EL150K1 so that the mounting ears are approximately 1/4 in. (6 mm) above that level (Figure 3).
  - A back mounting option is available for the L150 and EL150K1 for radiators with fabricated steel top tank and/or for use with some condensor cooling systems.

For an ATMOSPHERIC system install a 1/4 in. (6 mm) diameter tube in the top fitting of the L150/EL150K1. This tube MUST EXTEND ABOVE the top tank. Form the tube into a cane so that the open end of the tube points down but still extends ABOVE the HIGHEST coolant level. The tube can be connected to the top tank if desired. Follow instructions for a PRESSURIZED SYSTEM.

6. For most applications, the bottom tube connection is made at the drain cock. Remove the drain cock and install a brass tee. Reinstall the drain cock into the tee. Attach a copper or other suitable tube to the remaining opening of the tee and to the bottom connection of the L150/EL150K1.

If a drain cock is not provided, you must attach a fitting or use a Murphy PS fitting the same as for the top tank instructions.

- Wire according to appropriate alarm or shutdown circuits (see Standard Electrical Diagrams on page 4).
- 8. Refill the cooling system according to manufacturer's instructions.
- 9. Start the engine and allow it to run until the thermostatopens. Increase engine speed to the FULL operating speed and observe that the indicating pointer remains at or near the full position. If the pointer drops to the LOW position shutdown or alarm will occur due to coolant flow through the L150/EL150K1. If alarm or shutdown occurs, drain the coolant or clamp off the upper and lower hoses.

CAUTION: BE SURE SYSTEM PRESSURE IS RELEVED AND HOT COOLANT CANNOT ESCAPE. Remove the four (4) mounting screws holding the cover assembly. Invert the float clamber so that the 1/2 NPT connection is on top and the 1/4 NPT connection is on bottom. Reinstall the float and cover assembly in the wright position. Install larger I.D. tubing from the top of the float clamber (1/2 NPT) to the radiator top tank. The smaller 1/4 NPT connection on the bottom will restrict coolant outflow from the L150/EL150K1. Check for unrestricted float movement by rotating the switch testknob. Refill the cooling system and repeat step 9.

- 10. Place a catch basin under the drain cock. Open the drain cock and observe that coolant is leaving the radiator.
  - For a PRESSURIZED cooling system, shutdown will occur when coolant drops below the entry point of the top tank tube connection. For an ATMOSPHERIC OR CROSS FLOW PRESSURIZED COOLING SYSTEM, shutdown will occur when coolant drops approximately 1/4 in. (6 mm) below the level of the case mounting ears. If shutdown does not occur, adjust the L150/EL150K1 mounting as described above.

**CAUTION:** DO NOT ALLOW ENGINE TO RUN WHEN COOLANT DRAINS BELOW THE UPPER TANK. ENGINE DAMAGE CAN OCCUR.

11. Periodically test switch operation by rotating the test knob on the face of the L150/EL150K1. Rotating the knob forces the pointer mechanism against the contact screw (L150) or the snap switch actuator (EL150K1).

#### Condensor/Radiator System

 Mount the L150/EL150K1 so that the horizontal center line of the L150/EL150K1 is approximately 1/4 in. (6 mm) above the minimum coolant level in the engine head.

NOTE: On some engines it is possible to use the back connection option and attach the L150/BL150K1 directly to

the engine cylinder. Kits are also available for some engines.

- Attach a copper tube from the top connection of the L150/EL150K1 to the radiator top tank.
- 3. Wire and test the system according to above instructions for Pressurized and Atmospheric systems.

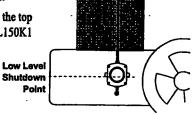


Figure 5: Condensor/Radiator System


3

#### STANDARD ELECTRICAL DIAGRAMS




## **WARNING: PERFORM THE WIRING OPERATION WITH THE POWER SOURCE "OFF".**


## L150

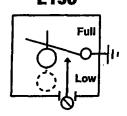

#### **EL150K1**

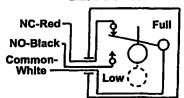

#### EL150EX

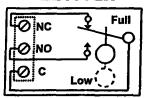


NOTE: All models shown with pointer in full position.

#### **REPAIR KITS**

Repair kits are available for the L150, EL150K1 and EL150EX models. When ordering a repair kit specify model repair kit number from chart below:

Components	Repair Kit No.
All parts except case/body	15-00-0138
Case/body assembly	15-00-0101
All parts except case/body	15-00-0139
Lens and switch assembly	15-00-0100
Case/body assembly	15-00-0101
Cover and float assembly	15-00-0110
Lid assembly	15-00-0108
Switch/Terminal assembly	15-00-0109
	All parts except case/body Case/body assembly All parts except case/body Lens and switch assembly Case/body assembly Cover and float assembly Lid assembly

## Replacing the Float and Cover Assembly for the L150 and EL150K1

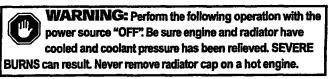

- 1. As applicable, shut off liquid to the SWICHGAGE<sup>®</sup> or drain the system level below the SWICHGAGE<sup>®</sup>.
- 2. Disconnect electrical lead(s), one at a time and tag for reinstallation.
- 3. Disconnect conduit on EL150K1.

- Remove the four screws that secure the float and glass assembly to the case.
- 5. Remove and discard the old float and cover assembly.
- 6. Remove and discard the old gasket.
- 7. Install the new gasket.
- 8. Install the new float and cover assembly and secure it with four screws.
- 9. Re-connect the conduit on EL150K1.
- 10. Re-connect the electrical lead(s).
- As applicable, open valves to the SWICHGAGE<sup>®</sup> or refill the system to proper level.
- 12. Check the SWICHGAGE<sup>®</sup> for proper operation at the full indicating position. (Alarm not operated/engine continues to operate.)
- 13. Check the SWICHGAGE<sup>®</sup>, alarm/shutdown circuit, by rotating the test knob toward the low level point of the dial: alarm is operated/engine shuts down.
- 14. Check for unrestricted float movement by rotating the switch test knob.
- 15. Replacement of the float and cover assembly is complete.



CAUTION: On some high voltage CD ignition systems, it may be necessary to coat the L150 contact screw head with RTV to prevent "tracking" and false operation during wet or high humidity conditions. Use

contact operation during wet or high humidity conditions. Use of the EL150K1 is recommended in these cases.

## Warning

A two year limited warranty on materials and workmanship is provided with this Murphy product.

Details are available on request and are packed with each unit.



P.O. Box 470248

Tutsa, Oktahoma 74147 USA
(918) 627-3550

fax (918) 664-6146

e-mail sales@fwmurphy.com

www.fwmurphy.com

CONTROL SYSTEMS & SERVICES DIVISION P.O. Box 1819; Rosenberg, Texas 77471; USA (281) 342-0297 fax (281) 341-6006 e-mail sales@fwmuphy.com

MURPHY DE MEXICO, S.A. DE C.V.
Blvd. Antonio Rocha Cordero 300, Fracción del Aguaje
San Luis Potosi, S.L.P.; México 78384
+52-48-206264 fax +52-48-206336
e-mail ventasmex@murphymex.com.mx

FRANK W. MURPHY, LTD.

Church Rd.; Laverstock, Salisbury SP1 102; U.K. +44 1722 410055 fax +44 1722 410088 e-mail sales@farmurphy.co.uk www.farmurphy.co.uk

For Service in French:
Pour service en francais:
+44 1722 410697 fax +44 1722 410688
e-mail france@fumurphy.co.uk
www.fumurphy.co.uk/francais.htm

MURPHY SWITCH OF CALIFORNIA 41343 12th Street West Palmdale, California 93551-1442; USA (661) 272-4700 fax (661) 947-7570

(661) 272-4700 fax (661) 947-7570 e-mail sales@murphyswitch.com www.murphyswitch.com

MACQUARRIE CORPORATION
1620 Hume Highway;
Campbellfield, Vic 3061; Australia
+61 3 9358-5555 fax +61 3 9358-5558
e-mail murphy@macquarrie.com.au