

Date: 03/22/2016

Project: Keystone Pipeline Project

25472-101-V1A-JF00-W0010

Supplier Document Status

Code 4

Code 1 = Work may proceed, submit certified print.

Code 2 = Revise and resubmit. Work may proceed subject to resolution of indicated comments

Code 3 = Revise and resubmit. Work may not proceed. Code 4 = Review not required. Work may proceed.

Permission to proceed does not constitute acceptance or approval of design details, calculations, analyses, test methods, or materials developed or selected by the Supplier and does not relieve the Supplier from full compliance with contractual obligations.

Responsible Engineer - Bata_Diane Date Signed -2016/03/28

VPTL -

Equipment No. - NA

Document Title INSTALLATION OPERATION MANUAL Document Number 25472-101-V1A-JF00-W0010 Purchase Order 25472-101-POA-JF00-W0001 Equipment Tag (s) view pages 2 and 3	
Purchase Order 25472-101-POA-JF00-W0001 Equipment Tag (s) view pages 2 and 3	
Equipment Tag (s) view pages 2 and 3	
Document Revision: 2	
Comments	

Instrument Tag List	FLOW TRANSMITTER	DATASHEET No.	SHT 2
		25472-101-JFD-JF00-W0001	04
Tag Number	P & ID Number	Line/Equipment Numbe	751
121-HRDBP-B2-FT-1025	TMPL-01-00-02-027	B2-MP-02	
2 121-HRDBP-B2-FT-1026	TMPL-01-00-02-027	B2-MP-02	
3 121-HRDBP-B3-FT-1035	TMPL-01-00-02-027	B3-MP-03	
121-HRDBP-B3-FT-1036	TMPL-01-00-02-027	B3-MP-03	
5 121-HRDBP-B4-FT-1045 6 121-HRDBP-B4-FT-1046	TMPL-01-00-02-027	B4-MP-04 B4-MP-04	
121-HRDBP-B5-FT-1055	TMPL-01-00-02-027 TMPL-01-00-02-027	B5-MP-05	
121-HRDBP-B5-FT-1056	TMPL-01-00-02-027	B5-MP-05	
122-LKSDE-B1-FT-1015	TMPL-01-00-02-027	B1-MP-01	
0 122-LKSDE-B1-FT-1016	TMPL-01-00-02-027	B1-MP-01	
1 122-LKSDE-B2-FT-1025	TMPL-01-00-02-027	B2-MP-02	
2 122-LKSDE-B2-FT-1026	TMPL-01-00-02-027	B2-MP-02	
3 122-LKSDE-B3-FT-1035	TMPL-01-00-02-027	B3-MP-03	
4 122-LKSDE-B3-FT-1036	TMPL-01-00-02-027	B3-MP-03	
5 123-MTRSP-B1-FT-1015	TMPL-01-00-02-027	B1-MP-01	
123-MTRSP-B1-FT-1016	TMPL-01-00-02-027	B1-MP-01	
7 123-MTRSP-B2-FT-1025	TMPL-01-00-02-027	B2-MP-02	
3 123-MTRSP-B2-FT-1026	TMPL-01-00-02-027	B2-MP-02	
9 123-MTRSP-B3-FT-1035	TMPL-01-00-02-027	B3-MP-03	
123-MTRSP-B3-FT-1036	TMPL-01-00-02-027	B3-MP-03	
1 124-OYENS-B1-FT-1015	TMPL-01-00-02-027	B1-MP-01	
2 124-OYENS-B1-FT-1016 3 124-OYENS-B2-FT-1025	TMPL-01-00-02-027	B1-MP-01	
124-OYENS-B2-F1-1025	TMPL-01-00-02-027 TMPL-01-00-02-027	B2-MP-02 B2-MP-02	
124-OYENS-B2-FT-1026	TMPL-01-00-02-027	B3-MP-03	
124-OYENS-B3-FT-1036	TMPL-01-00-02-027	B3-MP-03	
125-BDLSS-B1-FT-1015	TMPL-01-00-02-027	B1-MP-01	
3 125-BDLSS-B1-FT-1016	TMPL-01-00-02-027	B1-MP-01	
125-BDLSS-B2-FT-1025	TMPL-01-00-02-027	B2-MP-02	
125-BDLSS-B2-FT-1026	TMPL-01-00-02-027	B2-MP-02	
1 125-BDLSS-B3-FT-1035	TMPL-01-00-02-027	B3-MP-03	
2 125-BDLSS-B3-FT-1036	TMPL-01-00-02-027	B3-MP-03	
126-FXVLY-B1-FT-1015	TMPL-01-00-02-027	B1-MP-01	
126-FXVLY-B1-FT-1016	TMPL-01-00-02-027	B1-MP-01	
126-FXVLY-B2-FT-1025	TMPL-01-00-02-027	B2-MP-02	
126-FXVLY-B2-FT-1026	TMPL-01-00-02-027	B2-MP-02	
126-FXVLY-B3-FT-1035	TMPL-01-00-02-027	B3-MP-03	
126-FXVLY-B3-FT-1036	TMPL-01-00-02-027	B3-MP-03	
127-PIAPT-B1-FT-1015 127-PIAPT-B1-FT-1016	TMPL-01-00-02-027	B1-MP-01	
	TMPL-01-00-02-027	B1-MP-01	
127-PIAPT-B2-FT-1025	TMPL-01-00-02-027	B2-MP-02	
127-PIAPT-B2-FT-1026 127-PIAPT-B3-FT-1035	TMPL-01-00-02-027 TMPL-01-00-02-027	B2-MP-02 B3-MP-03	
127-PIAPT-B3-FT-1035	TMPL-01-00-02-027	B3-MP-03	
128-GRSSY-B1-FT-1015	TMPL-01-00-02-027	B1-MP-01	
128-GRSSY-B1-FT-1016	TMPL-01-00-02-027	B1-MP-01	
128-GRSSY-B2-FT-1025	TMPL-01-00-02-027	B2-MP-02	
128-GRSSY-B2-FT-1026	TMPL-01-00-02-027	B2-MP-02	
128-GRSSY-B3-FT-1035	TMPL-01-00-02-027	B3-MP-03	
128-GRSSY-B3-FT-1036	TMPL-01-00-02-027	B3-MP-03	
121-HRDBP-B1-FT-1015	TMPL-01-00-02-027	B1-MP-01	
121-HRDBP-B1-FT-1016	TMPL-01-00-02-027	B1-MP-01	
121-HRDBP-B6-FT-1065	TMPL-01-00-02-027	B6-MP-06	
121-HRDBP-B6-FT-1066	TMPL-01-00-02-027	B6-MP-06	
122-LKSDE-B4-FT-1045	TMPL-01-00-02-027	B4-MP-04	
122-LKSDE-B4-FT-1046	TMPL-01-00-02-027	B4-MP-04	
122-LKSDE-B5-FT-1055	TMPL-01-00-02-027	B5-MP-05	
122-LKSDE-B5-FT-1056	TMPL-01-00-02-027	B5-MP-05	
123-MTRSP-B4-FT-1045	TMPL-01-00-02-027	B4-MP-04	
123-MTRSP-B4-FT-1046	TMPL-01-00-02-027	B4-MP-04	

	Instrument Tag List	FLOW TRANSMITTER	DATASHEET No. R 25472-101-JF0-JF00-W0001
	Tag Number	P & ID Number	Line/Equipment Number
31	123-MTRSP-B5-FT-1055	TMPL-01-00-02-027	B5-MP-05
	123-MTRSP-B5-FT-1056	TMPL-01-00-02-027	B5-MP-05
	124-OYENS-B4-FT-1045	TMPL-01-00-02-027	B4-MP-04
	124-OYENS-B4-FT-1046	TMPL-01-00-02-027	B4-MP-04
	125-BDLSS-B4-FT-1045	TMPL-01-00-02-027	B4-MP-04
	125-BDLSS-B4-FT-1046	TMPL-01-00-02-027	B4-MP-04
	125-BDLSS-B5-FT-1055	TMPL-01-00-02-027	B5-MP-05
	125-BDLSS-B5-FT-1056	TMPL-01-00-02-027	B5-MP-05
	126-FXVLY-B4-FT-1045	TMPL-01-00-02-027	B4-MP-04
	126-FXVLY-B4-FT-1046	TMPL-01-00-02-027	B4-MP-04
	126-FXVLY-B5-FT-1055	TMPL-01-00-02-027	B5-MP-05
	126-FXVLY-B5-FT-1056	TMPL-01-00-02-027	B5-MP-05
	127-PIAPT-B4-FT-1045	TMPL-01-00-02-027	B4-MP-04
	127-PIAPT-B4-FT-1046	TMPL-01-00-02-027	B4-MP-04
	127-PIAPT-B5-FT-1055	TMPL-01-00-02-027	B5-MP-05
	127-PIAPT-B5-FT-1056	TMPL-01-00-02-027	B5-MP-05
	128-GRSSY-B4-FT-1045	TMPL-01-00-02-027	B4-MP-04
	128-GRSSY-B4-FT-1046	TMPL-01-00-02-027	B4-MP-04
	128-GRSSY-B5-FT-1055	TMPL-01-00-02-027	B5-MP-05
	128-GRSSY-B5-ET-1056	TMPL-01-00-02-027	B5-MP-05
1			
1			
1			
1			
+			
1			
+			
1			
+			
1			
+			
1			
ł			
t			
Į			
t			
ļ			
ł			
İ			
ŀ			
t			
ļ			
ł			
İ			
f			
ł		= 1	
1			
l	tional Comments:	_	
	Some Somments.		
_			
-			

Product Manual



CLASSIC 800 Series

Thermal Flow, Level, Interface & Temperature Switches & Transmitters













NOTICE

Read this manual before working with the product. For personal and system safety, and for optimum product performance, make sure you thoroughly understand the contents before installing, using or maintaining this product.

For equipment service or support needs, please contact your local Kayden representative.

CAUTION

The products described in this document are NOT designed for nuclear qualified applications.

| i |

Table of Contents

1. INTRODUCTION	
Technical Specs	1
Overview of Switch Transmitter Setup	3
Models Described in This Manual	4
CLASSIC 800 Electronics	5
Typical Applications	5
I. THE KAYDEN CLASSIC 800 - DIGITAL ELECTRONICS FEATURES	6
II. PRINCIPLE OF OPERATION (Flow & Level)	7
III. THERMAL SIGNAL	8
IV. 4-20 mA ANALOG OUTPUT	9
2. INSTALLATION GUIDELINES	
I. GENERAL	10
II. APPLICATION CONSIDERATIONS	
Application Considerations - Flow	11
Application Principles - Flow, Level, Interface & Temperature	11
Application Considerations - Level	12
Application Considerations - Interface	12
III. GUIDELINES FOR PIPE MOUNTING	
Horizontal Pipe - Side Mount (Ideal)	13
Horizontal Pipe - Top Mount	13
Horizontal Pipe - Bottom Mount	13
Vertical Pipe - Side Mount (Acceptable)	14
Vertical Pipe - Side Mount - Downward Flow	14
Vertical Pipe - Top & Bottom Mount (Less Desirable)	14
IV. INSTALLING THE SENSOR	15
V. ELECTRICAL	16
Wiring Connection Diagram	18
VI. TESTING THE INSTALLATION	19
3. SETUP & OPERATION	
Display Panel Indicators	20
Display Panel Button Functions	20
I. GENERAL INFORMATION	21
II. CONTROL SETTINGS and SETUP PROCEDURES	21
1. View or Adjust Relay 1 & 2 Energized Mode	22
Fail-safe Relay Configuration	23
2. View or Adjust the 4-20 mA Fault Mode Configuration	24
3. View or Adjust Set Points 1 & 2	25
4. View or Adjust the Start-up Bypass Timer	26
5. View or Adjust the Heater Power	27
6. View or Adjust the Node Address & View the Software Revision	28
7. View or Adjust the 4-20 mA Output Configuration (Forward or Reverse)	29
8. View or Adjust the 0% & 100% Thermal Signal Scaled Bar Graph View	30

KAYDEN° | Table of Contents

	9. View or Adjust the 0% & 100% Thermal Signal LEDs:	31
	Kayden RCM Software	32
	RS-485 Remote Communications	33
	Kayden Converters/Adapters - USB to RS-232 & RS-232 to RS-485	33
	Communications Cable	33
4	QUICK SETUP GUIDE	34
₹.	Mechanical Installation	34
	Sensor Orientation	34
	Setup & Configuration Flow Chart	35
	Display Panel Indicators	
		36
	Display Panel Button Functions	36
	Power AC/DC	37
	Relay Outputs	37
	Heater Power	37
5.	MAINTENANCE	
	1. Spin Cover	38
	2. Process and Conduit Connections	38
	3. Sensing Elements	38
	4. Electronics Module	38
	5. Adjustment & Calibration	39
	6. Preventative Maintenance Requirements	39
6	BINARY TABLE	40
		70
7.	TROUBLESHOOTING	
	LED Fault Indicator	41
	How to Reset the Switch/Transmitter to Factory Settings	42
	Resistance Values for Sensor Wiring	43
	Return of Material	44
	Hazardous Materials	44
	Service, Technical Support & Contact Information	44
8.	GLOSSARY	45
AP	PPENDIX A - OUTLINE DIMENSIONAL DRAWING	4.0
	CLASSIC 810 Threaded	46
	CLASSIC 812 Flanged	46
	CLASSIC 828 Sanitary Flanged	46
	CLASSIC 821 Threaded (Single Probe)	47
	CLASSIC 830 In-Line Threaded (Horizontal)	47
	CLASSIC 830 In-Line Threaded (Vertical)	47
	CLASSIC 832 In-Line Flanged (Horizontal)	48
	CLASSIC 832 In-Line Flanged (Vertical)	48
	CLASSIC 816 Retractable Packing Gland - 1" MNPT - to 50 psi	48
	CLASSIC 816 Retractable Packing Gland - 1" MNPT - c/w Security Chain - to 125 psi	49
	CLASSIC 816 Retractable Packing Gland - 1" MNPT - to 500 psi	49
	CLASSIC 814 Retractable Packing Gland Flanged - to 50 psi	49
	CLASSIC 814 Retractable Packing Gland Flanged - to 500 psi	50

CL ACCIC O

KAYDEN° | Table of Contents

\sim	LASSIC	ו חחסי	Drad	luct I	Manual	i.
·	LASSIL	, ouu i	-100	IUGLI	wanuai	ı

	Remote Electronics Enclosure - Explosion-proof (CSA)
	Remote Electronics Enclosure - Flameproof (FM)
	CLASSIC 825 Flanged MultiPoint (2 & 3 Point)
	CLASSIC 825 Flanged MultiPoint (4 Point)
APF	PENDIX B - MODEL NUMBER LEGENDS
	CLASSIC 810 Threaded
	CLASSIC 812 Flanged5
	CLASSIC 821 Threaded (Single Probe)5
	CLASSIC 830 In-Line Threaded
	CLASSIC 832 In-Line Flanged5
	CLASSIC 816 Threaded Retractable Packing Gland
	CLASSIC 814 Flanged Retractable Packing Gland
	CLASSIC 828 Sanitary Flanged
	CLASSIC 825 MultiPoint Flanged
	CLASSIC 625 Multirollit Flatigeu
APF	PENDIX C - kayden.com WEB SITE 6
Con	tact Us, Distributors and Ordering Information6
TAE	BLE OF FIGURES
	Figure 1 - CLASSIC 800 Display Panel
	Figure 2 - How Thermal Conductivity is Displayed
	Figure 3 - 4-20 mA Wiring
	Figure 3a - Pump Flow Detection
	Figure 4 - Threadolet
	Figure 5 - Insertion 'U' Length
	Figure 6a - Horizontal Pipe, Side Mounting
	Figure 6b - Horizontal Pipe, Top/Bottom Mounting
	Figure 7 - Horizontal Pipe, Sensor Positioning
	Figure 8 - Flow Direction, Vertical Pipe
	Figure 9 - Sensor Orientation for Horizontal Flow & Level
	Figure 10 - Disconnecting Sensor Connector from Electronics Module
	Figure 11 - CLASSIC 800 Mounting Base Plate / Wiring Terminal
	Figure 12 - CLASSIC 800 Wiring Connection Diagram
	Figure 13 - CLASSIC 800 Display Panel
	Figure 14 - Control Functions RUN/SET Mode
	Figure 15 - Relay Energized Mode
	Figure 16 - 4-20 mA Fault Mode Configuration
	Figure 17 - Set Point 1 & 2 Configuration
	Figure 18 - Start-up Bypass Timer
	Figure 19 - Setting the Heater Power
	Figure 20 - Software Revision & Node (Unit) Number
	Figure 21 - 4-20 mA Output Mode
	Figure 22 - Scaled Bar Graph View vs. Baseline Bar Graph View
	Figure 23 - Setting 0% & 100% Thermal Signal
	Figure 24 - Factory Reset
	rigure 29 - Display Fallet Illulcators

CLASSIC™ 800 Specifications

Applications:

• Flow, Level, Interface & Temperature

Process Connections:

- 1/2", 3/4", 1", 1 1/4", 1 1/2" & 2" MNPT
- 1/4" MNPT Single Probe
- 3/4" FNPT & Flanged In-Line
- Flanged & Sanitary 1" to 3.5" Tri-Clamp®
- Threaded (1" MNPT) & Flanged Retractable Packing Glands

Insertion 'U' Lengths: (Dual Probe Sensors)

Imperial:

1.2", 2", 3", 4", 6", 9", 12" & 18" standard Model 828 (Sanitary) - 2", 3", 4" & 6" only

Metric

3, 5, 7.5, 10,15, 23, 30 & 45 cm standard Model 828 (Sanitary) - 5, 7.5, 10 & 15 cm only

• Custom Lengths:

Available in 1/2" or 1 cm increments Min. 1.2" - Max. 120" (6.0 - 305 cm)

Note: 1/2" & 3/4" MNPT connections-Max.'U' Length=36"

Insertion 'U' Lengths: (Single Probe Model 821)

• Imperial:

2", 3", 4" & 6" standard

Metric:

5, 7.5, 10 & 15 cm standard

Wetted Materials:

- 316L Stainless Steel standard
- Titanium Gr. 2, Hastelloy® C-276, Monel® 400, Inconel® 600, Alloy 20, Nickel 200
- 316L Stainless Steel c/w Nickel Braze (830 & 832 In-Line Models)
- Highly Saturated Nitrile (Pressure Seal - 814 & 816 Packing Gland Models)

Enclosure Material:

- Copper-free aluminum (does not exceed 0.4% copper)
- Powder coated Polyester TGIC (polyester triglycidyl isocyanurate)
- NEMA 4X / Type 4 / IP55
- 1" FNPT Conduit Connection
- Buna O-ring on cover

Temperature Range – Continuous Service:

Sensors:

-67°F to +392°F (-55°C to +200°C) (Models 814 & 816: -40°F to +320°F [-40°C to +160°C])

• Electronics:

-67°F to +149°F (-55°C to +65°C)

Note: For temperatures above +167°F (+75°C) electronics must be remotely mounted.

Storage:

 -67° F to $+167^{\circ}$ F (-55 $^{\circ}$ C to $+75^{\circ}$ C)

Operating Pressure - Sensor:

Threaded Style:

 Maximum Working Pressure: 24 MPa (3500 psig) at 70°F (21°C) Derated with temperature

Flanged Style:

 Maximum Working Pressure: per flange rating

Sanitary Tri-Clamp® Style:

 Maximum Working Pressure: 1723 kPa (250 psig) at 70°F (21°C)

Switch / Transmitter Switch Point Range (Insertion Style - 1/4" to 2"MNPT, Flanged):

Water-based Liquids:

0.01 to 3.0 ft./sec. (0.003 to 0.9 meters/sec.)

Hydrocarbon-based Liquids:

0.01 to 5.0 ft./sec. (0.003 to 1.5 meters/sec.)

Gases:

0.25 to 254 sfps (0.076 to 77 smps) Standard conditions: 70°F (21°C) at 14.7 psi (1 atm)

Switch / Transmitter Switch Point Range (In-Line Style):

Water-based Liquids:

0.015 to 50 cc/sec.

Hydrocarbon-based Liquids:

0.033 to 110 cc/sec.

Gases:

0.6 to 20,000 cc/sec. Standard conditions: 70°F (21°C) at 14.7 psi (1 atm)

Accuracy:

Flow Service:

±1% set point velocity over operating range of ±50°F (±28°C)

• Level Service:

±0.25 inches (±0.64 cm)



CLASSIC™ 800 Specifications

Response Time:

• Approximately 0.5 to 30 seconds

Remote Electronics Option:

- Maximum recommended cable length 200 feet (60 m)
- Cable type 24 AWG minimum twisted pairs

Heater Power:

· Field adjustable to optimize performance

Input Power:

- Universal Power standard
 12-24 VDC and 115-230 VAC, 50-60 Hz
- Consumption: Maximum: 4.8 watts (fully configured)

Outputs:

- 4-20 mA current loop
- Two (2) SPDT sealed relay contacts rated @ 5 amps resistive 230 VAC or 30 VDC Max.; individually adjustable

Start-Up Bypass Timer:

· Adjustable for 0 to 100 seconds

Communications:

• Modbus via RS-485

RCMS (Remote Control & Monitoring Software) Functions and Features:

- · Display Panel Lock-Out
- Set Points configuration¹
- Relay Actuation Delay Timer (Classic series only)
 - Independently configurable for both On and Off, increasing or decreasing
 - Adjustable from 0 5,000 seconds
- Start-up Bypass Timer¹
 - Adjustable from 0 100 seconds
- Relay Mode Configuration¹
 - Energized above or below set point
- Relay Temperature Mode Configuration (Classic series only)
- Heater Power setting¹
- Zero and Span settings¹ (Classic series only)
- Analog (4-20 mA) output configuration¹
- View and Print Graphing (Trend) function
- Configuring settings; write to device, save to file and print
- Fault Event Log (Classic series only)

Note: 1 Also configurable from Display Panel

Diagnostics:

- Primary watchdog circuit monitors microprocessor parameter anomalies
- Secondary watchdog circuit monitors microprocessor health
- Heater monitored for out-of-range conditions
- Fault Mode de-energizes relay(s) and halts power to the heater

Agency Approvals:

CSA - ANSI/UL

Class I, Div. 1, Groups B, C and D; Ex d IIB + H₂; AEx d IIB+H₂ (Class I, Zone 1, Group IIB + H₂,) T3; Enclosure Type 4 / IP55



Single Seal Approval

Per ANSI/ISA 12.27.01-2003

CRN

(Canadian Registration Number): 0F09437.215

FM

Class I, Div. 1, Groups B, C and D; Class I, Zone 1, AEx d IIB+H₂ T2D (Ta=75°C); T3 (Ta=65°C); Enclosure Type 4 / IP55



Weights and Dimensions:

- 810 Threaded: 2" U length 7 lbs (3.18 kg)
- Carton Size 15" x 5" x 6" (38 cm x 13 cm x 15 cm)
- Other models/sizes consult Kayden

Warranty:

• Three (3) Years from shipment date from factory (see Terms & Conditions on kayden.com for details)

Overview of Switch Transmitter Setup

1. Warm up

At initial start-up or restart allow approximately 90 seconds for the heater element to warm up and the switch/transmitter to stabilize before making any adjustments.

2. Primary Settings

The following are the basic configurations for the CLASSIC 800 Series Electronics Modules:

- 1. Relay 1
- 2. Relay 2
- 3. Set Point 1
- 4. Set Point 2
- 5. Heater Power
- 6. 0% & 100% Thermal Signal

3. Secondary Settings

The following are the additional configurations:

- 1. 4-20 mA Fault Configuration
- 2. Startup Bypass Timer
- 3. Node Address & Software Revision
- 4. 4-20 mA Configuration

Notes			

1

Introduction

Models Described in this Manual

This manual describes the following CLASSIC 800 Series Switches and Transmitters:



CLASSIC 810 Threaded - Insertion Style - 1/2", 3/4", 1", 1 1/4", 1 1/2" & 2" MNPT.



CLASSIC 812 Flanged - Insertion Style - 1" ANSI 150 through 10" ANSI 2500 Flanges.



CLASSIC 814 Flanged Retractable Packing Gland - Insertion Style - 1 1/2" ANSI 150 through 10" ANSI 2500 Flanges.



CLASSIC 816 Threaded Retractable Packing Gland - Insertion Style - 1" MNPT.



CLASSIC 821 Threaded (Single Probe) - Insertion Style - 1/4" MNPT.



CLASSIC 828 Sanitary Flanged - Insertion Style - 1", 1.5", 2", 2.5" & 3" Tri-Clamp® Flanges.



CLASSIC 830 Threaded - InLine Style - 3/4" FNPT.



CLASSIC 832 Flanged - InLine Style - 3/4" ANSI 150 through 10" ANSI 2500 Flanges.

CLASSIC 800 Electronics

Display Panel & Intelligent User Interface

The Kayden CLASSIC 800 Electronics Module is designed to be easy to install and adjust while displaying several control functions. All Kayden CLASSIC 800 Electronics Modules feature:

- Universal Power Input
- Continuous Self-test diagnostics with Fault Indicator Start-up Bypass Timer
- Easy setup; no jumpers or trim pots
- Incrementally adjustable heater power, range and relay set points.
- 4-20 mA Analog Output
- True Temperature Compensation

All CLASSIC 800 series switches/transmitters use the same Electronics Module making it a universal spare part. The Electronics Module is easily installed in the field without returning the entire switch/transmitter to the factory.

KAYDEN Thermal Signal

Figure 1 - CLASSIC 800 **Display Panel**

Display Panel Indicators:

Relay 1	On steady when Relay 1 is energized
Relay 2	On steady when Relay 2 is energized
Fault	Indicates a self-test error or fault condition
Set Point 1	On steady when viewing Set Point 1
Set Point 2	On steady when viewing Set Point 2
Run Mode	Flashing when switch/transmitter is operating
Bypass	Flashing when the Start-up Bypass Timer is active
Thermal Signal	Displays Thermal Signal

The Thermal Signal increases as:

Level	The sensor is submerged
Interface	The sensor is submerged by the second liquid of greater thermal conductivity

The flow rate increases

Typical Applications

Flow

- Pump Protection Dry Alarm
- Leak Detection
- Flow Monitoring & Verification
- Tank Overflow Protection
- Flare Gas Monitoring
- Monitoring Purge Air Flow
- Drain Line Flow
- Interface Control in Separation Vessels
- High Pressure Flows
- Lube Oil Systems
- Vent Monitoring
- Natural Gas to Boilers

- **Emergency Eye Wash Stations**
- Tanker Loading & Unloading
- Relief Valve & Rupture Disk Flow Monitoring
- Remote Indication of Flow via Analog Output & Digital Communications
- Liquids, Air & Gases
- Slurries
- Interface Detection
- Corrosive Liquids
- Hazardous & General-Purpose Areas
- Interface Control & Level Detection in Settling Vessels
- Chemical Injection/Additive Flow Monitoring

I. THE KAYDEN CLASSIC 800 - DIGITAL ELECTRONICS FEATURES

The CLASSIC 800 is versatile, rugged, cost effective and easy to use. All setup and adjustments may be performed using the Display Panel buttons. The CLASSIC 800's Display Panel displays process condition (flow, level & interface) via the Thermal Signal Bar Graph as well as Relay state, Timer functions and operating conditions via individual LEDs. The CLASSIC 800 may also be remotely controlled and/or monitored via RS-485 using the Kayden RCM (Remote Control & Monitoring) Software and the Serial Communication Adapter (SCA) and communication cable.

Kayden's CLASSIC 800 series uses an advanced microprocessor to perform continuous **self-test diagnostics** on the Electronics Module and the sensor elements.

- Any open or shorted connection will result in an error indication that also opens all output contacts and disables the heater circuitry.
- An internal watchdog circuit ensures that the microprocessor code is performing as expected and a
 secondary external watchdog circuit ensures that the microprocessor itself is functioning. Both
 circuits force the contacts open, illuminate the Fault LED and turn the heater off and de-energize
 the relays in the event of a malfunction. This prevents the heater running out-of-control that would
 result in excessive temperatures on the probe or a burnt-out heater.
- The microprocessor also monitors the heater for out-of-range conditions. For example in a level
 application when the sensor is "dry" for an extended period of time, the heater will cycle between
 its current setting and a lower power rating until such time as the sensor is again submerged.

II. PRINCIPLE OF OPERATION

Kayden sensors incorporate two thin-film platinum Resistance Temperature Detectors (RTDs) and a separate heater element. The Reference RTD senses the actual process condition (as temperature). Heat is applied to the Active RTD by the heater element which is controlled by the microprocessor.

The microprocessor makes continuous comparisons between the temperature readings from the Reference RTD and the Active RTD (values stored as a result of setup programming). As process conditions change, for example increased velocity in a flow application, the Reference RTD "senses" the change and the microprocessor adjusts the heater and changes the relay state if required.

The CLASSIC 800 can be setup with a narrow range to detect very low flows or very small changes in the process, or with a wider range to ignore small fluctuations. The CLASSIC 800 series switches and transmitters are digital devices and will not require calibration. By design they cannot drift or change in any way unless they suffer physical damage. After correct setup, the CLASSIC 800 will be stable and repeatable under stable process conditions.

The CLASSIC 800 may be setup in the field by the user for flow, level or interface with air, gases, liquids or slurries. The CLASSIC 800 may be setup to display process temperature through the RCM Software while functioning as a flow, level or interface switch/transmitter.

Flow / No Flow - When the velocity of the process media is low or nonexistent, less thermal energy (heat) is dissipated from the heated sensor. As the velocity increases the amount of energy dissipated by the process media increases, thereby increasing the Thermal Signal.

> The Thermal Signal is smallest (left-most LED illuminated) in a no-flow state and increases (LED moves to the right) as flow increases (see Figure 2).

Liquid Level

- Air and other gases do not dissipate heat as well as liquids. Therefore, the Thermal Signal is smallest when in a process that does not dissipate heat well (air dissipates heat slower than water).

The Thermal Signal is smallest (left-most LED illuminated) in a dry, motionless state and increases as the fluid covers the sensor (see Figure 2).

Interface

Liquid Level / - The CLASSIC 800 can be setup to detect the difference between most liquids if there is very little or no velocity and each material has a unique thermal property (for example oil and water in a knockout tank).

KAYDEN[®] | Introduction

III. THERMAL SIGNAL

The CLASSIC 800 senses changes to the temperature differential as changes occur in the process. The "value" being sensed and displayed as the Thermal Signal is the rate of thermal dispersion. Assuming the added energy from the heater is a constant, the formula that determines the Thermal Signal has only two variables:


- 1) The thermal conductivity of the process media, and
- 2) The velocity of the process media past the sensor.

The relationship between Thermal Signal and velocity is non-linear. When one of these variables is constant in a given application, the value of the other variable can be monitored by the CLASSIC. The Thermal Signal Bar Graph displays Flow & Level as a percentage of the switch/transmitter's full scale capability.

Figure 2 below illustrates the **Thermal Signal** LED indicators moving to the right as process velocity increases. Assuming a constant heater power and a consistent process media, as the velocity of the process increases so does the **Thermal Signal**, represented by movement of the illuminated LED to the right.


For example, if the left-most LED is illuminated on the **Thermal Signal Bar Graph**, then a minimum amount of heat is being carried away by the process based on the current settings. If the right-most LED is illuminated on the **Thermal Signal Bar Graph** this indicates the maximum amount of heat is being carried away by the process based on the current settings.

No Flow or Dry (Level)

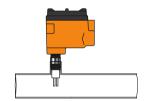


 no flow or flow is far below Set Point




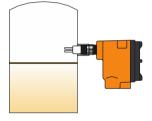


level of process is below sensor

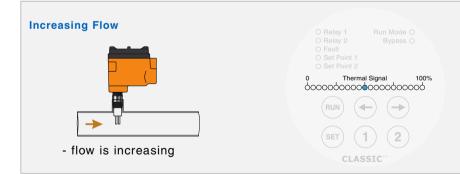

Maximum Flow or Wet (Level)

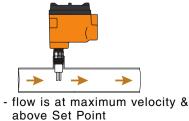



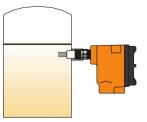


level of process is above sensor

Figure 2 – How Thermal Conductivity is Displayed

IV. 4-20 mA ANALOG OUTPUT

The 4 to 20 mA analog output signal is relative to the Thermal Signal displayed on the Thermal Signal Bar Graph. The 0% to 100% of Thermal Signal corresponds to 4-20 mA or 20-4 mA. **Refer to View or Adjust the 4-20 mA Output** for programming this option.

- The 4-20 mA output signal corresponds to the scaled Thermal Signal view as determined by the range (LED-0 and LED-100 pointers).
- The 4-20 mA signal may be displayed either as forward-acting (ascending 4-20 mA) or reverse-acting (descending 20-4 mA).
- To view or adjust the 4-20 mA output current configuration: (refer to the Section 3, "View or Adjust the 4-20 mA Output Configuration (Forward or Reverse)" or the "CLASSIC 800 Series Quick Setup Guide"

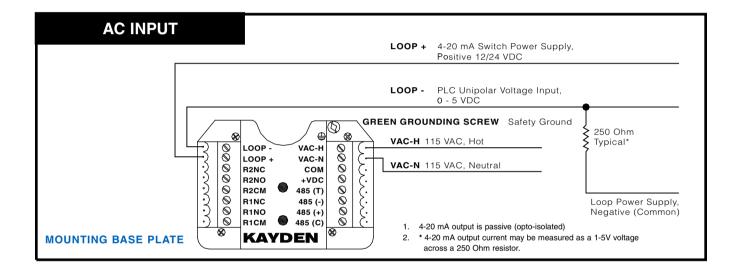

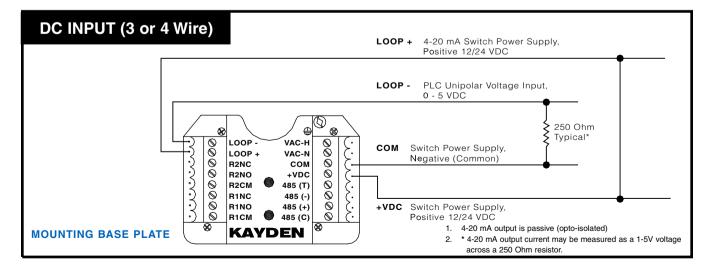


Figure 3 - 4-20 mA Wiring

2

Installation Guidelines

I. GENERAL

Kayden electronics are designed to be universal for flow, level, interface and temperature applications and with most liquids, gases and slurries. The user can take advantage of this flexibility through:

- · Correct setup of the electronics and
- · Proper physical installation of the sensor.

Location:

- Consider the need for easy access in order to view the operation and make any required field adjustments.
- Provide at least 12 inches (30 cm) clearance if possible to allow access for setup and viewing after installation.

Shock and Vibration:

 Install the switch/transmitter so as to minimize any effects due to vibration, shock and extreme temperatures.

Temperature:

- The continuous operating temperature limits of the Electronics Module is -55°C to +65°C (-67°F to +149°F). Ambient temperatures in excess of +65°C (+149°F) require the electronics to be mounted remotely from the sensor. Consult kayden.com or the factory for more information.
- The continuous operating temperature limits of the sensors are -55°C to +200°C (-67°F to +392°F).

Turbulence / Interference:

- Pumps, fans, valves, or pipe bends of 90° or more will cause turbulence or significant variance in the flow which will affect the repeatability of the switch/transmitter. Care should be taken to minimize this possibility.
- For Pump Flow/No-Flow detection the best/preferred installation point is on the inlet side of the pump. The discharge side will have turbulence, reverse flow and an undeveloped flow profile. These factors will greatly reduce repeatability and accuracy.
- Keep the sensor away from any devices that may cause physical damage such as: agitators, valves, injectors, etc.

Note: Many times, especially when replacing a different type of instrument, the installation point is predetermined and is difficult to change. Kayden switches/transmitters have specific design features that allow them to perform well even in difficult locations and applications. Please consult your local Kayden Representative or Kayden for questions or installation / setup recommendations.

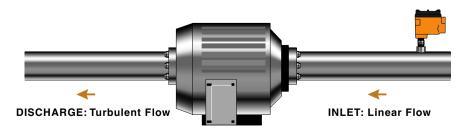


Figure 3a - Pump Flow Detection

Side of Switch

Back of Switch

HIGH LEVEL

LOW LEVEL

PUMP PROTECTION

Application Considerations - Flow

Flow

Ideal Process Conditions

Liquids:

- Consistent process composition & temperature
- Sufficient straight run flow profile (minimizes turbulence)
- Recommended minimum of 5 pipe diameters from any disturbance

Air & Gas:

- Consistent process composition & temperature
- Sufficient straight run flow profile (minimizes turbulence)

Sediment covering sensing tip

Clean and dry

Slurries:

- Consistent process composition & temperature
- Sufficient straight run flow profile (minimizes turbulence)

Emulsion:

- Consistent process composition & temperature
- Sufficient straight run flow profile (minimizes turbulence)

Undesirable Process Conditions

Liquids:

- Inconsistent process composition or temperature
- Insufficient straight run
- Turbulence
- Aerated fluids

Air & Gas:

- Inconsistent process composition or temperature
- · Wet or saturated air/gas

Slurries:

- Inconsistent process composition or temperature
- Insufficient straight run
- Turbulence
- Aerated fluids

Emulsion:


- Inconsistent process composition & temperature
- Insufficient straight run
- Turbulence
- Aerated fluids

Solids:

 Dry granulated processes are NOT good candidates for thermal switches

PROCESS TANK

Application Principles - Flow, Level, Interface & Temperature

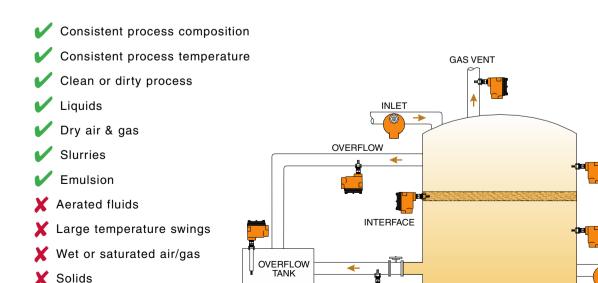

LEAK PROTECTION

Application Considerations - Level

Level

Ideal Process Conditions

Liquids:

- Consistent process composition
- Non-turbulent

Slurries:

Consistent process composition

Emulsion:

Consistent process composition

Undesirable Process Conditions

Liquids:

- Inconsistent process composition
- Turbulence
- · Large temperature swings

Slurries:

- Inconsistent process composition
- Turbulence
- Large temperature swings

Emulsion:

- Inconsistent process composition
- Turbulence
- · Large temperature swings

Solids:

Dry granulated processes are NOT good candidates for thermal switches

Application Considerations - Interface

Interface

Ideal Process Conditions

Liquid to Liquid:

- Consistent process composition & temperature
- Non-turbulent applications
- · Large differential in thermal conductivities

Air or Gas to Liquid:

- Consistent process composition & temperature
- · Non-turbulent applications
- Dry gas

Emulsion:

- Consistent process composition & temperature
- Large differential in thermal conductivities

Undesirable Process Conditions

Liquid to Liquid:

- Inconsistent process composition or temperature
- High aeration
- High turbulence
- Small differential in thermal conductivities

Air or Gas to Liquid:

- Inconsistent process composition or temperature
- High turbulence

Emulsion:

- Inconsistent process composition or temperature
- High aeration
- High turbulence
- Small differential in thermal conductivities


Solids:

Dry granulated processes are NOT good candidates for thermal switches

III. GUIDELINES FOR PIPE MOUNTING

The CLASSIC 800 is a flow, point level, interface and temperature sensing device. The sensor tip must be inserted in the proper location and to the proper depth in order to accurately react to your process conditions. The following information, including Figures 5 through 9, should be considered as text book examples for proper installation.

Notes: Most pipe connections for instrumentation are a variation of a butt-weld-type such as the weldolet or threadolet shown in Figure 4. The length of this connection must be added to the pipe diameter when determining the insertion length for the sensor. The Kayden literature refers to this "insertion length" dimension as the "U" length, Figure 5.

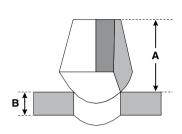

Threadolet Conforms to ASM EB 16.1

Figure 4 - Threadolet

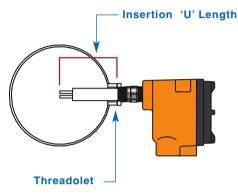


Figure 5 - Insertion 'U' Length

Horizontal Pipe - Side Mount (Ideal)

As shown in Figure 6a, ensure sensing tip is inserted to a point between 5% and 75% of the inside diameter of the pipe. Avoid locations where sediment may accumulate and isolate the sensing tip from the process.

Horizontal Pipe - Top Mount

Gas will always collect at the top of any pipe, ensure sensing tip is inserted to a point where it will be constantly and fully exposed to the desired process media.

Horizontal Pipe - Bottom Mount

Because sediment will always collect at the bottom of any pipe, ensure sensing tip is inserted to a point where it will be constantly and fully exposed to the desired process media. Avoid locations where sediment may accumulate and eventually isolate the sensing tip from the process.


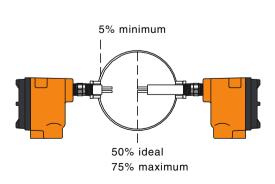


Figure 6a - Horizontal Pipe, **Side Mounting**

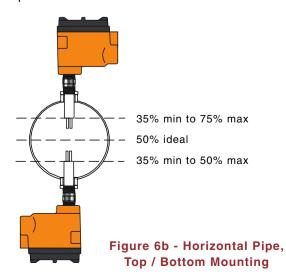

For vertical pipe mounting, Kayden strongly recommends installing the switch/transmitter at a point of UPWARD process flow to ensure continued total immersion of the sensing tip.

If there is no other option except to install the flow switch/transmitter in a vertical pipe with downward flow, the following information must be considered:

- A "waterfall effect" may occur in vertical pipe with low flow rates. The process may become substantially aerated and will therefore cause the switch/transmitter to interpret the aeration as a lower flow rate (see Figure 8).
- The line should be full liquid/slurry at all times.
- The switch/transmitter must be far enough from an open outlet that air cavitation does not extend to the sensing tip and cause a false flow signal. A constriction at the outlet avoids this problem.

Vertical Pipe - Side Mount (Acceptable)

- Ensure sensing tip is fully inside the pipe wall as a minimum and to the center of the pipe as a maximum.
- When installing the switch in vertical piping, Kayden strongly recommends installing thermal switches at a point of UPWARD process flow to ensure continued total immersion of the sensing tip.

Vertical Pipe – Side Mount – Downward Flow:

- Is only recommended for higher flow rates where the LINE IS KEPT FULL OF LIQUID/SLURRY.
- For installation in a vertical gravity flow, the switch must be distant enough from an open outlet that air cavitation does not affect the sensing tip and cause a false flow signal. A constriction at the outlet avoids this problem.
- A waterfall effect will occur in vertical pipe with low flow rates. Also, the process is likely to become substantially aerated. The switch will interpret the aeration as a substantially lower flow rate and possibly cause a false low flow alarm.

Vertical Pipe – Side Mount – Top & Bottom Mount (Less Desirable)

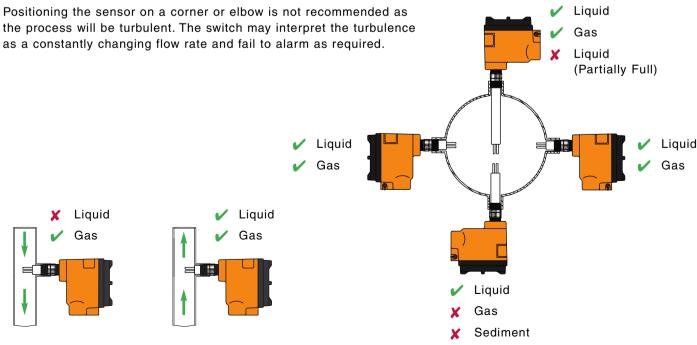


Figure 8 - Vertical Pipe, Flow Up & Down

Figure 7 - Horizontal Pipe, Sensor Positioning

IV. INSTALLING THE SENSOR

Having followed the installation guidelines in Section 2, "Installation Guidelines", Subheadings I through III, you may now proceed with installation.

CAUTION

- Use proper eye protection and any other safety equipment as required by your installation site.
- 2. Check electrical power to ensure that all power has been disconnected and 'locked out'.
- 3. Ensure the process tank and/or line pressures are 'zero'.
- 4. Ensure that steam, hot water, acids or any other potentially hazardous media will not be released.
- Follow all safety precautions as specified for your installation 5. site and / or local codes.

Process Connections

- Threads: Coat with a thin layer of thread tape or sealant/lubricant. Do not overtighten threads when installing.
- · Flanges: To ensure a correct seal on mating flanges, mount and tighten flanges according to ANSI standards.

2. Sensor Orientation

To optimize the sensor's performance ensure the sensor is positioned as outlined below. As shown in Figure 9 below, ensure the arrows etched on the sensor flats are oriented parallel to the process flow.

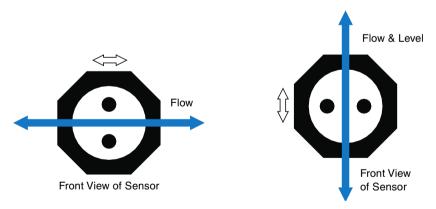


Figure 9 - Sensor Orientation for Horizontal Flow & Level

- Notes: 1. Liquids & Slurries: When mounted in a tee or section of pipe larger than the normal process pipe, position sensor at a sufficient insertion point so as to avoid contact with any air or gas bubbles that occur in the larger section of pipe.
 - 2. Avoid locations where sediment may accumulate and eventually isolate the sensing tip from the process. Sediment covering the sensor tip may prevent the switch/transmitter from being able to sense any changes in the process as the sediment will insulate the sensing tip.

V. ELECTRICAL

1. General

Ensure all electrical installation is in accordance with all applicable local and national electrical
code requirements. The CLASSIC 800 series standard configuration includes an explosion-proof
enclosure. The CLASSIC 800 Series is approved to Factory Mutual (FM), Canadian Standards
Association (CSA) and Underwriters Laboratory (UL) standards and must be installed in
accordance with these applicable codes and standards.





- Power Supply: For applications using a DC power supply, ensure the power has less than 2% ripple.
- Switch/Transmitter Enclosure: The switch/transmitter enclosure must be grounded in accordance with local and national electrical codes. The most effective grounding method is a direct internal connection to earth ground with minimal impedance. The (green) Internal Ground Connection screw is located inside the electrical enclosure and is identified by the universal ground symbol.

CAUTION

- Mount the enclosure so that moisture/liquids will not enter the switch/transmitter enclosure. If conduit connections are not sealed, moisture accumulation can damage the switch/transmitter.
- 2. Grounding the switch/transmitter enclosure via threaded conduit connection may not provide sufficient ground continuity.
- Do not run the transient protection ground wire in the same conduit as the signal wiring as the ground wire may carry excessive current if a lightning strike occurs.

2. Wiring Connections to the Switch/Transmitter

 To make the electrical connections to the CLASSIC 800, it is necessary to remove the Electronics Module as follows:

A. Remove the Cover:

• Turn the external stainless steel locking screw clockwise with a 5/32" (#10) Allen Key and turn the cover counter clockwise until it can be lifted off the enclosure.

B. Remove the Electronics Module:

- To remove the Electronics Module, pull upward with an equal force on both stainless steel
 handles. Care should be taken to avoid damaging the sensor cable attached to the
 Electronics Module. Practice ESD (electrostatic discharge) procedures when handling the
 Electronics Module.
- Electrostatic discharge may damage the electronics! Never place the Electronics Module on a surface or pass it to another person in a way that would allow an electrostatic discharge to pass through it.

C. Removing the Sensor Connector from the Electronics Module:

- Refer to Figure 10.
- The Electronics Module must be removed from the enclosure before any wiring can be connected to the Mounting Base Plate. Disconnect the sensor connector from the Electronics Module by disengaging the locking tab and pulling (with fingers) on the corners of the small black connector. Do not pull directly on the wires. The use of pliers may damage the connector.

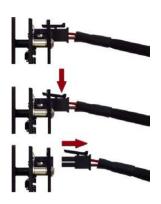






Figure 10 - Disconnecting Sensor Connector from the Electronics Module

Input Power Connections:

The CLASSIC 800 will accept 12-24 VDC or 115-230 VAC input power via the universal power supply by wiring the Electronics Module according to input power available.

- For AC power, connect the HOT line to VAC-H, the NEUTRAL to VAC-N and the GROUND wire to the green grounding screw in the enclosure, also indicated by the ground symbol.
- For DC Power, connect the positive voltage to +VDC and the common or negative to COM. (see Figure 12 - Wiring Connection Diagram)

Wiring the Relay Contact(s):

 The CLASSIC 800 features two (2) sealed independent relays, which may be wired for Normally Closed (NC) or Normally Open (NO) operation. Relay 1/Relay 2 are connected as shown in Figure 12.

Replacing the Electronics Module in the Enclosure:

Repeat steps 2B and 2C in reverse order. The cable from the sensor to the Electronics Module should be gently positioned between the outside of the Mounting Base Plate with green & black connectors and the inside of the enclosure. If the excess length of the cable interferes with the mounting of the Electronics Module then gently rotate the Electronics Module one full turn to put a twist in the sensor cable.

- There is no surplus room in the enclosure for excessively long wires.
- Use a quality data communications cable for all non-power connections (RS-485). Ensure that the shield is sufficient to allow the cable to coexist with the power connections. Consult your local electrical code for requirements.
- All wires must be kept free and clear of the green & black mounting connectors on the Mounting Base Plate to prevent interference with the mounting of the Electronics Module.
- Treat the Electronics Module and sensor cable with care. While the CLASSIC 800 is a rugged unit, these assemblies can be damaged if mishandled.



Figure 11 - CLASSIC 800 Mounting Base Plate / Wiring Terminal

KAYDEN[®] | Installation Guidelines

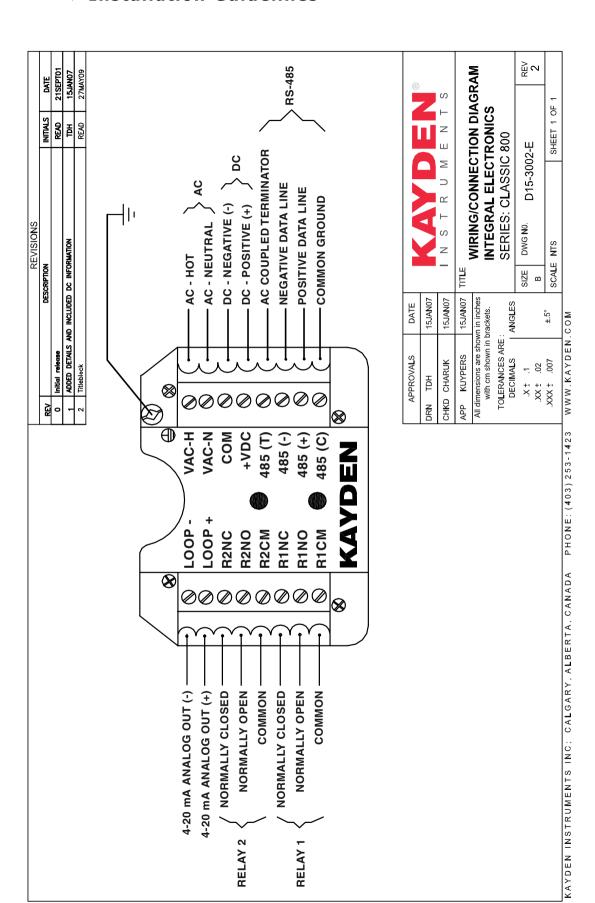


Figure 12 - CLASSIC 800 Wiring Connection Diagram

VI. TESTING THE INSTALLATION

1. Self-test Diagnostics

- The CLASSIC 800 continuously executes a self-test on its internal components and firmware. All
 diagnostics are controlled by the microprocessor and are independent of the operation of the
 switch/transmitter and the process conditions.
- At initial power-on the CLASSIC 800 performs a complete self-test of all hardware and firmware. During this test all LEDs on the Thermal Signal display will flash for approximately 2 seconds.
- If a Fault is discovered during the self-test a Fault Code will be displayed and the relay will deenergize. (Fault Codes are explained in **Section 7 "Troubleshooting"**).

2. Power

- Turn on the power to the switch/transmitter and allow the sensor to heat up and stabilize (approximately 90 seconds).
- At the conclusion of the self-test, if there is no fault condition present, the Run Mode LED will begin flashing and a single LED (in the Thermal Signal Bar Graph) will appear on the display. As the heater element warms up, the switch/transmitter will respond to the process conditions and this LED indicator will move to the left.
- Relay 1 and/or Relay 2 LEDs may illuminate depending upon the Thermal Signal, relay set point(s) and the programmed Relay condition (set to energize ABOVE or BELOW set point).

3. Manual Test

- Immerse the sensing tip in the actual process media by filling the pipe or vessel to the point at which the switch/transmitter will actuate or alternatively, into a container of process media.
- When the sensor is alternated between wet and dry conditions (in and out of the media), the illuminated Thermal Signal LEDs should move and the relay set point LED(s) should change state (ON/OFF). The degree and speed of the movement of the Thermal Signal LED depends completely on how well the current setup of the CLASSIC 800 corresponds to the process conditions of the test.*

Note: *Because a complete setup may not have yet been performed allow at least 20 - 30 seconds for the sensor and relay to react when alternating between wet and dry conditions (in and out of the media).

• A complete explanation of setup procedures follows in **Section 3 "Setup & Operation"** and in the **Quick Setup Guide** for the CLASSIC 800.

3

Setup & Operation

Display Panel Indicators:



Figure 13 - CLASSIC 800 Display Panel

Relay 1	On steady when Relay 1 is energized
Relay 2	On steady when Relay 2 is energized
Fault	Indicates a self-test error or fault condition
Set Point 1	On steady when viewing Set Point 1
Set Point 2	On steady when viewing Set Point 2
Run Mode	Flashing when switch/transmitter is operating
Bypass	Flashing when the Start-up Bypass Timer is active
Thermal Signal	Displays Thermal Signal

The Thermal Signal increases as:

Flow	The flow rate increases
Level	The sensor is submerged
Interface	The sensor is submerged by the second liquid of

Display Panel Button Functions - RUN Mode and SET Mode.

RUN MODE – Run Mode LED is 'Flashing'	
RUN	Press and hold to view the Software Revision and Node Address
SET	Press to enter Set Mode (If all LEDs are off, Display Panel is locked with RCMS)
Left Arrow	Press and hold to view the LED-0 and LED-100 pointers on Baseline Graph
Right Arrow	Press and hold to view Thermal Signal data on Baseline Graph
1	Press and hold to view Set Point 1 on Scaled Bar Graph View
2	Press and hold to view Set Point 2 on Scaled Bar Graph View

SET MODE – Run Mode LED is 'Off'	
RUN	Press and release to exit Set Mode returns to Run Mode
SET	Press and release to proceed to next step of Set Mode
Left Arrow	Adjust selection as per Set Mode function
Right Arrow	Adjust selection as per Set Mode function
1	No function in Set Mode
2	No function in Set Mode

Figure 14 - Control Functions RUN/SET Mode

I. GENERAL INFORMATION

1. Warm up

At initial start-up or restart allow approximately 90 seconds for the heater element to warm up and the switch/transmitter to stabilize before making any adjustments.

2. Diagnostics

As described in greater detail in **Section 7 "Troubleshooting"** an automatic diagnostic program runs continuously when power is connected. To prevent the possibility of intermittent failures the CLASSIC 800 will display a Fault condition in the event of improper electrical connection, loss of power and / or extensive physical damage.

3. Universal Power

The CLASSIC 800 will accept either 12-24 VDC or 115-230 VAC but must be wired accordingly. The CLASSIC 800 may not be loop powered. At a minimum the unit requires 4 wires: Hot and Neutral for AC/DC, R1COM and R1NO (see Figure 12 - CLASSIC 800 Wiring Connection Diagram).

Power consumption for the CLASSIC 800 is rated at a maximum of 6 VA (watts). The maximum rating is based on the assumption that both relays are energized, the heater is at maximum power and several LEDs are illuminated. An application involving the relay energized and the heater at 80% power consumes typically 300 mA or 4 VA.

4. Electronics

The CLASSIC 800 Electronics Module is universal and may be installed for testing or operation in all CLASSIC 800 series switches/transmitters regardless of sensor configuration. Therefore, the Electronics Module may be considered a universal spare part and the most essential troubleshooting tool for all applications.

II. CONTROL SETTINGS and SETUP PROCEDURES

Quick Setup Guide

The CLASSIC 800 Quick Setup Guide, **Section 4 "Quick Setup Guide"**, contains the required information to facilitate setup and adjustments. The setup procedures contained in **Section 3** of this manual are listed in the same order as the programming matrix in the Quick Setup Guide which is included in this manual as Section 4. Additional copies of the Quick Setup Guide may be obtained from kayden.com or your local Kayden representative.

1. View or Adjust Relay 1 & 2 Energized Mode

Both relays on the CLASSIC 800 have Normally Open and Normally Closed contacts. The terms 'Open' and 'Closed' refer to the de-energized state of the relays. Normally Open or Normally Closed operation for **Relay 1/Relay 2** is determined by wiring the contacts accordingly (see Figures 11 & 12).

Notes: Low flow means less Thermal Signal as represented by the CLASSIC 800's **Thermal Signal Bar Graph.** Some configurations may require one or both relays to be energized on high flow, i.e. higher than the set point.

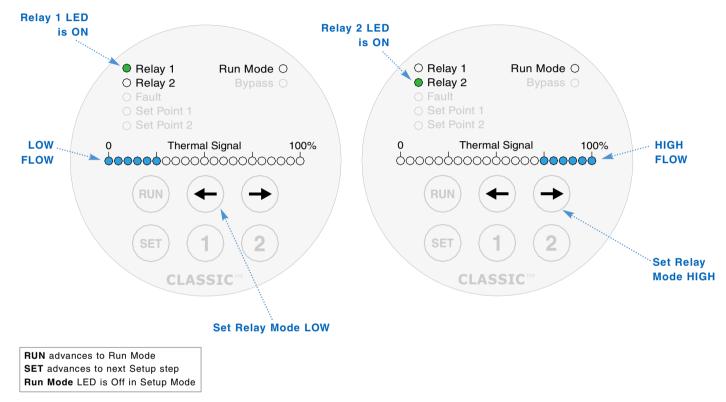


Figure 15 - Relay Energized Mode

To View or Adjust the Relay 1 & 2 Energized Modes:

- 1. Press SET until the Relay 1 or Relay 2 LED is on solid and the Run Mode LED is off.
- 2. The **Thermal Signal Bar Graph** shows the Relay Mode. For Low Flow the first six (**0-25% LED's**) are on solid; for High Flow the last six (**75-100% LED's**) are on solid.
- 3. To adjust the Mode, press and release the Left or Right Arrow keys.
- 4. When satisfied with your configuration, press and release **SET** to continue to the next programmable variable OR press and release **RUN** to return to **Run Mode**.

Failsafe Relay Configurations

The term "Fail-safe" refers to a method of wiring and programming control instrumentation commonly used in hazardous locations/applications.

- In a "Fail-safe" application the CLASSIC 800 switch/transmitter is wired and programmed so that the output relay is energized in normal process operating condition.
- Thus, in the event of a power failure, cable break, self-test failure, or other loss of electrical power, the contact is "opened", the relay is de-energized and an alarm will result.

A common "Fail-safe" setup for NO FLOW CONDITION, PUMP PROTECTION:

- Connect the relay contact wires to Normally Open (R1NO, R1CM)
- Program the relay(s) to energize above set point.
- Depending on application and setup of the switch/transmitter, the relay contact(s) will OPEN (deenergize) when:
 - a. The Thermal Signal decreases due to a decrease or loss of flow/level.
 - b. Power is lost to the switch/transmitter as described above.

2. View or Adjust the 4-20 mA Fault Mode Configuration

The 4-20 mA output is used to monitor the analog data from the sensor, such as a self-test fault. The 4-20 mA output can be programmed for a value of 3.0 mA or 21 mA.

Notes: For more general information on fault conditions, see Section 7 "Troubleshooting".

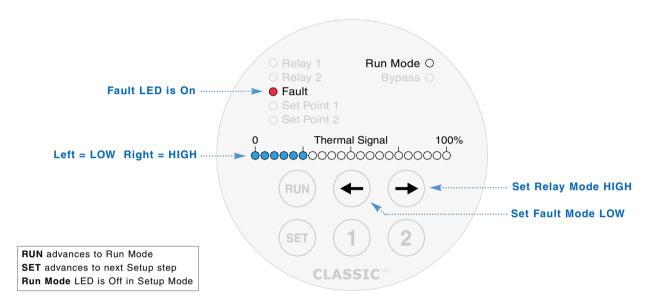


Figure 16 - 4-20 mA Fault Mode Configuration

To View or Adjust the Fault Current:

- 1. Press and release SET until the Fault LED is on solid; the Run Mode LED will be off.
- The Thermal Signal Bar Graph shows the 4-20 Fault Mode. For 3.0 mA the 0-25% LED's are on solid; for 21 mA the 75-100% LED's are on solid.
- 3. To adjust the Mode, press and release the Left or Right Arrow keys.
- 4. When satisfied with your configuration, press and release **SET** to continue to the next programmable variable OR press and release **RUN** to return to **Run Mode**.

3. View or Adjust Set Points 1 & 2

- Notes: 1. Viewing either Set Point 1 or 2 from the Display Panel does not require entering the Manual Setup Mode. While still in RUN Mode, press and hold 1 or 2 to view the programmed Set Point.
 - In this context "Set Point" refers to the point(s) within the user defined range at which Relay 1 and Relay 2 energize/de-energize.
 - 3. Set Point 1 always corresponds to Relay 1 and Set Point 2 always corresponds to Relay 2.

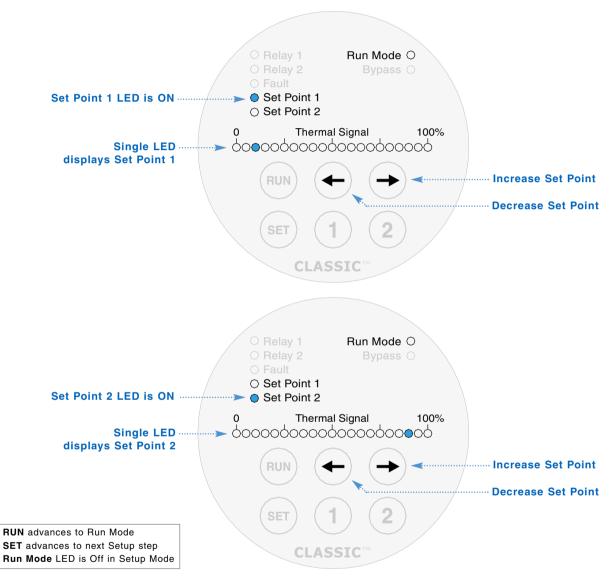


Figure 17 - Set Point 1 & 2 Configuration

To View or Adjust the Set Points

- 1. Press and release SET until the Set Point 1 or Set Point 2 LED is on solid and the Run Mode LED is off.
- 2. One LED on the **Thermal Signal Bar Graph** will illuminate, corresponding to the present setting of the selected set point.
- 3. To adjust the selected Set Point, press and release the Left or Right Arrow keys.
- 4. When satisfied with your configuration, press and release **SET** to continue to the next programmable variable OR press and release **RUN** to return to **Run Mode**.

4. View or Adjust the Start-up Bypass Timer

The Start-up Bypass Timer provides a means to energize both relays when the switch/transmitter is initially powered on. This feature provides a means to automatically restart a pump that has been turned off by the switch/transmitter without the need for additional hardware.

- **Notes:1.** The Start-up Bypass Timer is commonly used to automatically re-start a pump after the specified (programmed) time delay.
 - 2. During the Bypass Delay, both relays are energized regardless of their Mode or the value of the **Thermal Signal**.
 - 3. When the Start-up Bypass Timer is in use, neither Setup Mode nor the Thermal Signal Bar Graph are available until the programmed delay time expires.

The **Thermal Signal Bar Graph** displays the delay (each LED right of the zero LED in Bypass Mode equals 5 seconds; therefore the maximum time in Bypass is 100 seconds). Instead of measuring from 0 to 100 percent the **Thermal Signal Bar Graph** shows the delay from 0 to 100 seconds.

If the **Start-up Bypass Timer** is set to zero then no Bypass Delay will occur. (The Factory Default setting is **zero seconds.)**

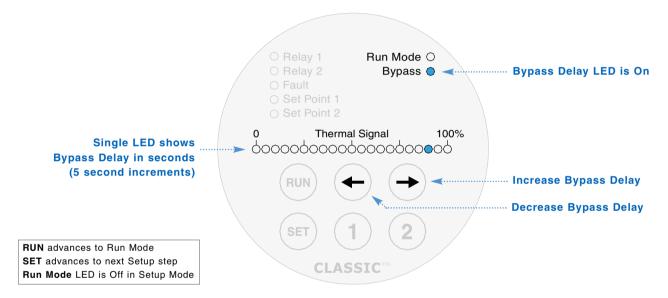


Figure 18 - Start-up Bypass Timer

To View or Adjust the Start-up Bypass Timer:

- 1. Press and release **SET** until the **Bypass** LED is on solid and the **Run Mode** LED is off.
- One LED on the Thermal Signal Bar Graph will illuminate corresponding to the present setting of the Start-up Bypass Timer.
- 3. To adjust the Start-up Bypass Timer, press and release the Left or Right Arrow keys.
- 4. When satisfied with your configuration, press and release **SET** to continue to the next programmable variable OR press and release **RUN** to return to **Run Mode**.

5. View or Adjust the Heater Power

- The correct heater setting is determined primarily by the process media and secondarily by the velocity of the process. The heater setting is a key factor in determining the sensitivity and reaction time of the switch/transmitter.
- The Factory Default setting of 75% is optimal (70 80% depending on velocity) for Hydrocarbon-based liquids and suitable for many applications. The CLASSIC 800 allows the Heater Power to be set between 0% and 100% in 5% steps.
 - GUIDELINES FOR SETTING HEATER POWER:
 - 20 35% heater power (5-8 LEDs) Air or Gas (Flow) (depending on velocity)
 - 60 75% heater power (13-16 LEDs) Oil or Hydrocarbon based liquids (Flow, Level & Interface)
 - 80 100% heater power (17-21 LEDs) Water or non-viscous liquids (Flow, Level & Interface)

The faster the flow rate (velocity) the more heat is required. In level applications the amount of heat, in part, determines the reaction time.

- The CLASSIC 800's sensor heater produces 2 watts at full power.
 - The main processor continuously and automatically monitors the heater element. This is the "Smart Heater" function. When the Thermal Signal decreases dramatically or goes to zero, the main processor will automatically reduce the output of the heater from the user setting to a lower power rating in order to prevent the creation of a "Thermal Offset". This function will be automatically repeated until such time as the Thermal Signal increases.

Note: This function may be clearly observed in the graph function of the RCM software.

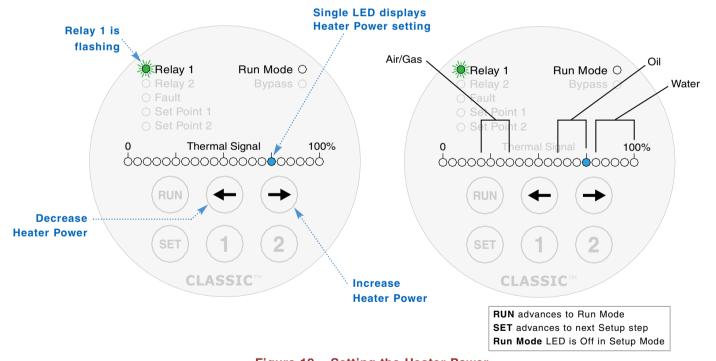


Figure 19 – Setting the Heater Power

To View or Adjust the Heater Power:

- 1. Press and release SET until the Relay 1 status LED is flashing AND the Run Mode LED is off.
- 2. The **Thermal Signal Bar Graph** now shows the setting of the Heater Power in percent (0% = Heater Off; the sixth illuminated LED = 25%; 100% = Heater Full On).
- 3. To adjust the Heater Power press and release the Left or Right Arrow key.
- 4. When satisfied with your configuration, press and release **SET** to continue to the next programmable variable OR press and release **RUN** to return to **Run Mode**.

6. View or Adjust the Node Address & View the Software Revision

The Software Revision and Node Address are displayed on the **Thermal Signal Bar Graph** as two binary bytes. The Software Revision is not adjustable but can be useful should telephone support be required.

The Factory Default for the Node Address is 1 (one).

Adjusting the Node Address is only required if setting up a multi-point RS-485 network or adding the CLASSIC 800 to an existing RS-485 network.

The Software Revision and Node Address can also be viewed while in **Run Mode** by pressing and holding the **RUN** key.

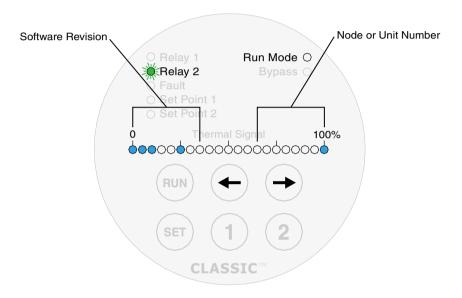


Figure 20: Software Revision & Node (Unit) Number

To View or Adjust the Node (Unit) Address:

- 1. Press and release SET until the Relay 2 LED is flashing AND the Run Mode LED is off.
- 2. The **Thermal Signal Bar Graph** now displays the value of the Software Revision and the setting of the Node Address.
- 3. The Node Address is displayed in binary using the eight LED's on the righthand side of the Bar Graph. Refer to **Section 6 "Binary Table"**, for a listing of Node Address to LED patterns.
- 4. To adjust the Node Address, press and release the Left and Right Arrow keys.
- 5. When satisfied with your configuration, press and release **SET** to continue to the next programmable variable or press and release **RUN** to return to **Run Mode**.

7. View or Adjust the 4-20 mA Output Configuration (Forward or Reverse)

The 4-20 mA output is used to monitor the analog data from the sensor. The current output is an analog signal representing the Scaled Thermal Signal Bar Graph View.

Operator may select:

- 0% as 4 mA ascending to 20 mA
- 100% as 4 mA descending to 20 mA

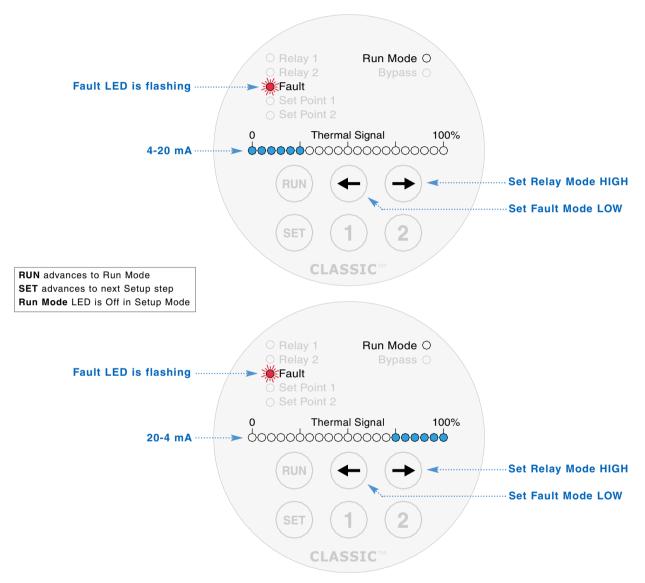


Figure 21 - 4-20 mA & 20-4 mA Output Mode

To View or Adjust the 4-20 mA Output Current Mode:

- Press and release SET until the Fault LED is flashing AND the Run Mode LED is off.
- 2. The Thermal Signal Bar Graph shows the 4-20 Output Mode.

For 0% equal to 4 mA the 0-25% LED's are on solid.

For 100% equal to 4 mA the 75-100% LED's are on solid.


- 3. To adjust the Mode, press and release the **Left** or **Right Arrow** keys.
- 4. When satisfied with your configuration, press and release SET to continue to the next programmable variable OR press and release RUN to return to Run Mode.

8. View or Adjust the 0% & 100% Thermal Signal Scaled Bar Graph View

There are two views of the Signal Data available for display on the Thermal Signal Bar Graph.

1. The **Baseline Bar Graph View** shows the maximum possible span/complete thermal range that the CLASSIC 800 is capable of measuring. Hold **Left Arrow** in **Run Mode** with the zero (0%) and 100% LEDs illuminated, the switch is set for the widest range possible.

Note: The Baseline Bar Graph View can only be displayed by pressing and holding the Left Arrow while in Run Mode.

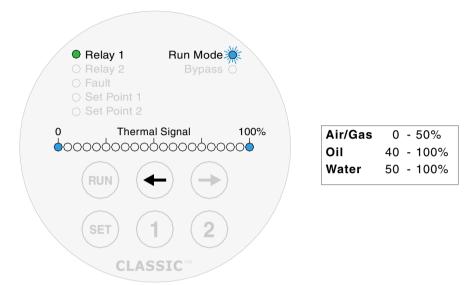

2. The Scaled Bar Graph View focuses only on the portion of the total thermal range required for each application (oil, water, gases). Once the 0% Thermal Signal and 100% Thermal Signal settings are defined, this range (Scaled Bar Graph View) will be displayed as 0% to 100% on the Thermal Signal Bar Graph at all times.

To illustrate this principle refer to Figure 22.

The LED-0 pointer is shown set to 50% of Baseline and the LED-100 pointer is shown set to 75% of Baseline. The result is that the Scaled View appears to zoom in on the area of the Baseline data that is framed by the LED-0 and LED-100 Pointers.

The data, indicated by the single illuminated LED, is at 55% of Baseline but on the Scaled View it is shown as 20%. This is because the data is at only 20% of the values framed by LED-0 and LED-100.

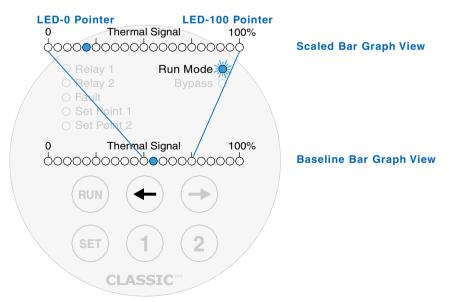


Figure 22 - Scaled Bar Graph View vs. Baseline Bar Graph View

9. View or Adjust the 0% & 100% Thermal Signal LEDs:

- Press and release SET until the Set Point 1 (LED-0) or Set Point 2 (LED-100) status LED is flashing and the Run Mode LED is off.
- 2. The Thermal Signal Bar Graph now shows the setting of the LED Pointer.
- 3. To adjust the LED Pointer, press and release the Left or Right Arrow keys.
- 4. When satisfied with your configuration, press and release **SET** to continue to the next Programmable Variable OR press and release **RUN** to return to **Run Mode**.

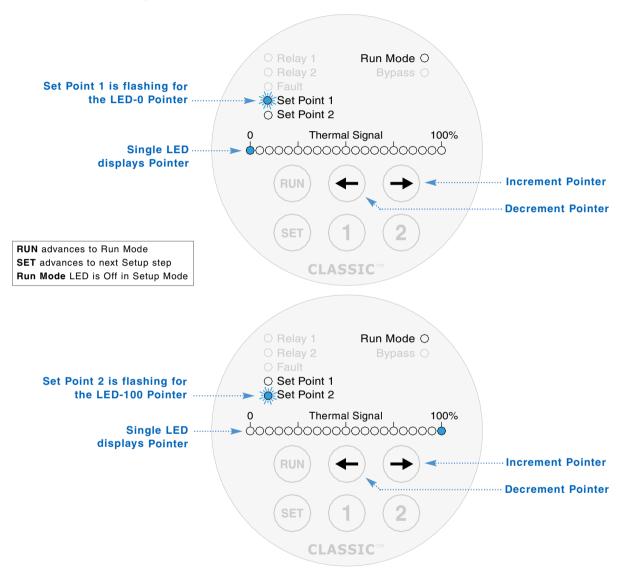


Figure 23 - Setting the 0% & 100% Thermal Signal

Kayden RCM Software

Kayden designed powerful software specifically for remote configuring and monitoring of Kayden thermal flow, level, interface and temperature switches/transmitters from a PC. Remote connectivity lets you operate and/or configure your CLASSIC 800 from a central location. The **RCM Software** provides the ability to view or adjust: Set Points, Relay Modes, Temperature Mode, Start-up Bypass Timer, Heater Setting and Lock or Unlock the Display Panel.

The **RCM Software** includes a Thermal Graph screen which provides a graphical display of the process condition. The Thermal Graph displays the Thermal Signal and the Relay Set Point in either a line graph or chart recorder format. This feature may be useful for limited trending of the switch/transmitter.

- **Notes:1.** To communicate with your Kayden CLASSIC 800, you will require an RS-485 adapter such as the Kayden SCA.
 - 2. Additional copies or the latest revision of the RCM Software may be downloaded at our website, kayden.com, or call Kayden at (403) 253-1423.

RS-485 Remote Communications

The RS-485 remote communications port is connected as follows:

- **485 (C)** The common ground reference used on some three wire half-duplex systems. While no current should pass through this conductor, it should not be used as a shield. If using a shield it should only be connected to ground at one point, usually at the PLC or computer.
- 485 (A-) The A or negative data line.
- 485 (B+) The B or positive data line.
- **485 (T)** This pin provides an AC coupled terminator of 120 ohms when shorted to 485 (A-). This feature eliminates the need to add an external terminator. It is AC coupled to reduce power consumption when the 485 bus is idle. For more details on AC vs. DC termination of RS-485 networks, contact Kayden technical support.

Note: For more information see Figures 11 & 12.

Kayden Converters/Adapters - USB to RS-232 & RS-232 to RS-485

USB to RS-232 (DB-9) Adapter

Adapts the Kayden SCA to USB for computers without a serial port.

Part Number: A15-322

RS-232 (DB-9) to RS-485 Adapter

The SCA is an RS-232 to RS-485 adapter for Modbus communication protocol. The SCA derives power from the Kayden switch.

Part Number: A15-321

Communication Cable

Communication Cable is used to connect the SCA (Serial Communication Adapter) to the switch.

Standard Lengths: 4, 8 & 10 feet.

Part Number: A05-CC-0004 4 feet

A05-CC-0008 8 feet **A05-CC-0010** 10 feet



These items can be purchased separately but are required to use the Kayden RCM software.

4

Quick Setup Guide

Mechanical Installation

NOTE: Observe the following safety guidelines before installing or removing your CLASSIC switch/transmitter:


- Use proper eye protection and any other safety equipment as required by your installation site.
- Check electrical power to ensure that all power has been disconnected and "locked out."
- Ensure the process tank or line pressures are "zero."
- Protect yourself against accidental release of steam, hot water, acids and other potentially hazardous media.
- Follow all safety precautions as specified for your installation site and local codes.

- Before installing your switch/transmitter, coat the sensor threads with plant-approved lubricant or sealant to prevent threads from binding.
- 2. Extra caution should be taken not to over-tighten the sensor threads while installing.
- Install the switch/transmitter, taking into account the orientation of the sensor as described below.
- 4. Keep in mind the need for easy access, safety of personnel and a suitable switch/transmitter environment. In general, install the switch/transmitter so as to minimize vibration, shock, and extreme temperature fluctuations.

Sensor Orientation


The CLASSIC sensor is marked with the universal symbol . This surface should be flat up and level in a horizontal flow application only. Refer to **Figures 1** and **2** for flow and level applications; this surface of the hex should be parallel to the direction of change in the process.


Figure 1: Sensor Orientation for Horizontal Flow

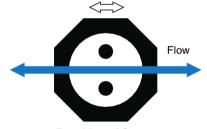

Front View of Sensor


Horizontal Mounting
5% minimum

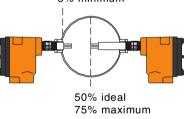

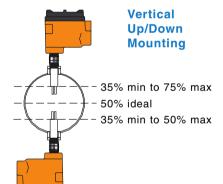

Sediment

Figure 2: Sensor Orientation for Vertical Flow

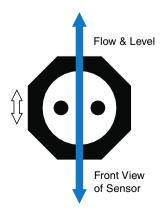

Horizontal Pipe:
Sensor Positioning


Liquid
Gas

Liquid (Partially Full)

Liquid
Gas

Liquid
Gas

Gas

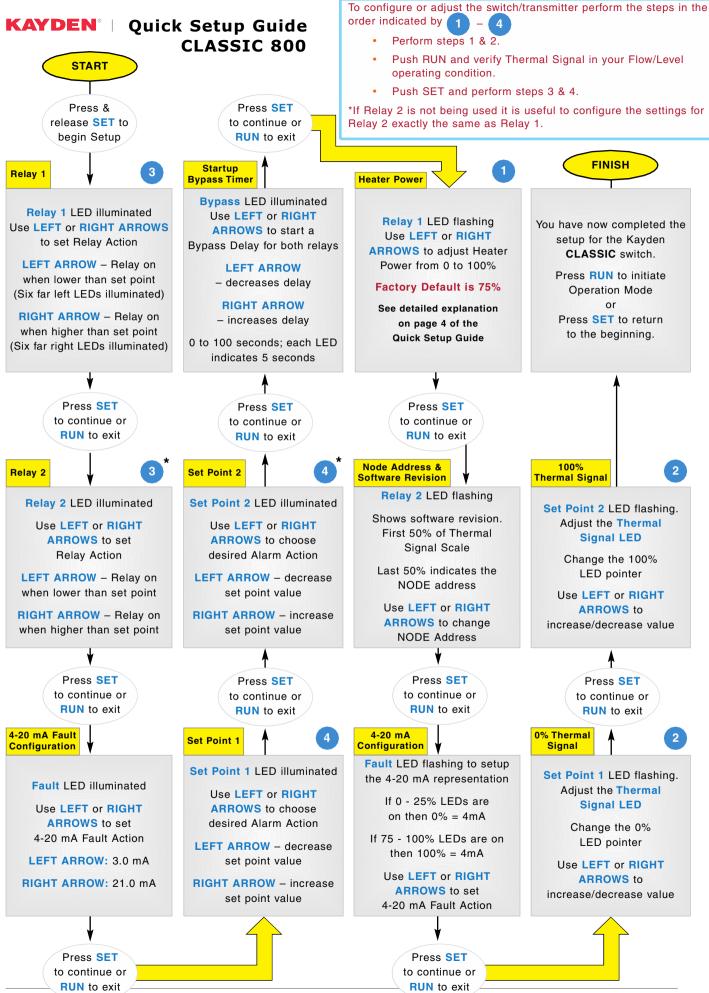

KAYDEN° | Quick Setup Guide



Display Panel Indicators:

Relay 1	On steady when Relay 1 is energized
Relay 2	On steady when Relay 2 is energized
Fault	Indicates a self-test error or fault condition
Set Point 1	On steady when viewing Set Point 1
Set Point 2	On steady when viewing Set Point 2
Run Mode	Flashing when Switch/Transmitter is operating
Bypass	Flashing when the Start-up Bypass Timer is active
Thermal Signal	Displays Thermal Signal

The Thermal Signal increases as:

Flow	The flow rate increases
Level	The sensor is submerged
Interface	The sensor is submerged by the second distin

The sensor is submerged by the second distinctly

different process



Mounting Base Plate / Terminal Assembly

Mounting Base Plate Wire Positions			
LOOP -	VAC-H		
LOOP +	VAC-N		
R2NC	СОМ		
R2NO	+VDC		
R2CM	485-T		
R1NC	485-A (-)		
R1NO	485-B (+)		
R1CM	485-C		

RUN MODE – Run Mode LED is 'Flashing'			
RUN	Press and hold to view the Software Revision and Node Address		
SET	Press and release to enter Set Mode (see table below		
Left Arrow	Press and hold to view the LED-0 and LED-100 Pointers on Baseline graph		
Right Arrow	Press and hold to view Thermal Signal data on Baseline Graph		
1	Press and hold to view Set Point 1 on Scaled Bar Graph View		
2	Press and hold to view Set Point 2 on Scaled Bar Graph View		

SET MODE – Run Mode LED is 'Off'			
RUN	Press and release to exit Set Mode and return to Run Mode		
SET	Press and release to proceed to next step of Set Mode		
Left Arrow	Adjust selection as per Set Mode function		
Right Arrow	Adjust selection as per Set Mode function		
1	No function in Set Mode		
2	No function in Set Mode		

CAUTION

Installation, connection and maintenance must be carried out by expert technicians who have read these operating instructions. These operating instructions include all-important information required for the installation and operation of this product. They supplement the full Product Manual, and the relevant national regulations with respect to the equipment as well as with the maintenance activities.

KAYDEN° | Quick Setup Guide

CLASSIC 800 Product Manual

POWER, AC/DC

Either AC or DC voltage can be used to power the CLASSIC:

- For AC power, connect the HOT line to VAC-H, the NEUTRAL to VAC-N and the GROUND wire to the green grounding screw, also indicated by the ground symbol.
- For DC Power, connect the positive voltage to +VDC and the common or negative to COM.

CAUTION

Never power on the circuits in a potentially explosive area without first installing the enclosure cover.

Always lock the cover in place. This may be required by your local safety or electrical code.

RELAY OUTPUTS

The CLASSIC features two independent set points each with its own mechanical relay for output. The connections for the contacts of these relays are:

To the contacts of these foliage are:			
R1COM	Common or pole contact for Relay 1		
R1NC	Normally closed contact for Relay 1 when the coil is not energized		
R1NO	Normally open contact for Relay 1 when the coil is not energized		
R2COM	Common or pole contact for Relay 2		
R2NC	Normally closed contact for Relay 2 when the coil is not energized		
R2NO	Normally open contact for Relay 2 when the coil is not energized		

NOTE: For fail-safe installations, the desirable relay is usually energized and the circuit closed. Use the normally open contacts for fail-safe installations since they are closed when the relay is energized.

MAINTENANCE

Your Kayden instrument requires very little maintenance as there are no moving parts.

Without detailed knowledge of the environment parameters of the application surroundings and process data media, Kayden cannot make specific recommendations for periodic inspection, cleaning, or testing procedures. Kayden does however suggest

general guidelines for maintenance (see the CLASSIC Product Manual). Use operating experience to establish the frequency of each type of maintenance.

CALIBRATION

The CLASSIC does not require any calibration for use as a switch/transmitter. Once properly setup, the CLASSIC will be as stable and repeatable as the process in which it is installed. It may be necessary to check or repeat the setup procedure if the process changes dramatically over time.

HEATER POWER

The CLASSIC uses a 2-watt heater that can be set between 0 - 100%, in 5% increments.

- Since the energy added by the heater is used in determining the Thermal Signal, altering the amount of heat changes the Thermal Signal.
- If the heater power is changed more than 5% (1 LED) this may require the 0% & 100% Thermal Signal to be similarly adjusted in order not to lose sensitivity and reaction time.
- The Factory Default Heater Power setting of 75% (1.5 watts) is suitable for most Flow applications with Hydro-carbons.
- **GUIDELINES FOR SETTING HEATER POWER:**
 - 20 35% heater power (5-8 LEDs) -Air or Gas (Flow) (depending on velocity)
 - 60 75% heater power (13-16 LEDs) -Oil or Hydrocarbon based liquids (Flow, Level & Interface)
 - 80 100% heater power (17-21 LEDs) -Water or non-viscous liquids (Flow, Level & Interface)

The faster the flow rate (velocity) the more heat is required. In level applications the amount of heat, in part, determines the reaction time.

The CLASSIC 800 Series has a "Smart Heater" function (see the "Classic 800 Product Manual"). If a heater operates constantly in a no flow or dry condition, a "Thermal Offset" can occur. This means the heater may affect the reading from the reference RTD. The microprocessor will automatically reduce the heater power setting to a lower power rating when the probe is "dry" or in a "no-flow" condition. When the process media touches the sensors, or flow begins again, the original heater power setting is restored.



Kayden Instruments

3368 - 114th Avenue S.E. Calgary, Alberta, Canada T2Z 3V6

Tel: (403) 253-1423 Fax: (403) 253-1460 Web: kayden.com

Doc.#: QG-800-003-000 Effective: August 2009



5

Maintenance

I. GENERAL INFORMATION

With proper installation the CLASSIC 800 will require very little maintenance, as there are no moving parts subject to wear. Following a few simple guidelines will ensure years of dependable service.

1. Spin Cover

In accordance with CSA, FM, UL and local codes the spin cover must be properly installed at all times. The threads of the cover should be lightly coated with a lubricating compound to prevent seizing, freezing and corrosion. Spray lubricants are not recommended.

2. Process and Conduit Connections

- In accordance with CSA, FM and local codes all power and communication wiring should be enclosed either in conduit or an approved jacketed cable. Ensure that the electrical connection made at the enclosure of the CLASSIC 800 meets all codes and requirements.
- As described in detail in **Section 2 "Installation Guidelines"**, ensure that the sensor is installed with the proper orientation, to the proper depth and coat threads with a thin layer of thread tape or sealant/lubricant.
- Most Fault conditions and reported "failures" are actually caused by loose, broken or improper
 electrical connections. Ensure that the connections for the sensor, input power and relay output are
 correct and secure.

3. Sensing Elements

The alloy (Stainless Steel, Titanium, Hastelloy, etc.) sensors require no periodic maintenance, but
any deposits or scaling should be removed from the sensor tip as necessary. Use the appropriate
cleaning device or material relative to your process (example: cloth, brush, wire brush, steel wool,
sandpaper, water, detergent, compatible solvents to the sensor material, etc.).

Notes: As described in detail in Section 2 "Installation Guidelines", proper physical installation of the sensor is critical to the operation of the switch/transmitter in terms of sensitivity and response time. Because sediment will collect at the bottom of any vessel, and entrained gases will always collect at the top of any vessel, ensure sensing tip is inserted to a point where it will be constantly and fully exposed to the desired process media. Avoid locations where sediment may accumulate and eventually isolate the sensing tip from the process.

4. Electronics Module

- Proper ESD (electrostatic discharge) procedures should be observed when handling the Electronics Module.
- A remote electronics enclosure system is required when ambient temperatures exceed 65°C (149°F) where the electronics will be mounted. The combination of several factors relative to temperature should be considered when mounting the switch/transmitter:
 - A. High temperatures of the process material, which may over time, become a convective heat source.
 - B. High ambient temperature, which may prevent the surrounding air from cooling or insulating the electronics.
 - C. Radiant heat, if the switch/transmitter is installed in direct sun in a hot climate, or near a heat source.
 - D. Mechanical features of the installation such as pipe insulation, heat sinks, cooling fans, etc.



5. Adjustment & "Calibration"

The CLASSIC 800 is a digital flow, level, interface and temperature switch/transmitter and is built to require minimal maintenance and no calibration beyond proper installation and setup.

- The Kayden Electronics Modules are completely digital and have no moving parts or mechanical trim pots that could be effected by vibration or high unit cycles.
- True temperature compensation is programmed into the firmware and is continuously factored into the operation algorithms of the microprocessor.
- The heater is a separate element from the sensors and is itself directly controlled by the microprocessor.

Therefore, once properly setup, the CLASSIC 800 will be as stable and repeatable as the process in which it is installed. For instance should the application change from Flow to Level or the media change from Hydrocarbon to Water-based or the Flow Rate increase or decrease significantly it may be necessary to check and/or change the setup parameters (Range, Heater Power, Set Point).

6. Using the Kayden RCM Software to Satisfy Preventative Maintenance Requirements

One feature of the Kayden RCM Software* is the Configuration function which automatically stores all setup information and displays it on the Configuration screen within the software whenever the CLASSIC 800 is connected to a PC. This information may be named, stored and emailed as a file to preserve all operation setup parameters.

Therefore, the user may construct "Maintenance Only Setup Parameters" with a slightly different heater setting and set point and save these as a file. This Maintenance Setup File could then be loaded in place of the normal operating setup which will cause the display and relay function to change accordingly. Once this change is observed the normal setup can be reloaded and the preventative maintenance requirement satisfied.

*The Kayden RCM Software is available upon request, at no charge on CD, when a new CLASSIC 800 is purchased. Additional copies may be obtained at no charge from kayden.com or your local Kayden representative. In addition to the software you will need the SCA Serial Communication Adapter, the USB to Serial converter and communication cable. These can be ordered from your local Kayden representative.



Binary Table

The following information refers to Section 3, Point 5, "View or Adjust the Node Address & View the Software Revision".

The **Software Revision** and **Node Address** are displayed on the **Thermal Signal Bar Graph** as two binary bytes. The **Software Revision** is not adjustable but can be useful should telephone support be required. **The Factory Default for the Node Address is 1.**

Decimal to Binary Table: An 'OFF' LED represents 1 while an 'ON' LED represents 0.

*1

0	00000000
1	0000001
2	0000010
3	00000011
4	00000100
5	00000101
6	00000110
7	00000111
8	00001000
9	00001001
10	00001010
11	00001011
12	00001100
13	00001101
14	00001110
15	00001111

16	00010000
17	00010001
18	00010010
19	00010011
20	00010100
21	00010101
22	00010110
23	00010111
24	00011000
25	00011001
26	00011010
27	00011011
28	00011100
29	00011101
30	00011110
31	00011111

2	32	00100000
	33	00100001
	34	00100010
	35	00100011
	36	00100100
	37	00100101
	38	00100110
	39	00100111
	40	00101000
	41	00101001
	42	00101010
	43	00101011
	44	00101100
	45	00101101
	46	00101110
	47	00101111

48	00110000
49	00110001
50	00110010
51	00110011
52	00110100
53	00110101
54	00110110
55	00110111
56	00111000
57	00111001
58	00111010
59	00111011
60	00111100
61	00111101
62	00111110
63	00111111
V	
247	11111111

- *1 Not valid, only used for broadcast commands.
- *2 Kayden RCM Software goes up to address 32 maximum.

7

Troubleshooting

LED Fault Indicator

The **CLASSIC 800** is designed so that any error condition will be immediately detected and displayed as a **FAULT** condition on the Display Panel.

- The diagnostic circuit continuously monitors the operation of the heater, sensor elements, connecting pathways and all the aspects of the Electronics Module.
- To prevent any possibility of an intermittent FAULT the FAULT Code remains until the problem is corrected.
- When in FAULT MODE both relays will de-energize and remain de-energized.
- The 4-20 mA output can be programmed to revert to a value of either 3.0 mA or 21 mA to indicate
 FAULT mode. For more information see Section 2 "Installation Guidelines, View or Adjust the 420 mA Fault Mode Configuration".
- When connected to a PC via Modbus, all FAULT Codes are automatically recorded in the EVENT LOG in the Kayden RCM Software.

In the event a FAULT occurs, the Display Panel will display a FAULT LED. If the unit enters FAULT MODE one of the following will be displayed:

Fault Condition	Cause	Display Panel	Solution
0 (far left) LED & 40 - 65% (6 center) LEDs ON (not flashing)*	Product ID Code Fault Unit ID code does not match firmware.	0 Thermal Signal 100%	A reset should be performed on the unit. Press and hold the RUN button & both Arrow buttons. Once all the LEDs are illuminated, release the buttons and the unit will perform its reset. Note: The unit will need to be reconfigured to required settings.
0 (far left) LED & 1, 2 or 3 of 40 - 75% (center) LEDs ON (not flashing)	Self-Test Error Communication error between the Electronics Module and the sensor. This condition may be caused by an error in the Electronics Module, internal connections or the sensor itself.	0 Thermal Signal 100%	Integral Unit: Disconnect the Electronics Module and test the sensor wiring (see Figure 11). If the wiring resistance values are correct, the FAULT is in the Electronics Module. The Electronics Module must be returned to the factory for repair. If the wiring resistance values are incorrect the entire switch/transmitter must be returned for repair. Remote Unit: Repeat the tests as stated above at the electronics enclosure and the sensor enclosure.
40 - 75% (center) LEDs ON (not flashing)	Probe Error When all 8 of the 40 - 75% LEDs are ON (not flashing), the sensor is not connected or not making proper contact.	0 Thermal Signal 100% OCCOCOCOCOCOCOCOCOCOCOCOCOCOCOCOCOCOCO	Ensure that the sensor connecting cable is connected to the plug on the bottom of the Electronics Module.

Note: *In FAULT Mode the CLASSIC 800 display cycles between:

- a. Fault indication as described above
- **b.** Firmware Revision and Node Address (Unit #).

KAYDEN° | Troubleshooting

How to Reset the Switch/Transmitter to Factory Settings

To reset the CLASSIC to factory default settings press the following 3 buttons, **RUN - LEFT ARROW - RIGHT ARROW** simultaneously until all LED's flash. A successful reset will be indicated by five consecutives flashes of all LEDs followed by a pause and two more flash.

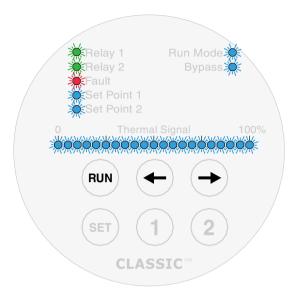


Figure 24 - Factory Reset

Resistance Values for Sensor Wiring				
Wire Colour	Ohms	Wire Colour	Ohms	
Red to Red	50	Black to White	1100	
Blue to Blue	0	Red to any other lead	Infinite	
Black to Black	0	Blue to Black	Infinite	
Blue to Yellow	1100			

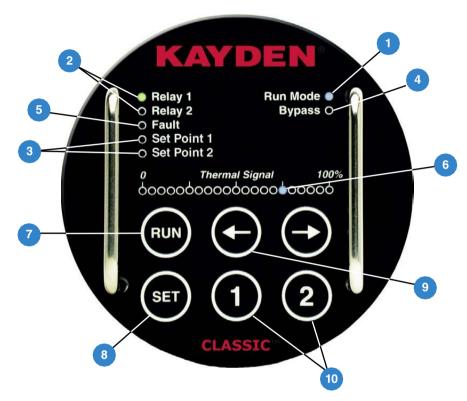


Figure 25 - Display Panel Indicators

- 1. Run Mode: Flashing LED indicates normal operation.
- 2. Relay 1, Relay 2: Solid LED indicates energized relay contact.
- 3. Set Point 1, Set Point 2: Active only during configuration.
- 4. Bypass: Indicates that the Start-up Bypass Timer feature is currently enabled.
- 5. Fault: Indicates that the switch/transmitter is in Fault or Fault Recovery Mode.
- **6.** Thermal Signal Bar Graph: Displays the Thermal Signal (rate of Thermal Dispersion) which represents the process condition (Flow, Level) as determined by the setup.
- **7. RUN:** In RUN Mode pushing the RUN button changes the display from process condition to the Node Address and the Firmware revision. In Setup Mode pushing the RUN button returns the switch/transmitter to RUN Mode.
- 8. SET: Places the unit in Setup Mode.
- 9. Left Arrow: In Setup Mode the Left Arrow reduces (moves the value to the left or towards 0). In RUN Mode pushing the Left Arrow button will change the display from (programmed range) Scaled View to Baseline View.
- 10. 1, 2: Will display Set Point 1 or Set Point 2 accordingly as programmed.

Return of Material

To expedite the return process, call Kayden in Canada at (403) 253-1423. You will be asked for product model and serial numbers, and be provided an RMA (Return Material Authorization) number.

Hazardous Materials

Kayden does not accept the return of Products that are contaminated with any hazardous material. It is solely the Customers responsibility to ensure any and all items returned to Kayden have been thoroughly and completely decontaminated.

Service, Technical Support & Contact Information

Kayden provides full in-house technical support 8 a.m. to 5 p.m. MST (Mountain Standard Time), Monday through Friday (except holidays). Kayden's Distributors also provide technical support.

Web: kayden.com

E-mail: techsupport@kayden.com

Fax: (403) 253-1460 Phone: (403) 253-1423

Mail: Kayden Instruments

3368 - 114th Avenue S.E.

Calgary, Alberta, Canada T2Z 3V6

Your Local Kayden Distributor: To locate your local Kayden Distributor please visit our website and

refer to the 'Distributors' section.

8


Glossary


Active RTD	The active RTD detects and outputs a signal to the Electronics Module which is proportionate to the process media temperature plus heat added by the heater.
Bypass	Indicates the unit is in "Start-up Bypass Mode", which forces both relays to be energized for the duration of the Start-up Bypass Timer.
Fault	Indicates a self-test error (call Technical Support for further information).
Heater	The part of the sensing element that heats the active RTD.
Interface	The point where two different processes meet (as in oil & water).
LED	Light Emitting Diode
Local Enclosure	The enclosure attached to the sensing element. (Normally contains the Electronics Module).
Mounting Base Plate	Connection for CLASSIC 800 series Electronics Module and Terminal Wiring Assembly
Reference RTD	The Reference RTD detects and outputs a signal to the Electronics Module which is proportionate to the process media temperature.
Relay 1	Indicates Relay 1's coil is energized.
Relay 2	Indicates Relay 2's coil is energized.
Remote Enclosure	Enclosure for the Electronics Module. Used when the Electronics Module must be located away from the sensing element (extreme heat, vibration, convenience etc.).
RCM, RCMS	Kayden Remote Control & Monitoring Software provides a graphical computer interface for the CLASSIC and BASIC series.
RTD	Resistance Temperature Detector; a sensor whose resistance varies with temperature changes.
Run Mode	Indicates normal operation when flashing.
Set Point 1	Indicates when the Thermal Signal Bar Graph is displaying the value of Set Point 1.
Set Point 2	Indicates when the Thermal Signal Bar Graph is displaying the value of Set Point 2.
Thermal Offset	Thermal convection
Thermal Signal	The amount of thermal energy dissipated from the Active RTD by the process.





Outline Dimensional Drawings


CLASSIC™ 810, 812 & 828

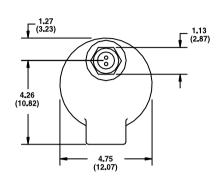


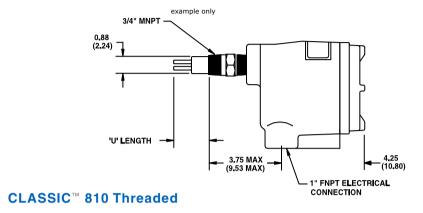

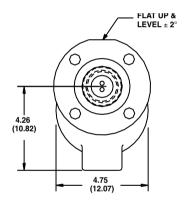

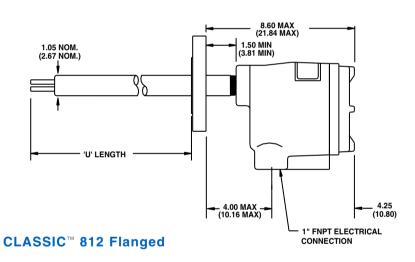


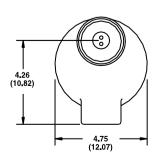


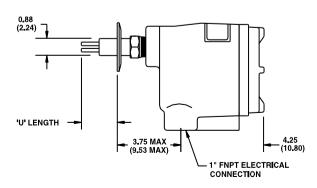


CLASSIC™ 828 Sanitary Flanged


CLASSIC™ 821 & 830

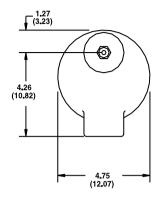

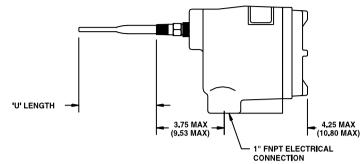



CLASSIC™ 821 Threaded (Single Probe)

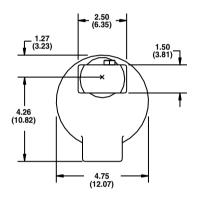

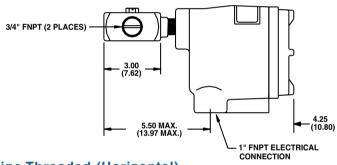


CLASSIC™ 830 In-Line Threaded (Horizontal)

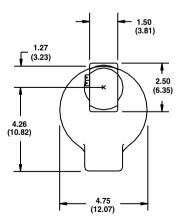


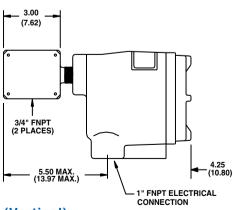


CLASSIC™ 830 In-Line Threaded (Vertical)


CLASSIC™ 832 & 816

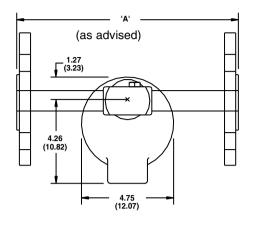

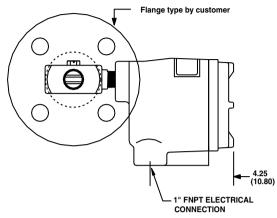


CLASSIC™ 832 In-Line Flanged (Horizontal)

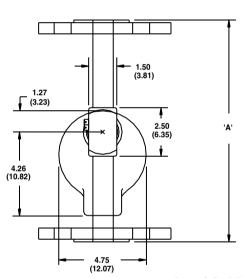

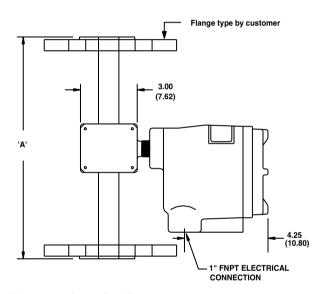


CLASSIC™ 832 In-Line Flanged (Vertical)

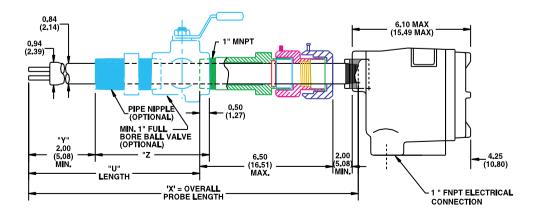


CLASSIC™ 816 Retractable Packing Gland Threaded – 1" MNPT – to 50 psi


CLASSIC™ 816 & 814

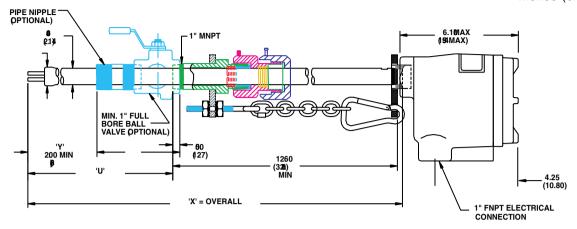

CLASSIC™ 816 Retractable Packing Gland Threaded – 1" MNPT – c/w Security Chain – to 125 psi

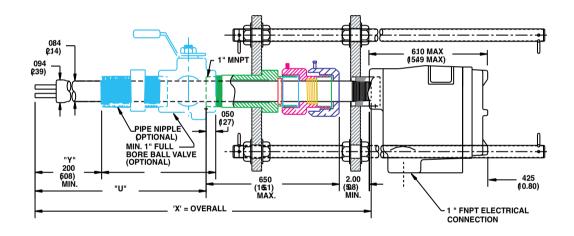

CLASSIC™ 816 Retractable Packing Gland Threaded - 1" MNPT - to 500 psi

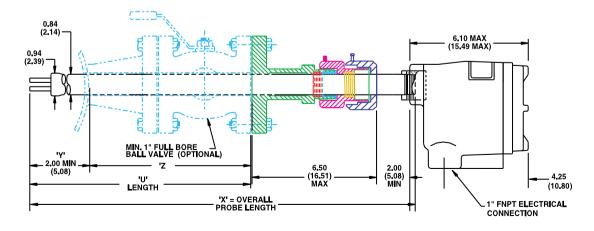

CLASSIC™ 814 Retractable Packing Gland Flanged - to 50 psi

CLASSIC™ 814

0.84
(2.14)
0.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)

10.94
(2.39)


10.94
(2.39)

10.94
(2.39)

10.94
(2.39)
(2.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)
(3.39)


CLASSIC™ 814 Retractable Packing Gland Flanged – to 500 psi

Remote Electronics Enclosure - Flameproof (CSA)

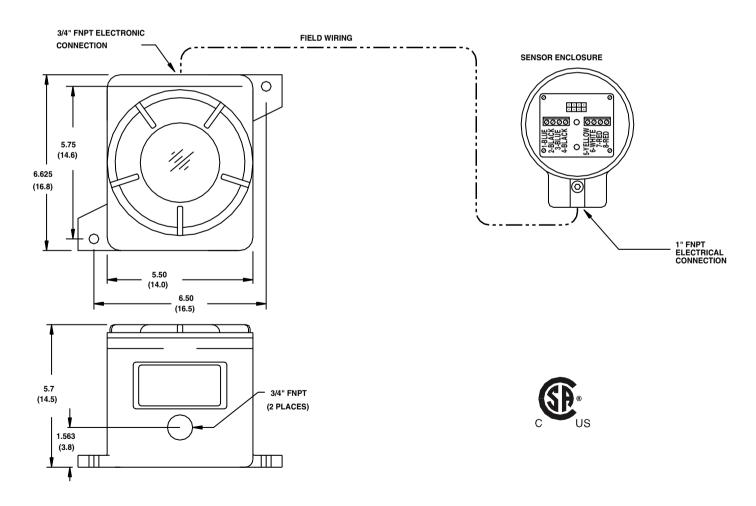


Note: Suitable for one (1) Electronics Module.

Remote Electronics Enclosure - Flameproof (FM)

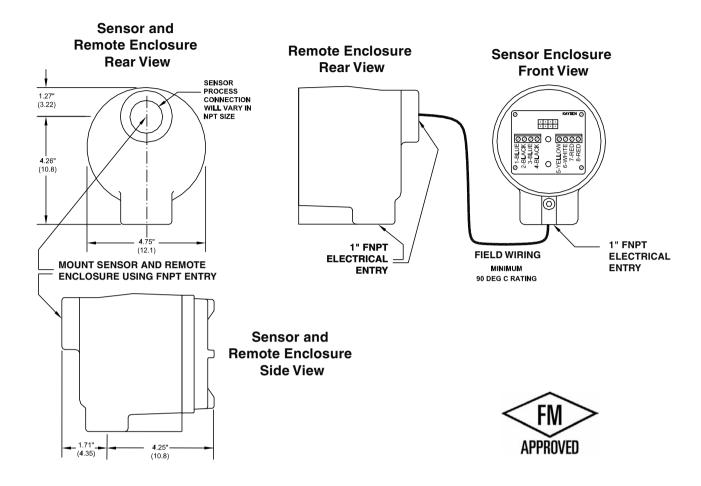


Note: Suitable for one (1) Electronics Module.

CLASSIC™ 825 (2 & 3 Point)

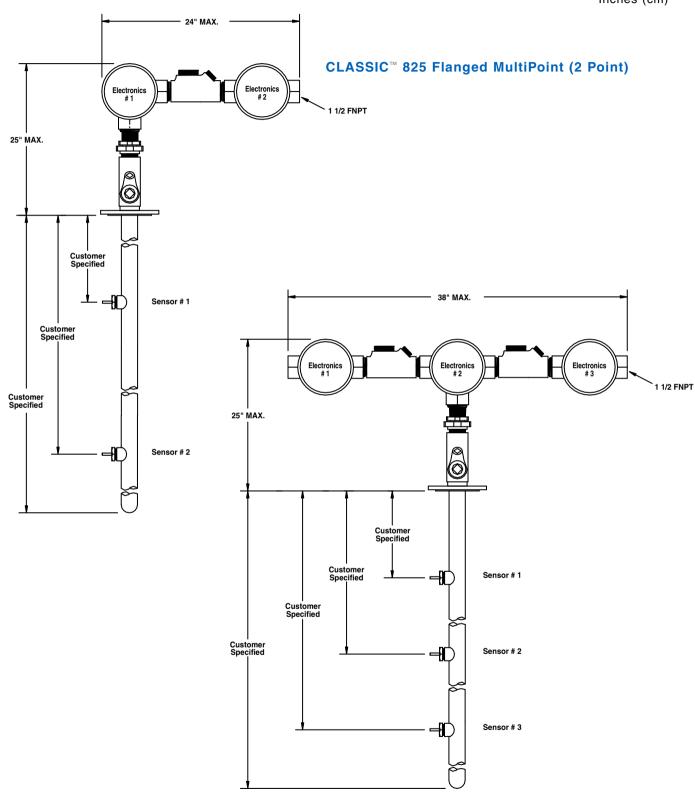

CLASSIC™ 825 Flanged MultiPoint (3 Point)

CLASSIC™ 825 (4 Point)

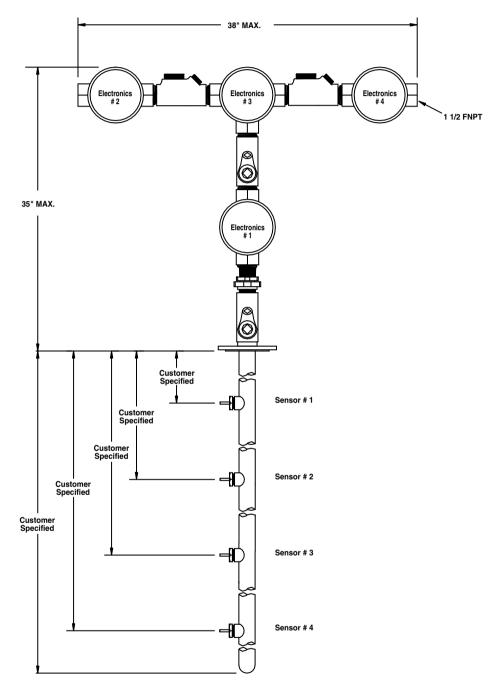

CLASSIC 825 Flanged MultiPoint (4 Point)



Model Number Legends

To configure a Kayden Thermal Switch/Transmitter please refer to kayden.com or your Kayden catalog. We have provided the following legends for configuring products. We have also provided Product Configurators on kayden.com for added ease of use.

Model Number Legends are available for the following CLASSIC 800 Flameproof Models:



CLASSIC 810 Threaded - Insertion Style - 1/2", 3/4", 1", 1 1/4", 1 1/2" & 2" MNPT.



CLASSIC 812 Flanged - Insertion Style - 1" ANSI 150 through 10" ANSI 2500 Flanges.



CLASSIC 814 Flanged Retractable Packing Gland - Insertion Style - 1 1/2" ANSI 150 through 10" ANSI 2500 Flanges.



CLASSIC 816 Threaded Retractable Packing Gland - Insertion Style - 1" MNPT.



CLASSIC 821 Threaded (Single Probe) - Insertion Style - 1/4" MNPT.



CLASSIC 828 Sanitary Flanged - Insertion Style - 1", 1.5", 2", 2.5" & 3" Tri-Clamp® Flanges.



CLASSIC 830 Threaded - InLine Style - 3/4" FNPT.



CLASSIC 832 Flanged - InLine Style - 3/4" ANSI 150 through 10" ANSI 2500 Flanges.

Thermal Dispersion

810	CODE	Sense	or Type	•								
•	R	`R' Ty	oe Sens	or								(5-10)
		CODE	Mate	rial of C	Constru	uction	- Sens	or				
		Α	316L	Stainles	s Steel			0	Inconel	600		The second second
		х	Titani	um Gr. 2	2			м	Alloy 20			
		т	Haste	lloy C-2	76			J	Nickel 2	00		
		G	Monel									Flow, Level, Interface & Temperature
			CODE	Proce	ss Con	nectio	n - MN	IPT				Switch & Transmitter
			С	1/2"								
			D	3/4"								
			E	1"								
			F	1 1/4"	,							
			G	1 1/2"								
			н	2"								
				CODE	Incor	rtion 'I	J' Leng	the				
				0012	1.2"			Juis				
						(3.0 c						
				0020	2"	(5.0 c	-				/ L Ll	
		·		0030	3"	(7.5 (-			ustom 'U	_	
•	•	•	•	0040	4"	(10.1	•					m - 305 cm)
•	•	•	•	0060	6"	(15.2	-					1.0 cm) increments.
•	•	•	•	0090	9"	(23 c	-		(:	L/2" & 3/	4" MNP	Γ - Max. `U' length = 36")
•		•	•	0120	12"	(30 c						
•		•	•	0180	18"	(46 c	-					
•		•	•	IXXXX					4 digits	precede	d by an	'I' (i.e. 3.5" 'U' = I0035) (Use 'M' for cm)
•		•			CODE		t Powe					
•		•	•	•	С				15-230	VAC, 50	to 60 Hz	:
•	•	•	•	•			tronics				T t	
		·		·			-			with Us		
•	•	•	•	•	•	Iwo S		1			Modbus	via RS-485. 4-20 mA current loop.
•		•	•	•	•	•	CODE		al Encl			
•		•	•	•	•	•	1			- Alumin		
		•		•		•	•					nclosure
		•			•	•		В		d Cover -		
		•			•	•		G				lameproof
		•			•	•		•	CODI			tronics Enclosure & Cover
•		•		•		•		•	OA		equired	
•		•		•		•		•	1B			Flameproof
		•				•	•	٠	1G	Glass	Lens Co	over - Flameproof
							٠	•		CODE	Agen	cy Approvals
•		•		•		•		•		1	UL &	CSA
		•		•		•		•		3	UL, C	SA & CRN
										9	FM	
		•		•		•		•		•	CODE	Language
		•		•		•				•	E	English
810	R	Α	D	0020	С		1	G	0A	9	E	
			_		_							

© KAYDEN Instruments. All rights reserved. Contents subject to change without notice. Please refer to kayden.com for current specifications and configurations.

Model Number Legend Doc. #: ML-810-003-000

KAYDEN° | CLASSIC™ 812 Flanged

Thermal Dispersion

812	CODE	Sens	or Type	e												_			\Box
	R	`R' Ty	pe Sens	sor										in in in					
		CODE	Mate	rial of	Const	ruction	- Senso	or											
		A	316L	Stainle	ess Ste	el	0	Incon	el 600										
		x	Titani	um Gr	. 2		М	Alloy	20										
		Т	Haste	lloy C-	276		J	Nicke	l 200										
		G	Monel	l 400								F	low, L	evel,	Interf	ace &	Temp	eratur	е
			CODE	Proc	ess Co	nnectio	n - Fla	nge Typ	e					Swite	ch & T	Γransn	nitter		
			Α	Raise	ed Face														
			В	RTJ -	- Ring 1	ype Join	t												
	•	CODE	ANSI	CODE	ANSI	CODE A		DE ANS		ANSI	CODE	ANSI	CODE	ANSI	CODE	ANSI	CODE	ANSI	
			1"		1 1/2" 2" 3" 4" 5'											8"		10"	
		121	150	131	150 141 150 151 150 161 150 171 150									150	191	150	201	150	
•	٠	122	300	132	300									300	192	300	202	300	
•	٠	123	600	133	600	143 6	00 1:	600	163	600	173	600	183	600	193	600	203	600	
•	•	124	900	134	900		00 15			900	174	900	184	900	194	900	204	900	
•	•	125	1500	135	1500		500 1			1500	175	1500	185	1500	195	1500	205	1500	
•	•	126	2500	136	2500		500 1		0 166	2500	176	2500	186	2500	196	2500	206	2500	
•	•	•	•	•	CODI		e Mate							I					
	•	•	•	•	Α _		Stainle		Mone			lloy 20			elloy E		Tita	nium G	r. 2
	•	•		•	E		n Steel		Nicke			nconel	Т		elloy C				_
				•		CODE		rtion `U om `U' Le				•				•			ts.
						17777	('M' =		enguis.	USE 4 (iigits p	receue	и ву ат	11 1 (1.	e. 3.3	0 –	10033)		
							CODE		t Power										
							C	_	VDC a		230 V	AC 50 1	to 60 t	-l7					
				•		·			ronics		200 17	,							
								Micro	processo	or Conti	rolled v	vith Us	er Inte	rface.					
		•		·		·		Two S	PDT sea	iled rela	y cont	acts. M	1odbus	via RS	-485.	4-20 m	A curr	ent loo _l	p.
				•					CODE	Local	Enclo	sure							
								•	1	Flame	proof -	Alumi	num						
				•		·		•		CODE	Cove	r - For	Loca	l Enclo	sure				
				•				•		В	Blind	Cover	- Flam	eproof					
								•		G	Glass	Lens (Cover -	- Flame	proof				
		•		·		·		٠		•	CODE	Rem	ote El	ectror	nics Er	nclosu	re & C	over	
		•		٠							OA	Not I	Require	ed					
		•		•		•		•		•	1B	Blind	Cover	r - Flan	neproo	of			
		•		٠		•					1G	Glass	s Lens	Cover	- Flam	eproof			
· .				•				•				CODE	Age	ency A	pprov	als			
	٠	٠		•		·		٠		•		1	UL	& CSA					
	•	•	٠	٠		•		•		•		3	UL,	CSA &	CRN				
		•		•		•		•		•		9	FM						
	•	•		•		•		•		•		٠	COD		nguag	je			
			٠	•	•	•			•		•	•	Е	En	glish				
812	R	A	A	131	A	10035	С		1	G	0A	9	E						_

© KAYDEN Instruments. All rights reserved. Contents subject to change without notice. Please refer to kayden.com for current specifications and configurations.

Model Number Legend Doc. #: ML-812-003-000

KAYDEN° | CLASSIC™ 821 Threaded (Single Probe)

Thermal Dispersion

821	CODE	Sens	or Type	•								Time (1) (1)
	R	`R' Ty	oe Sens	or								
		CODE	Mate	rial of C	Constru	ction	- Senso	or				
		A	316L	Stainles	s Steel							
		•	CODE	Proce	ss Con	nectio	n - MN	PT				
		•	A	1/4"								Flow, Level, Interface & Temperature
		•		CODE	Inser	tion `L	J' Leng	ths				Switch & Transmitter
		•	•	0020	2"	(5.0 c	m)					
		•		0030	3"	(7.5 c	m)					
		•		0040	4"	(10.1	cm)					
		•		0060	6"	(15.2	cm)					
		•			CODE	Input	Power	r				
		•			С	12-24	VDC a	nd 115-	230 VA	C, 50 to	60 Hz	
		•		•		Elect	ronics					
		•		•		Micro	process	or Cont	rolled w	ith Use	r Interfa	ace.
		•		•		Two S	SPDT se	aled rel	ay cont	acts. M	odbus v	ria RS-485. 4-20 mA current loop.
		٠	•	•		•	CODE	Local	Enclos	ure		
		٠	•	•		•	1	Flame	proof -	Alumini	ım	
		•		•	•	٠		CODE	Cove	r - For	Local E	nclosure
		•		•	•	٠		В	Blind	Cover -	Flamep	roof
		•		•		•	٠	G	Glass	Lens Co	over - F	ameproof
		•		•		•		•	CODE	Remo	te Elec	tronics Enclosure & Cover
		•		•					0A	Not Re	equired	
		•		•		•		•	1B	Blind	Cover -	Flameproof
		•		•		•		•	1G	Glass	Lens Co	over - Flameproof
		•		•		•		•		CODE	Agen	cy Approvals
				•		•		•		1	UL & (CSA
				•		•		•		9	FM	
				•		•		•		•	CODE	Language
		•		•	٠	•		•		•	E	English
821	R	Α	Α	0020	С		1	G	0A	9	E	

© KAYDEN Instruments. All rights reserved. Contents subject to change without notice. Please refer to kayden.com for current specifications and configurations.

Model Number Legend Doc. #: ML-821-003-000

KAYDEN° | CLASSIC[™] 830 In-Line Threaded

Thermal Dispersion

830	CODE	Sens	or Type	е												
	R	`R' Ty	pe Sens	sor									4	An 21112		
		CODE	Mate	rial of (Constr	uction ·	- Senso	or								
		А3	316L	Stainles	s Steel	c/w Nic	kel Bra	ize								
		•	CODE	Proce	ess Cor	nectio	n - FNI	PT								
		•	D	3/4"												
		•		CODE	Sens	or Asse	mbly I	Body Le	ength							nperature
		•		0035	3.5" ([8.8 cm])						s	witch	& Tran	smitter
		•			CODE	Bleed	Port									
		•		•	A	Stand	ard									
		•		•		CODE	Sens	or Mou	nting O	rientat	ion					
	٠	•		•	٠	Н	Horizo	ontal Pip	oe .							
	٠	•		•	٠	V	Vertic	al Pipe								
	•	•	•	•	•	•	CODE	Injec	tion Tu	bes (3	/4" MN	IPT x 1	/4" FN	PT)		
	•	•	•	•	•	•	0	Not R	equired							
	•	•	•	•	•	•	1	Type :	1; .180"	' Bore;	316L St	ainless	Steel			
		•		•	•		2	Type 2		' Bore;			Steel			
	•	•		•	•		•	CODE	Moun	ting Br	acket	Kit				
	•	•		•	•		•	Α	Not Re	equired						
		•	•					В	90º Ar	ngle Bra	icket wi	th hard	ware fo	r wall/s	tand mo	ounting
	•	•		•	•	•	•	•	CODE	Powe	r					
		•	•					•	С	12-24	VDC a	nd 115-	230 VA	C, 50 to	60 Hz	
		•		•		•		•	•	Electi	ronics					
		•		•		•		•	•	Microp	rocesso	r Contro	lled with	User Ir	nterface.	Two SPDT sealed
•	٠	•		•	٠	•	•	•	•	relay	contact	s. Modb	us via F	RS-485.	4-20 m	nA current loop.
•	٠	•		•	٠	•	•	•	•	•	CODE	Local	Enclos	ure		
	•	•	•	•	•	•	٠	•		•	1	Flame	proof -	Alumin	um	
		•					•	•		•	•	CODE	Cove			lectronics /
		•					•	•		•	•			Sens	sor End	losure
		•		•		•		•	•	•	•	В	Blind	Cover -	Flamep	proof
		•	•					•	•	•	•	G	Glass	Lens Co	over - F	lameproof
		•	•					•		•	٠	•	CODE		te Elec	ctronics Cover
		•		•		•	•	•	•	•	•	•	0.5			
	•	•	•	•	•	•	•	•					0A		equired	Flamonya-f
	•	•	•	•	•	•	•	•	•	•	•	•	1B			Flameproof
	•	•	•	•	•	•	•	•	•	•	•	•	1G			ver - Flameproof
	•	•	•	•	•	•	•	•	•	•	•	•	•	CODE		cy Approvals
		•	•					•	•	•	٠	•	•	5		CSA Pending
	•	•	•	•	•	•	•	•		•	•	•		9	FM	
		•	•	•		•	•	•	•	•	•	•	•	•	CODE	Language
		•	•	•		•	•	•	•	•	•	•	•	•	E	English
830	R	А3	D	0035	Α	Н	0	Α	С		1	В	0A	9	E	

© KAYDEN Instruments. All rights reserved. Contents subject to change without notice. Please refer to kayden.com for current specifications and configurations.

Model Number Legend Doc. #: ML-830-003-000

KAYDEN° | CLASSIC[™] 832 In-Line Flanged

Thermal Dispersion

832	CODE	Sens	sor Op	eratin	g Tem	peratu	re Ra	nge									40	h.		
	R		ype Sei													E me				
		CODE			f Cons	tructio	n - Se	ensor							Y		The second	-		
		А3			ess Ste										- 4		19	3		
			CODE		ess Co				Type								0			
			A		ed Face			lange	.,,,						Flow	, Leve	l & Te	mpera	ature	
١.			В		Ring 7		int									witch		•		
CODE	ANSI	CODE	ANSI		ANSI			CODE	ANSI	CODE	ANSI	CODE	ANSI	CODE	ANSI	CODE	ANSI	CODE	ANSI	
CODE	3/4"	CODE	1"		1 1/2"	CODE	2"	CODE	3"	CODE	4"	CODE	5"	CODE	6"	CODE	8"	CODE	10"	
111	150	121	150	131	150	141	150	151	150	161	150	171	150	181	150	191	150	201	150	
112	300	122	300	132	300	142	300	152	300	162	300	172	300	182	300	192	300	202	300	
113	600	123	600	133	600	143	600	153	600	163	600	173	600	183	600	193	600	202	600	
	900	123	900	134	900	143	900	154	900	164	900	174	900	184	900	193	900	203	900	
114	1500	125	1500	135		144	1500	155	1500							_		204		
115					1500					165	1500	175	1500	185 186	1500	195	1500		1500	
116	2500	126	2500	136	2500		146 2500 156 2500 166 2500 176 2500 Flange Material								2500	196	2500	206	2500	
l .					CODE															
					Α .	316L Stainless Steel									o Elon	ao Fa-	۱۵۱			
		•		•	•	CODE Sensor Assembly Body Length (Flange												016	0 ()14/	
	•	•		•	•	Custom Body Lengths: Available in 1/2" (17 7" - 72" (relative to flange size/rating)									icreme	nts. eg	. 16.0"	= 016	0 (1141: :	= cm)
	•	•	•	•	•						ge size	e/rating	3)							
•	•	•	•	•	•	•	CODE Bleed Port													
•		•	•	•		A 1/4" Threaded - Standard														
		•	٠	•	•	•	CODE Sensor Orientation													
		•		•		•		Н	Horiz	ontal										
•		•		•		•		V	Verti	cal										
•		•		•		•		•	CODE	Pipe	Sched	dule								
•		•		•		•		•	0	Sche	dule 40	0 (Star	idard)							
		•	٠	٠	•	•		•	1	Sche	dule 80	0								
		•	٠	٠	•	•		•	٠	CODE	Inpu	it Pow	er							
		•		•		•		•		С	12-2	4 VDC	and 11	15-230	VAC, 5	50 to 6	0 Hz			
		•		•		٠		•		•	Elect	tronics	5							
		•		•		•		•		•	Micro	proces	sor Co	ntrolled	d with	User Ir	terface	e. Two	SPDT s	ealed
		•		•		•		•		•	relay	conta	cts. Mo	dbus v	ia RS-	485. 4 [.]	-20 mA	curre	nt loop	
•		•		•		•		•		•		CODE	Loca	l Encl	osure					
•		•		•		•		•		•		1	Flam	eproof	- Alun	ninum				
		•		•		•				•			CODE	Cove		r Loca			· /	
		•		•		٠		•		•		٠			Se	nsor E	nclos	ıre		
		•		•		•		•		•		•	В	Blind	Cover	- Flam	eproof	•		
		•		•		•		•		•		•	G	Glass	Lens	Cover	- Flame	eproof		
				•		•				•		•		CODE	Rem	ote El	ectron	ics		
		•		•				•		•						osure				
•														0A	Not F	Require	ed			
		•		•		•		Blind Cover - Flameproof												
		•		•				1G Glass Lens Cover - Flameproof												
							CODE Agency Approvals													
				•		•				•					5		CSA P	-		
															9	FM	• •	9		
																CODE	Land	juage		
l .							English													
													·				Liigii	311		
832	R	А3	Α	131	Α	10160	Α	Н	0	С		1	G	0A	9	E				

© KAYDEN Instruments. All rights reserved. Contents subject to change without notice. Please refer to kayden.com for current specifications and configurations.

Model Number Legend Doc. #: ML-832-003-000

KAYDEN° | CLASSIC™ 816 Threaded Retractable Packing Gland

816	CODE	Senso	or Type	•									
	R	`R' Typ	oe Sens	or									Emily St.
		CODE	Mate	rial of	Constru	ıction -	Senso	r*					
		A	316L	Stainle	ss Steel								
		х	Titani	um Gr.	2								
		Т	Haste	lloy C-2	276							FI	ow, Level, Interface & Temperature
		G	Monel	400									Switch & Transmitter
		0	Incon	el 600									
		М	Alloy	20									
		J	Nickel	200									
		•	CODE	Proc	ess Con	nection	ı - MN	PT					
			E	1"									
			•	CODE	Retra	ction A	ssemb	ly					
			•	т	Low P	ressure	; 316L	SS (MW	'P 50 ps	si)			
				J	Low P	ressure	c/w Se	curity C	Chain; 3	B16L SS	(MWP	125 psi)
			•	x	Mediu	m Press	sure; 3	16L SS	(MWP 5	00 psi)			
			•	•	CODE	Inser	tion `U	' Lengt	: hs 2" -	120" (5	5.0 cm -	305 cr	n) in 1/2" (1.0 cm) increments.
			•		IXXXX	Custor	n 'U' Le	engths:	Use 4	digits pr	eceded	by an '	I' (i.e. 3.5" 'U' = I0035)
		•		•		(Use `	M' for c	m)					
		•	•	•		CODE	Input	Powe	r				
		•	•	•		С	12-24	VDC a	nd 115-	230 VA	C, 50 to	60 Hz	
		•	•	•			Elect	ronics					
		•	•	•		•	Micro	orocesso	or Conti	rolled w	ith User	Interf	ace.
	•	•		•	٠	•	Two S	PDT sea	aled rela	ay conta	acts. M	odbus v	via RS-485. 4-20 mA current loop.
		•		•		•		CODE	Local	Enclos	ure		
		•	•	•		•	•	1	Flame	proof -	Alumin	um	
		•		•		•		•	CODE	Cove	r - For	Local E	Enclosure
	•	•	•	•		•	•	•	В	Blind	Cover -	Flame	proof
	•	•	•	•		•	•	•	G	Glass	Lens Co	over - F	lameproof
		•	•	•		•	٠	•		CODE	Remo	te Ele	ctronics Enclosure & Cover
		•	٠	•		•	٠			OA	Not R	equired	
		•		•		•		•		1B	Blind	Cover -	Flameproof
	•	•	•	•		•	· · · · 1G Glass						over - Flameproof
	•	•		•	•	-		•	٠	•	CODE	Agen	cy Approvals
	•	•		٠	٠	•		•	•	٠	1	UL &	CSA
	•	•		•	•	-		•	٠	•	9	FM	
	•	•		•	•	-		•	٠	•	٠	CODE	Language
·	٠	٠		•				•		•		E	English
816	R	A	E	Т	0020	С		1	G	0A	9	E	

[©] KAYDEN Instruments. All rights reserved. Contents subject to change without notice. Please refer to kayden.com for current specifications and configurations.

Model Number Legend Doc. #: ML-816-003-000

^{*}Sensor only. The Packing Gland Assembly is available as standard in 316L SS. For exotic alloys contact Kayden.

KAYDEN° | CLASSIC™ 814 Flanged Retractable Packing Gland

814	CODE	Sens	or Type	е																
	R	`R' Ty	pe Sens	sor										-	aum	_		I	\-	
	٠	CODE	Mate	rial of	Const	ructio	n - Sen	sor*	k					1		BE			-	
		Α	316L	Stainle	ess Ste	el	0	I	Inconel	600								11		
		X	Titani	um Gr	: 2		М	P	Alloy 20)										
		Т	Haste	lloy C-	-276		J	1	Nickel 2	200										
	•	G	Mone	1 400									F	low, L	evel,				erature	е
	•	•	CODE				tion - Fl	ang	е Туре	•					Swite	cn & I	ransm	nitter		
	•	•	Α		ed Face															
	•	•	В		- Ring															
	•	•				CODE		CODE	ANSI	CODE	ANSI	CODE	ANSI	CODE	ANSI	CODE	ANSI	CODE	ANSI	
	•	•			1 1/2"		2"		3"		4"		5"	101	6"		8"	201	10"	1
	•	•		131	150	141		151	150	161	150	171	150	181	150	191	150	201	150	
		•		132 133	300 600	142 143		152 153	300 600	162 163	300 600	172 173	300 600	182 183	300 600	192 193	300 600	202	300 600	
					900	144														
				134 135	1500	144		154 155	900 1500	164 165	900	174 175	900	184 185	900	194 195	900	204	900 1500	
.				136	2500	145		156	2500	166	2500	175	2500	185	2500	195	2500	205	2500	
.					CODI		nge Ma			100	2300	170	2300	100	2300	190	2300	200	2300	
					A	_	L Stainles			Monel	400	M A	lloy 20	R	Haste	elloy B	Х	Tita	nium Gi	r. 2
					E		rbon Ste		J	Nickel			nconel	T		elloy C				2
		•				COL			tion As				reorier	•	Husto	2110 7 0	2,0			
						Т			ssure;			P 50 p	si)							
		•				J					-	-	316L S	S (MW	P 125 ı	osi)				
						X				-	•	,	500 psi	•		,				
							COD	E I	nserti	on 'U'	Lenath	ıs 2" -	120" (5	.0 cm	- 305 c	m) in 1	/2" (1.	0 cm) ii	ncremei	nts
													digits p							
									(Use `M		_				•	•			•	
		٠		•				С	ODE	Input	Power	•								
									С	12-24	VDC ar	nd 115	-230 V	AC, 50	to 60	Hz				
		٠		•		•			•	Electr	onics									
										Microp	rocesso	or Cont	rolled	with Us	ser Inte	erface.	Two S	PDT se	aled	
	•	•		•	•	•				relay c	ontacts	s. Mod	bus via	RS-48	35. 4-2	0 mA c	current	loop.		
	•	•		•					•		CODE	Loca	l Enclo	sure						
		•		•	•	•			•		1	Flame	eproof -							
		·		•	٠	٠	•		·		.	CODE	Cove		r Loca ensor E			s /		
:												В	Bline		r - Flan					
.												G G			c - Flan Cover	•				
																	<u>'</u>			
'		•		•	•	•	•		•	•	•		CODE		note E losure					
:													OA		Requir					
		•						1B Blind Cov									mepro	of		
		•											1G		ss Lens				f	
														COD			Approv			
														1		& CSA		· a i 3		
														9	FM		•			
															COE		angua	ae .		
		ē		•					·		·				E		nglish			
	_		_									_		_			J			_
814	R	Α	Α	131	Α	Т	1003	35	С		1	G	0A	9	E					

© KAYDEN Instruments. All rights reserved. Contents subject to change without notice. Please refer to kayden.com for current specifications and configurations.

Model Number Legend Doc. #: ML-814-003-000

^{*}Sensor only. The Packing Gland Assembly is available as standard in 316L SS. For exotic alloys contact Kayden.

KAYDEN° | CLASSIC™ 828 Sanitary Flanged

Thermal Dispersion

828	CODE	Senso	or Ope	rating T	emper	ature	Range					1
•	R	`R' Typ	oe Sens	sor								22-110
		CODE	Mate	rial of C	onstru	ction -	- Senso	r				
		A6	304/3	316L Sta	inless S	teel - S	Sanitary	(3A Cc	mpliant	t)		
			CODE	Proce	ss Con	nectio	n - Tri-	Clamp	ß			
		•	E	1"								Flow, Level, Interface & Temperature Switch & Transmitter
		•	G	1.5"								
		•	н	2"								
•		·	J	2.5"								
•		·	K	3"								
		·	L	3.5"								
		•		CODE	Inser	tion 'U	l' Leng	ths				
		•		0020	2"	(5.0 c	-		Cus	tom 'U'	Length	s:
		•	•	0030	3"	(7.5 c	m)				_	m - 305 cm)
		•		0040	4"	(10.1	•		Ava	ilable in	1/2" (1.0 cm) increments.
•		•		0060	6"	(15.2	,					
•		•		IXXXX					digits pr	eceded	by an `	I' (i.e. 3.5" 'U' = I0035) (Use 'M' for cm)
		•		•			Power					
		•			C		VDC a	nd 115-	230 VA	C, 50 to	60 Hz	
		•	•	•			ronics	C		عدا طفن	. T	
							process					ace. ia RS-485. 4-20 mA current loop.
		·		•			CODE		Enclos		Jubus v	a KS 403. 4 20 HIA current loop.
		•					1		proof -		um	
								CODE				inclosure
								В		Cover -		
								G			-	lameproof
		•							CODE	Remo	te Ele	tronics Enclosure & Cover
									0A	Not R	equired	
									1B	Blind	Cover -	Flameproof
		•						•	1G	Glass	Lens C	over - Flameproof
						•				CODE	Agen	cy Approvals
						•				1	UL &	CSA
		٠		·				•		9	FM	
		•		•		•		•			CODE	Language
·		•	٠	٠	٠	•			٠	•	E	English
828	R	A6	E	0020	С		1	G	0A	9	E	

© KAYDEN Instruments. All rights reserved. Contents subject to change without notice. Please refer to kayden.com for current specifications and configurations.

Model Number Legend Doc. #: ML-828-003-000

KAYDEN° | CLASSIC™ 825 MultiPoint Flanged

Thermal Dispersion

825	CODE	Senso	or Oper	ating 1	Гетре	rature F	Range							
	R	`R' Typ	e Sens	or										
		CODE	Mate	ial of 0	Constru	uction -	Senso	r						
		A	316L :	Stainles	s Steel									<u> </u>
		X	Titaniı	um Gr. 2	2								1	
		Т	Hastel	loy C-2	76								-	MultiPoint Level & Temperature
		•	CODE	Proce	ss Con	nection	ı - Flar	nge						Switch & Transmitter
·			Α	Raised	d Face									1
·			В	RTJ -	Ring Ty	pe Joint								
		•		CODE	ANSI	CODE	ANSI	CODE	ANSI	CODE	ANSI	CODE	ANSI	
		•			4"		5"		6"		8"		10"	
·				161	150	171	150	181	150	191	150	201	150	
·				162	300	172	300	182	300	192	300	202	300	
· .		•		163	600	173	600	183	600	193	203	600	Note: Minimum 4" opening	
		•		164	900	174	900	184	900	194	900	204	900	required for all points.
•		•		165	1500	175	1500	185	1500	195	1500	205	1500	
·				166	2500	176	2500	186	2500	196	2500	206	2500	
·					CODE	Flang	e Mate	erial						
		•		•	Α	316L S	tainless	St. G	Mone	I 400	M A	lloy 20	R	Hastelloy B X Titanium Gr. 2
·					E	Carbo	n Steel	J	Nicke	el	O Ir	nconel	Т	Hastelloy C-276
						CODE	Probe	e Lengt	h - Fac	e of Fl	ange t	End o	f Prob	oe .
						IXXXX	Use 4	digits p	receded	d by an	`I' (i.e.	48 inch	probe	e length = I0480)
·							Availa	ble in 1	/2" (1.0	Ocm) in	crement	ts.		
		•		•		•	CODE	Numb	er of S	Sensing	Point	s		
·							A	One p	oint					
		•		•			В	Two p	oints					
		•		•		•	С	Three	points					
		•		•		•	D	Four p	oints					
		•		•		•		CODE	Input	t Powe	r			
		•		•		•		С	12-24	VDC a	nd 115-	230 VA	C, 50 t	to 60 Hz
		•		•		•		•	Elect	ronics				
		•		•		•		•	Micro	process	or Cont	rolled w	ith Use	er Interface. Two SPDT relay
		•		•		•		•	sealed	contac	cts. Mo	dbus vi	a RS-4	85. 4-20 mA current loop.
		•		•		•		•	•	CODE	Local	Enclos	sure	
		•					٠			1	Flame	proof -	Alumii	num
		•		•		•		•	•	•	CODE	Elect	ronics	Enclosure Covers
		•				•		•		•	В	Blind	Cover	- Flameproof
		•		•				•				CODE	Age	ncy Approvals
		•		•		•		•	•	•			CSA	Field Certification Available
		•		•		•		•	•	•			Requ	iest required Approval
		•					٠			٠				eproof (hazardous) locations
'		·		•		•		•	٠	•		•	CODE	Language
L .			•	•		•	•	•					E	English
825	R	Α	Α	161	Α	10480	С	С		1	В		E	

© KAYDEN Instruments. All rights reserved. Contents subject to change without notice. Please refer to kayden.com for current specifications and configurations.

Model Number Legend Doc. #: ML-825-003-000 C

kayden.com Web Site

kayden.com is a comprehensive resource for most customer requirements.

The site offers a means to:

- Configure Products, Spare Parts and Accessories
- Compare our products to determine those best suited to your application
- View and print Product Manuals
- · View and print Outline Dimensional Drawings, Wiring Diagrams & Parts Lists
- View and print Quick Setup Guides
- View and print Product Specifications and Brochures
- View our Support Section for Troubleshooting Assistance
- View our Corporate Policies (satisfaction guarantee, returns, repairs, etc.)
- View a brief list of Kayden Customers
- Download Kayden RCM Software
- View and print Approval Certificates

KAYDEN° | CLASSIC™ 800

CLASSIC 800 Product Manual

Notes	

KAYDEN° | CLASSIC™ 800

CLASSIC 800 Product Manual

Notes	

KAYDEN Contact Information

Contact Us

Telephone Fax

E-Mail Web sales@kayden.com kayden.com

Hours Monday - Friday 8:00 a.m. - 5:00 p.m. MST

Mailing Address 3368 - 114th Avenue S.E., Calgary, Alberta, Canada T2Z 3V6

Contact a Local Distributor

Distributors

Visit kayden.com to find a local Distributor near you. Kayden Distributors provide local inventory, technical support and service.

Kayden 60-Day 100% Satisfaction Guarantee

Standard Products

Standard Products are eligible for the 60-Day 100% Satisfaction Guarantee. If you purchased new Standard Products from Kayden or an Authorized Kayden Distributor, you may return them to the place of purchase up to 60 days from the date of invoice for a refund or credit of the product purchase price provided the quantity of Products does not exceed twenty-five units (nominal restocking fee apply to only those quantities exceeding twenty-five units).

Custom Products

Custom Products are not eligible for this guarantee as they are manufactured specifically to the customers' individual and unique requirements. Ship returns prepaid. Please note the refund or credit will not include any charges for special documentation, special equipment, special service, special approvals, drawings, certificates, equipment tags, set points, flow curves, x-rays, dye penetration tests, opened software, shipping or insurance shown on your invoice. View the Return Policy in detail at kayden.com.

Kayden offers the following:

- 60 calendar days from the date of invoice.
- Up to twenty-five (25) Standard Products of any type or combination per order. Should the customer, for any reason, be unsatisfied with any or all of the Products, he/she may return any or all of them for a full refund.

Visit kayden.com to view the Kayden 60-Day 100% Satisfaction Guarantee in detail.

Warranty

Three (3) Years from shipment date from factory (see Terms & Conditions on kayden.com for details).

Ordering Information

5 Ways to Place an Order:

Your Local Distributor

Visit www.kayden.com to find a local Distributor near you.

Telephone Kayden	Fax Kayden		Email Kayden
1 (403) 253-1423	1 (403) 253-1460	North America	sales@kayden.com

001 (403) 253-1423 001 (403) 253-1460 International

Mail Kayden

3368 - 114th Avenue S.E., Calgary, Alberta, Canada T2Z 3V6

KAYDEN®

This document and other information from Kayden/ Telematic and its authorized distributors, provides product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current catalog located online at kayden.com.

Copyright 1994 - 2009 Kayden Instruments (a line of products manufactured by Telematic Controls Inc.). All rights reserved.

® TM, KAYDEN, CLASSIC, BASIC, CMP, RCM, RCMS, Remote Control & Monitoring Software, SCA, Helping the World Switch, and Flow Switch Innovation are trademarks, the property of Kayden Instruments/Telematic Controls Inc.

Tri-Clamp® is a registered trademark of Alfa Laval Inc.
Estane® is a registered trademark of Lubrizol Corporation
Hastelloy® is a registered trademark of Haynes International, Inc.
Inconel®, Incoloy® Alloy 20, Monel® are registered trademarks of Special Metals Corporation

Kayden products are protected by Canadian and International patents.

This catalog is for informational purposes only.

The information contained herein is believed to be reliable, but no representations, guarantees or warranties of any kind are made as to its accuracy, suitability for particular applications or the results to be obtained therefrom. The information is based on laboratory work with small-scale equipment and does not necessarily indicate end product performance. Because of the variations in methods, conditions and equipment used commercially in applying these products, no warranties or guarantees are made as to the suitability of the products for the application(s) disclosed. Full-scale testing and end product performance are the responsibility of the user. Kayden Instruments/Telematic Controls Inc. shall not be liable for and the customer assumes all risk and liability of any use of handling of any product beyond Kayden Instruments/Telematic Controls Inc. direct control. THE SELLER MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Nothing contained herein is to be considered as permission, recommendation, nor as an inducement to practice any patented invention without permission of the patent owner.





For more information about the CLASSIC 800 Series or any of Kayden's other products, or to learn more about Kayden, please visit kayden.com

Doc.#: IM-800-003-002 Effective: February 2010 Supercedes: November 2009